
UltraPort

Serial Adaptors

User's Guide

Part #5500152-26

July 2015

Copyright Statement

This document must not be reproduced in any way whatsoever, either printed or electronically, without the consent of:

Perle Systems Limited,
60 Renfrew Drive
Markham, ON
Canada
L3R 0E1

Perle reserves the right to make changes without further notice, to any products to improve reliability, function, or design.
Perle, the Perle logo, and IOLAN are trademarks of Perle Systems Limited.

Microsoft, Windows 8, Windows Server 2008, Windows Server 2012, Windows XP, Windows 98, Windows NT, Windows 2000, Windows Server 2003, Windows Server 2008, Windows Server 2008 R2, Windows Vista, Windows XP, Windows 7, Windows 8, Windows 8.1, Windows Server 2012, Windows 10 and Internet Explorer are trademarks of Microsoft Corporation.

Solaris is a registered trademark of Sun Microsystems, Inc. in the USA and other countries.

Perle Systems Limited, 2015.

FCC Note The products described in this manual have been found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions in this Guide, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his/her own expense.

EN 55022: 1998, Class A, Note

WARNING This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Caution: The products described in this manual are approved for commercial use only.





Table of Contents

Chapter 1 Introduction to UltraPort	8
About the UltraPort, UltraPort SI, and UltraPort Express Serial Adaptor cards	8
Connection accessories.....	9
Chapter 2 Installing/Removing Host Cards And Cable Accessories	10
Introduction	10
Installing UltraPort, UltraPort SI, and UltraPort Express cards	11
Installing cables and connector boxes	12
Installing cables on UltraPort1/2, UltraPort1/2 SI and UltraPort1/2 Express cards.....	13
Installing converter cables on UltraPort4 (RJ-45) and UltraPort4 Express (RJ45) cards.....	13
Installing converter cables on UltraPort8i cards.....	13
Installing fan-out cables and connector boxes on UltraPort4-LP, UltraPort4 SI-LP, UltraPort4 Express HD, UltraPort8, UltraPort8 SI-LP and UltraPort8 Express HD cards	14
Installing fan-out cables and connector boxes on UltraPort16 and UltraPort16 SI cards.....	15
Removing host cards	16
Chapter 3 Installing On Microsoft Windows	17
Installing Drivers.....	17
General Information	17

Downloading the driver from the Perle web site	17
General setup procedure	18
Installing device drivers and utilities onto your system.....	19
Adding additional cards and/or updating drivers	20
Configuring the Serial ports	21
Removing Drivers	26
Windows 95 and Windows 98	27
Introduction.....	27
General Installation Procedure	27
Installing Device Drivers And Utilities.....	28
Configuring your serial ports on Win 95/98	31
Removing Drivers and Utilities From Your System	37
Windows NT	39
Chapter 4 Installing On Linux	40
Installing Drivers	40
Introduction.....	40
General installation procedure for Linux	41
Downloading the driver from the Perle web site	41
Installing Drivers onto your system	41
Uninstall Patch Versions	42
Install from Source RPM	42
Install from Tar File	42
Creating devices for the attached ports.....	43
UltraPort 8i RTS/DTR option.....	43
Setultrap Interface Protocol Configuration Utility	
(UltraPort SI only)	44
Command Line Interface.....	44
Examples	46
Uninstalling the UltraPort Driver for Linux	46
Uninstalling an RPM Installation	46
Uninstalling a Tar File Installation	46

Chapter 5 Installing On Solaris	47
Installing The Driver Package	47
Introduction.....	47
Downloading the driver from the Perle web site	47
General installation procedure for Solaris.....	48
Installing drivers and utilities.....	49
Serial port naming conventions.....	49
Configuring serial ports using the Admintool.....	50
Using The Solaris Management Console For Solaris 10	54
Adding Logins to Serial Ports.....	54
Removing Terminals	56
Using SMF Services For Solaris 11	57
Adding Logins to Serial Ports.....	57
Removing Terminals	57
Setultrap Interface Protocol Configuration Utility	
(UltraPort SI only)	58
Command Line Interface.....	58
Examples	60
Removing drivers and utilities from your system.....	60
Chapter 6 Installing On SCO	61
Introduction	61
Downloading the driver from the Perle web site	61
Installing under SCO OpenServer5 and OpenServer6.	62
General installation procedure for SCO OpenServer.....	62
Installing device drivers and utilities.....	63
Serial port naming conventions.....	67
Configuring serial ports.....	68
Starting the Port Configuration Utility	68
Menu map	69
Selecting Ports.....	70
Selecting a getty definition	70
Selecting terminal type.....	71
Enabling and disabling flow control.....	71
Setting up a port login	71
Exiting the Port Configuration tool.....	72
Setultrap Interface Protocol Configuration Utility	
(UltraPort SI only)	73

Command Line Interface.....	73
Examples	75
Removing drivers and utilities from your system.....	76
Installing under SCO UnixWare.....	77
General installation procedure for SCO UnixWare	77
Installing drivers and utilities.....	78
Serial port naming conventions.....	79
Configuring serial ports.....	80
Setultrap Interface Protocol Configuration Utility (UltraPort SI only)	84
Command Line Interface.....	84
Examples	86
Removing drivers and utilities from your system.....	86
Chapter 7 Cabling Information.....	87
Introduction.....	87
Definitions of Signals and Direction	88
Host card back panel connectors and pinouts	89
DB9 back panel connectors and pinout.....	90
RJ45 back panel connectors and pinout.....	91
RJ12 back panel connectors and pinout.....	92
VHDCI-68 Ultra SCSI back panel connectors and pinout	93
Connector box and cable guide	100
Connector box and cable pinouts	101
RJ45 10-pin to DB25 converter	102
RJ45 10-pin to DB9 converter	103
RJ45 10-pin to RJ45 SPEED converter.....	104
RJ45 10-pin to RJ45 Digi converter	105
RJ45 10-pin to RJ45 Digi ALTPIN converter	106
RJ45 connector box	107
DB25 connector box.....	108
DB9 connector box.....	109
DB25 Fan-out cable	110

DB9 Fan-out cable	111
Appendix A: Transparent Printing.....	112
Introduction	112
What is transparent printing?	113
Problems with printer output	114
The printcap.spd configuration file	114
The print.spd configuration file.....	115
Appendix B Operations for EIA-422/EIA-485	116
Introduction	116
The EIA-422 Standard.....	117
The EIA-485 Standard.....	118
Many Masters / Many Slaves	119
One Master / Many Slaves	120
Fail Safe Circuitry.....	121
Cabling Distances.....	122
Appendix C Troubleshooting.....	123
Introduction.....	123
SCO OpenServer 5.....	124
Example of normal SPEED driver boot messages	124
Additional card warning messages	125
SCO OpenServer 5 error messages.....	126
SCO UnixWare/SCO OpenServer 6	127
Additional card warning messages	128
SCO UnixWare error messages	129
Microsoft Windows	130
General troubleshooting under Windows	130
Windows error messages	130
Windows NT	131




Introduction to UltraPort

About the UltraPort, UltraPort SI, and UltraPort Express Serial Adaptor cards

The UltraPort Serial Adaptor cards are multi-port cards which provide extra serial ports for EIA-232, EIA-422 and EIA-485 peripherals. These cards plug into your PC servers and provide 1, 2, 4, 8 or 16 high speed ports suitable for remote access, data collection, point of sale or any other EIA-232, EIA-422, or EIA-485 applications. The baud rates supported on these cards are up to 921600 Kbps for EIA-232 interface and up to 3.686 Mbps for EIA-422 and EIA-485 interfaces. The lowest baud rate supported is 50 bps unless otherwise stated.

You use the UltraPort, UltraPort SI, and UltraPort Express serial adaptor cards when you want a robust entry level solution for the small office or point of sale applications. Typically you use UltraPort, UltraPort SI, and UltraPort Express serial adaptor cards because you want to add extra serial ports to an existing computer system rather than replacing it with the considerable cost that entails. Higher data rates and ESD protection in the UltraPort, UltraPort SI, and UltraPort Express serial adaptor cards make it suitable for any modem or ISDN TA application.

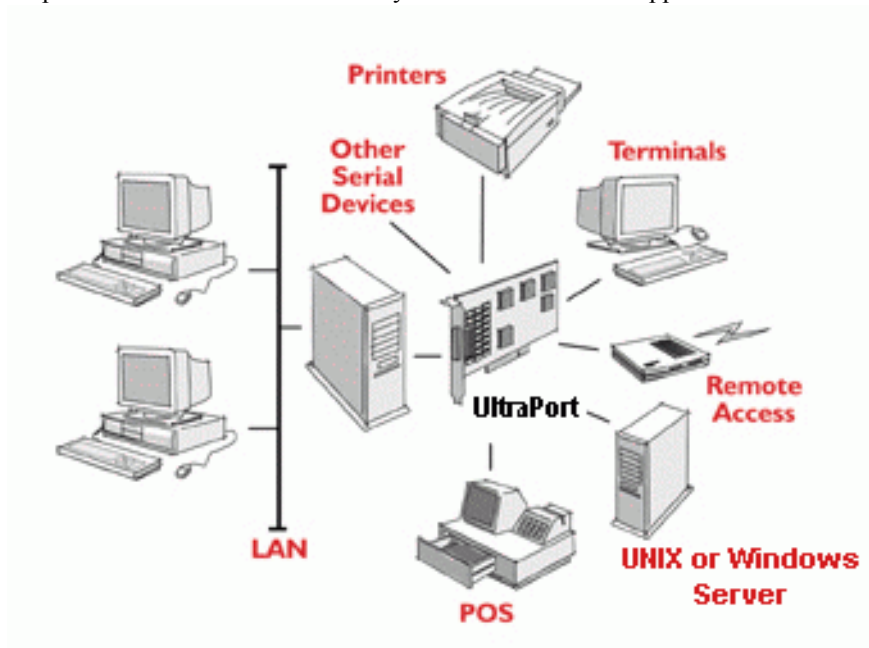

Note: To use the UltraPort, UltraPort SI, or UltraPort Express serial adaptor cards you must first install the card, and then install the drivers supplied with the card. You can then configure each card as required. The installation procedure varies for different operating systems. Please refer to the appropriate chapter for your operating system.

Connection accessories

The connector box or cable required for the UltraPort products you are using depends on the number of ports and product type. For details see [Chapter 7, "Cabling Information"](#)



Installing/Removing Host Cards And Cable Accessories

Introduction

This section describes the mechanical installation of the UltraPort, UltraPort SI, or UltraPort Express host cards and associated connector boxes and cables for 1,2, 4, 8 and 16 ports.

Installing UltraPort, UltraPort SI, and UltraPort Express cards

This section describes the mechanical installation of UltraPort cards.

To install an UltraPort host card proceed as follows

Note: The exact location of host card slots varies for different systems, for exact mechanical details of your system, refer to your system documentation



Warning


Dangerous voltages exist inside computer systems. Before installing host cards in your system, turn off the power supply and unplug the power cord.

1. Turn off the power to your system and unplug the power cord.
2. Remove the system cover to expose the inside of the connector panel for host cards.
3. Insert the UltraPort card you want to install into a vacant host PCI /PCI Express card slot and secure in place as shown in the next picture.



Caution

Full anti-static precautions should be taken when handling host cards.

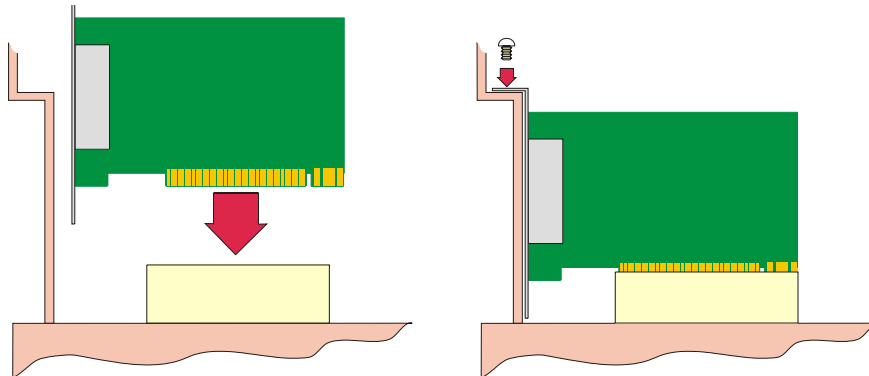

4. Repeat step 3. until you have installed all the UltraPort cards you want.
5. Replace and secure the system cover.

Installation of UltraPort cards is now complete.

Installing cables and connector boxes

This section describes the mechanical installation of cables and connector boxes to the UltraPort host cards for 1, 2, 4, 8 and 16 ports and includes the following:

- *Installing cables on UltraPort1/2, UltraPort1/2 SI and UltraPort1/2 Express cards* on page 13
- *Installing converter cables on UltraPort4 (RJ-45) and UltraPort4 Express (RJ45) cards* on page 13
- *Installing converter cables on UltraPort8i cards* on page 13
- *Installing fan-out cables and connector boxes on UltraPort4-LP, UltraPort4 SI-LP, UltraPort4 Express HD, UltraPort8, UltraPort8 SI-LP and UltraPort8 Express HD cards* on page 14
- *Installing fan-out cables and connector boxes on UltraPort16 and UltraPort16 SI cards* on page 15

For information on available connectors and their pinouts and cabling, see *Chapter 7, "Cabling Information"*

Installing cables on UltraPort1/2, UltraPort1/2 SI and UltraPort1/2 Express cards

The UltraPort1, UltraPort1 SI and the UltraPort1 Express have a single DB9 male connector on the back panel and UltraPort2, UltraPort2 SI and UltraPort 2 Express cards have two DB9 male connectors on the back panel. There is one for each serial port and they are labelled 1 to 2.

You can connect peripheral serial devices directly to the *card by using standard RS-232 DB9 female connectors on the adapter side of the cable* you are using to connect the peripheral device.

Installing converter cables on UltraPort4 (RJ-45) and UltraPort4 Express (RJ45) cards

UltraPort4 and UltraPort4 Express cards have four RJ45 10-pin connectors on the back panel. There is one for each serial port and they are labelled 1 to 4.

Converter cables with the proper connector on the opposite end can be plugged into these RJ45 connectors to provide the desired interface.

Installing converter cables on UltraPort8i cards

UltraPort8i have eight RJ12 6-pin connectors on the back panel. There is one for each serial port.

Converter cables with the proper connector on the opposite end can be plugged into these RJ12 connectors to provide the desired interface.

Installing fan-out cables and connector boxes on UltraPort4-LP, UltraPort4 SI-LP, UltraPort4 Express HD, UltraPort8, UltraPort8 SI-LP and UltraPort8 Express HD cards

UltraPort4-LP, UltraPort4 SI-LP, UltraPort4 Express HD, UltraPort8, UltraPort8 SI-LP and UltraPort8 Express HD cards have a single VHDCI-68 connector on the back panel. It provides the signals for 4 or 8 serial ports.

A fan-out cable or connector box with the proper individual connectors can be plugged into the card to provide the desired interface. The port numbers will be identified on the interface connectors or connector box

Note: The UltraPort fan-out cables and connector boxes need to be secured or supported in case of sudden contact or excessive weight on the cables. Please ensure that adequate caution is taken to avoid possible damage to the UltraPort card or Host system. This can be accomplished by securing the cable(s) to a rack or to the back of the server as shown below:



Installing fan-out cables and connector boxes on UltraPort16 and UltraPort16 SI cards

UltraPort16 and UltraPort16 SI cards have two VHDCI-68 connectors on the back panel. Each one provides the signals for 8 serial ports, to provide a total of 16 ports. The connectors are labelled “1 - 8” and “9 - 16” on the back panel, to indicate the port numbers that are provided on each connector.

A fan-out cable or connector box with the proper individual connectors can be plugged into each connector on the card to provide the desired interface for 8 ports. The port numbers will be identified on the interface connectors or connector box.

Note: On an UltraPort16 and UltraPort16 SI card, the port numbers for ports on the connector labelled “9 - 16” will be 8 higher than the numbers given on the interface connectors of the fan-out cable or connector box.

Note: The UltraPort fan-out cables and connector boxes need to be secured or supported in case of sudden contact or excessive weight on the cables. Please ensure that adequate caution is taken to avoid possible damage to the UltraPort card or Host system. This can be accomplished by securing the cable(s) to a rack or to the back of the server as shown below:



Removing host cards

To remove an UltraPort card from your system, proceed as follows

Note: The exact location of host card slots varies for different systems, for exact mechanical details of your system, refer to your system documentation



Warning


Dangerous voltages exist inside computer systems. Before installing host cards in your system, turn off the power supply and unplug the power cord.

1. Turn off the power to your system and unplug the power cord.
2. Remove the system cover to expose the inside of the connector panel for host cards.
3. Disconnect any cables or connector boxes connected to the card you want to remove.
4. Undo the securing screw for the host card you want to remove then lift the card out of its slot as shown in the next picture



Caution

Full anti-static precautions should be taken when handling host cards.

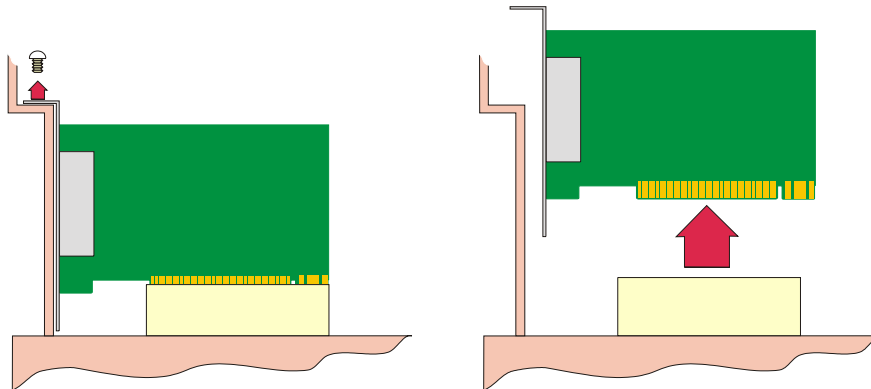

5. Repeat from step 3. until you have removed all the host cards you want.
6. Replace and secure the system cover.
7. Plug in the mains lead and turn on the power.

Removal of UltraPort card is now complete.



Installing On Microsoft Windows

Installing Drivers

General Information

You need to read this chapter if you want to install UltraPort, UltraPort SI, and UltraPort Express serial adaptor cards, associated hardware and software on a Microsoft Windows O/S.

The following Microsoft Windows Operating Systems are supported;

- Windows 10
- Windows 8.1
- Windows Server 2012 /2012 R2
- Windows 8
- Windows 7
- Windows Server 2008 / 2008 R2
- Windows Vista
- Windows XP
- Windows Server 2003
- Windows 2000
- Windows 95/98 - See *Windows 95 and Windows 98* on page 27
- Windows NT - See *Windows NT* on page 39

Downloading the driver from the Perle web site

You can install the UltraPort driver and utility software from the Perle web site. To do this proceed as follows:

1. On your PC, start the Internet browser you want to use.
2. Within your Internet browser window, select the software directory using the following URL:
<http://www.perle.com/downloads>
3. Select your product under the “Serial & Parallel Cards” option.
4. Next, select your operating system. When applicable, ensure that you select the correct architecture (i.e. 32 bit or 64 bit).
5. To download the driver, simply click on the version number under the “Drivers” tab.

General setup procedure

1. Install any UltraPort and cards and cables or connector boxes you require into your system. See [Installing/Removing Host Cards And Cable Accessories](#) on page 10.
2. Install the UltraPort, UltraPort SI, or UltraPort EXPRESS device driver software. See [Installing device drivers and utilities onto your system](#) on page 19.
3. If you add new UltraPort, UltraPort SI, and UltraPort Express cards, you should run Update Driver to make sure the new cards have the latest driver. See [Adding additional cards and/or updating drivers](#) on page 20.
4. If required, remove any host cards you want from your system. See [Removing host cards](#) on page 16.
5. Using the Windows **Device Manager**, configure the serial ports you have added to the system. See [Configuring the Serial ports](#) on page 21.

Installing device drivers and utilities onto your system

To install or enable the UltraPort, UltraPort SI, and UltraPort Express device drivers on your system, proceed as follows:

1. Turn on your PC and, if required, log in.

If you have installed any new UltraPort cards Windows will detect the new hardware and try to install driver the drivers.

For Windows XP and older systems, a **Found New Hardware** wizard will be displayed. Click on the **Cancel** button.

For Windows Vista and newer systems, an Installing New Hardware balloon may appear in the lower right corner of the screen. Click the **X** to close the balloon.


2. Download the latest UltraPort/UltraPort SI/UltraPort Express driver file from the Perle website for your operating system:
3. Double-click the installation zip that you downloaded in step 3. This will display a list of files. Find the appropriate setup file and double click on it to execute it. The setup files are titled as follows;

pserial-setup-x86.exe for 32-bit Windows operating systems


pserial-setup-x64.exe for 64-bit Windows operating systems

pserial-setup-ia64.exe for 64-bit Windows Itanium operating systems

4. Follow the installation wizard steps:

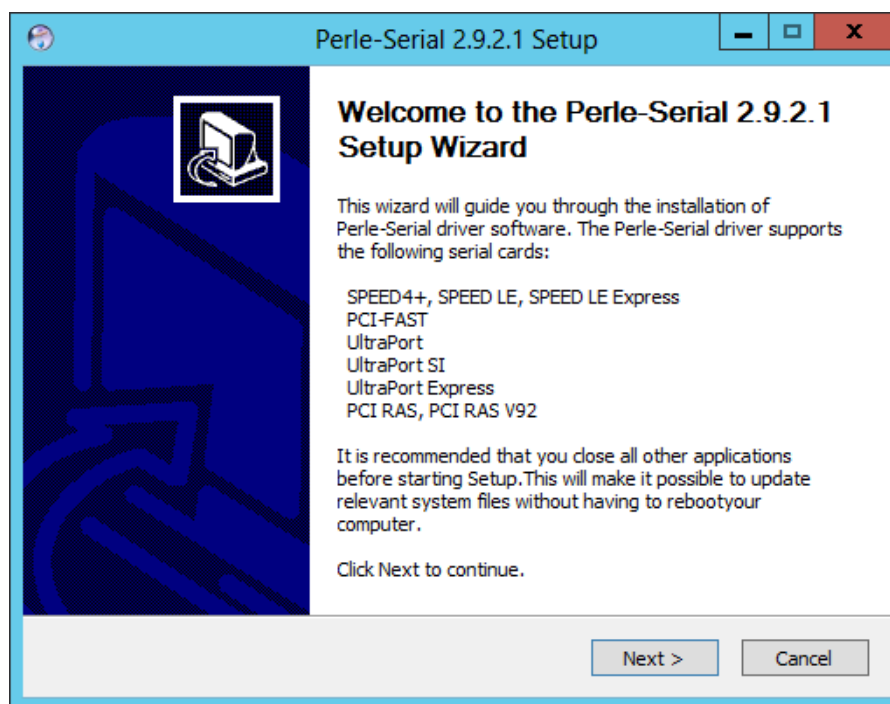

5. The general release drivers are all signed by Microsoft. In the event that you are installing a driver provided to you by our support team, you may get a Windows Security message. Click **Install** when the message appears.

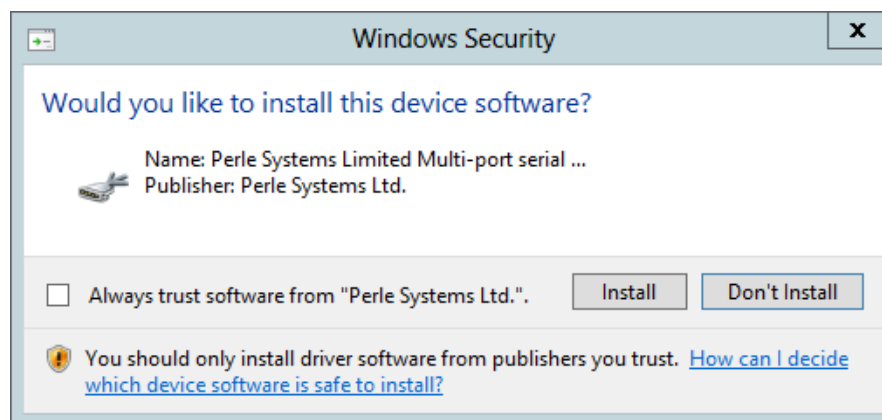

Note: If you are installing an unsigned driver, you may have to click through the Found New Hardware wizard for every UltraPort port on your system. You may click on the check box to "Always trust software from Perle Systems Limited" if your security policy allows this. This will eliminate the repeating of this security message.

Your UltraPort/UltraPort SI/UltraPort Express driver installation is now finished.

Adding additional cards and/or updating drivers

Whenever you add any additional UltraPort, UltraPort SI, or UltraPort Express hardware to your system, Windows might install the latest digitally signed driver in its database (depending on your Windows operating system and settings). To ensure you have the latest driver installed after you add new hardware, you can either:

- Click **Start > All Programs > Perle > Perle-Serial > Update Driver**
- or
- Reinstall the drivers as described in *[Installing device drivers and utilities onto your system](#)* on page 19.

Configuring the Serial ports

To configure UltraPort and UltraPort SI and UltraPort Express serial ports, proceed as follows:


1. Windows XP and older systems

- a. On the Windows desktop, click on the **Start** button and select **Control Panel**
- b. In the Control Panel window, click on the **System** icon to display the System Properties tabbed window.
- c. In the System Properties window, click on the **Hardware** tab to display the Hardware page.

Windows Vista and newer systems


- a. On the Start page, select **Control Panel**.
 - b. In the Control Panel Window, select **Hardware and Sound** or **Hardware** to display the Hardware page.
2. In the Hardware page, click on **Device Manager** link or button.

The Device Manager window is now displayed.

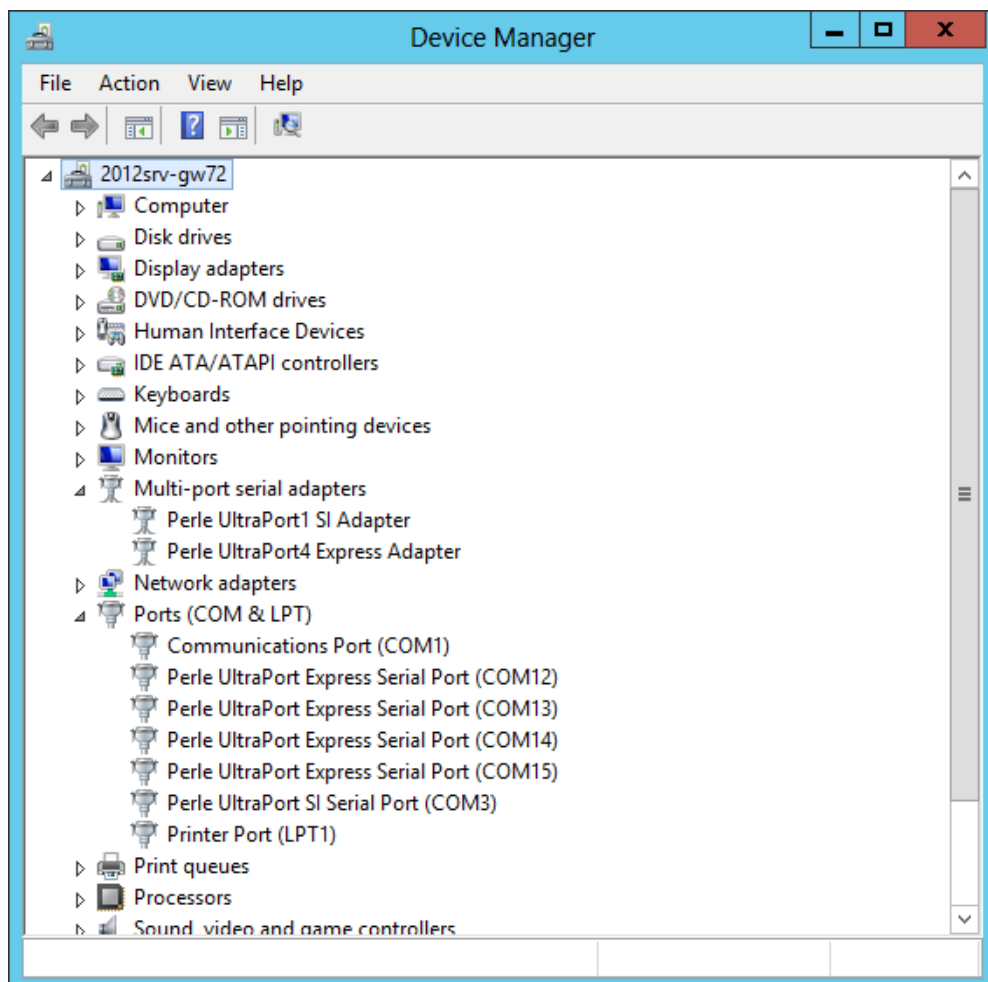

3. You can click on the **Multiport serial adapters** icon to display the currently installed devices. Each entry represents an UltraPort card.
4. Now click on the **Ports(COM & LPT)** to view the detected ports for the UltraPort cards.
5. Double click on the port whose properties you want to view or change
The Port Properties tabbed window is now displayed.


6. In the Port Properties window, click on the **Port Settings** tab to display the Port Settings page.

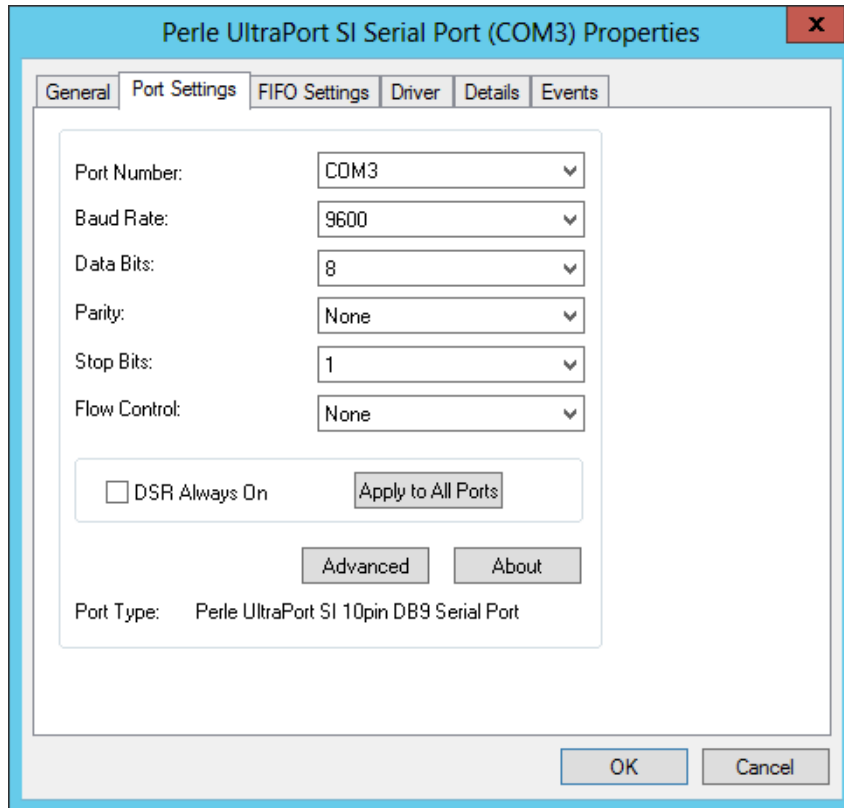

7. In the Port Settings page, set the **Port Number**, **Baud Rate** and other configuration parameters you require.

The **DSR Always On** option will, when checked, cause the driver to always report the DSR signal as active. This is used when using a cable that does not supply the DSR signal but the application being used requires this signal.

8. If the COM port belongs to a UltraPort SI card then you can click on the **Advanced** button to access the software switchable interface modes as shown in the next diagram.

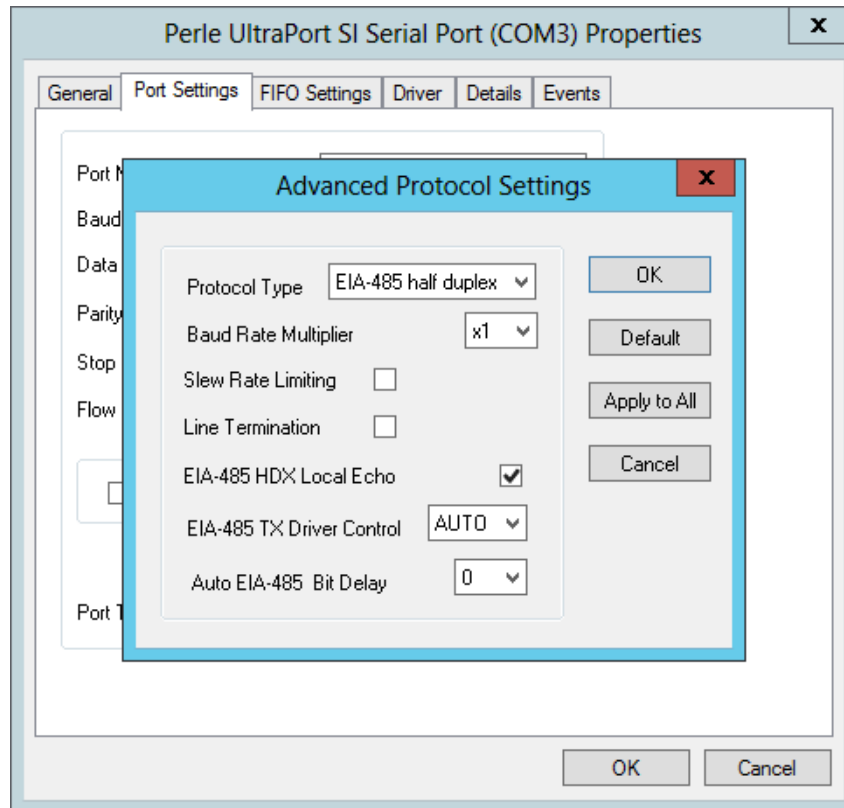


- Protocol Type:** The valid software switchable protocol types are EIA-232, EIA-422, EIA-485 Full Duplex and EIA-485 Half Duplex. Each port on the UltraPort SI are independent of each other and therefore you may select different protocols per serial port.
- Baud Rate Multiplier:** The baud rate multiplier allows the user to multiply the configured baud rate by 1, 2, 4, 8, 16 or 32, hence achieving greater speeds on the UltraPort SI serial interfaces. This is applicable for each protocol type selected. Baud rates for EIA-232 are up to 921.6 Kbps per serial port. Baud rates for EIA-422/EIA-485 are up to 3.686 Mbps per serial port.
- Slew Rate Limiting:** The default setting for slew rate limiting is disabled. This will allow higher baud rate speeds on each EIA interface port. Slew rate limiting enabled, minimizes EMI and reduces reflections caused by improperly terminated cables. Operation in slew rate limited mode reduces the amplitudes of high-frequency harmonics.
- Line Termination:** The line termination parameter is not changeable by the user in EIA-232 mode. However both EIA-422 and EIA-485 modes are defaulted to disabled but can be enabled by the user if needed.

- EIA-485 HDX Local Echo:** Local echo by default is on. This parameter applies only to EIA-485 half duplex mode. All characters will be echoed to the user and transmitted across the serial ports. Some EIA-485 applications require local echo to be enable in order to monitor the loopback data to determine that line contention has occurred. If your application cannot handle loopback data the local echo should be disabled.
- EIA-485 TX Driver Control:** The default for this field is AUTO. When Auto is set the UltraPort SI will automatically detect the beginning and the ending of data being transmitted in order to enable and disable the transmit line. When the field is set to RTS it is the host application's responsibility to enable and disable the transmit line via the RTS handshake line when it wants to send data.
- Auto EIA-485 Bit Delay:** By default this field is set to 0 delay. This field is only applicable if you have configured EIA-485 TX Driver Control to AUTO. Values for this field are 0 through 15 bits.

Note: The port must be closed and then opened for the new parameters to take effect.

9. In the **FIFO Settings** page, set the FIFO buffer levels using the parameters detailed in the table.

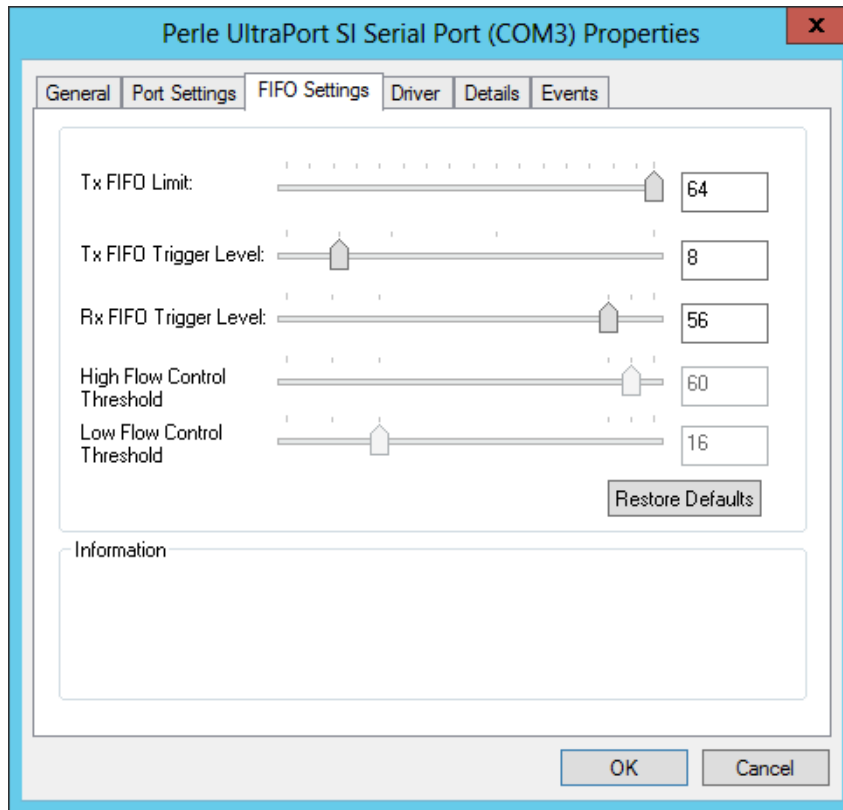

Tx FIFO Limit

Sets the overall size of the Transmit FIFO buffer. You use this when you want to restrict the size of the buffer in order to control the data flow. This is useful when your application requires you to send small amounts of data but needs acknowledgement that the data has been sent.

For example, if your application is designed to receive 4 bytes at a time, a larger value of say 16 would time out.

Permitted values for an UltraPort card are 1 to 64.

Tx FIFO Trigger Level

Sets the level at which the com port Transmit FIFO buffer is filled with data each time a request for more data is made.

For example, if set to 16 bytes you get 16 bytes at a time when driver requests data.

Permitted values for an UltraPort card are **8, 16, 32** and **56**.

Rx FIFO Trigger Level

Sets the level at which the com port Receive FIFO buffer is filled before the data is passed on to an application.

For example, if set to 16 bytes, 16 bytes of data are accumulated at a time before data is passed on to an application. The FIFO trigger will also time out if the level is not achieved within two character periods of the last byte received.

Permitted values for an UltraPort card are **8, 16, 56** and **60**.

High Flow Control Threshold	Sets the level at which data flow is suspended. If the limit is exceeded, the driver will stop collecting data. For UltraPort, value is read only , set automatically from FIFO trigger level.
Low Flow Control Threshold	Sets the level at which data flow is resumed. If the low flow threshold is exceeded, the driver requests more data. For UltraPort, value is read only , set automatically from FIFO trigger level.

10. Within the Serial Port properties window, click on the **OK** button to save changes and close the window.

The configuration process is now complete.

Note: To restore the default settings, use the **Restore Defaults** button.

Removing Drivers

To uninstall the UltraPort serial adapter driver, do the following:

1. Windows XP and older systems

- a. On the Windows desktop, click on the **Start** button and select **Control Panel**
- b. In the Control Panel window, double click on the **Add or Remove Programs** icon to display the Add or Remove Programs window.
- c. Scroll through the list and click on the **Perle Perle-Serial Driver** entry. Click on the **Remove** button and then follow the instructions on screen to uninstall the UltraPort driver.

Windows Vista and newer systems

- a. On the Start menu or page, select **Control Panel**.
- b. In the Control Panel Window, select **Uninstall a program** to display the Uninstall a program window.
- c. Scroll through the list and double click on the **Perle Perle-Serial Driver** entry and follow the instructions on screen to uninstall the UltraPort driver.

Windows 95 and Windows 98

Introduction

This section tells you how to install UltraPort and UltraPort SI only host cards, software drivers and utilities under the Windows 95 and Windows 98 operating systems and includes the following:

- [General Installation Procedure](#) on page 27
- [Installing Device Drivers And Utilities](#) on page 28
- [Configuring your serial ports on Win 95/98](#) on page 31
- [Removing Drivers and Utilities From Your System](#) on page 37.

General Installation Procedure

The general procedure for installing UltraPort and UltraPort SI only cards under the Windows 95/98 operating systems is as follows:

1. Install any UltraPort and UltraPort SI cards and cables or connector boxes you require into your system. See [Installing UltraPort, UltraPort SI, and UltraPort Express cards](#) on page 11.
2. Using the Windows **Found New Hardware Wizard**, install the UltraPort or UltraPort SI device driver software. See [Installing Device Drivers And Utilities](#) on page 28

Note: The UltraPort and UltraPort SI device drivers for Windows 95/98 are not included on your Windows 95 or Windows 98 CDROM

3. If required, remove any host cards you want from your system. See [Removing Drivers and Utilities From Your System](#) on page 37.
4. Using the Windows **Device Manager**, configure the serial ports you have added to the system. See [Configuring your serial ports on Win 95/98](#) on page 31.

Installing Device Drivers And Utilities

To install or enable the UltraPort and UltraPort SI device drivers on your system proceed as follows:

1. Turn on your PC and if required, log in.

If you have installed any new UltraPort or UltraPort SI cards, a **Found New Hardware** - "PCI Serial Controller" message is briefly shown followed by the **Add New Hardware Wizard** window as shown below:



2. Proceed by clicking **Next** and the following **Add New Hardware Wizard** window will appear:



- Proceed again by clicking **Next** and the following **Add New Hardware Wizard** window will appear



- Insert the Perle CD and check the **Specify a location** check box. Now either browse to, or type in the following path **d:\driversultraport\win9x\x.yy**. Where **x.yy** is the windows 95/98 driver version number. Then click **Next** and the following **Add New Hardware Wizard** window will appear:



5. Proceed by clicking **Next** and the final **Add New Hardware Wizard** window will appear as below:



6. Proceed by clicking **Finish**. Windows will now copy all the files needed for the device driver. After the driver installation is complete, the driver will automatically find all of the serial ports associated with the UltraPort or UltraPort SI card. A series of **New Hardware Found** messages will be temporarily displayed for every port found.

Installation of the device drivers and utilities is now complete


Note: Your system does not need to be restarted to start using the newly added serial ports

Configuring your serial ports on Win 95/98

To configure UltraPort or UltraPort SI serial ports proceed as follows:

1. In the windows desktop, click on the **Start** button and select **Settings > Control panel**.


The control panel window is now displayed.

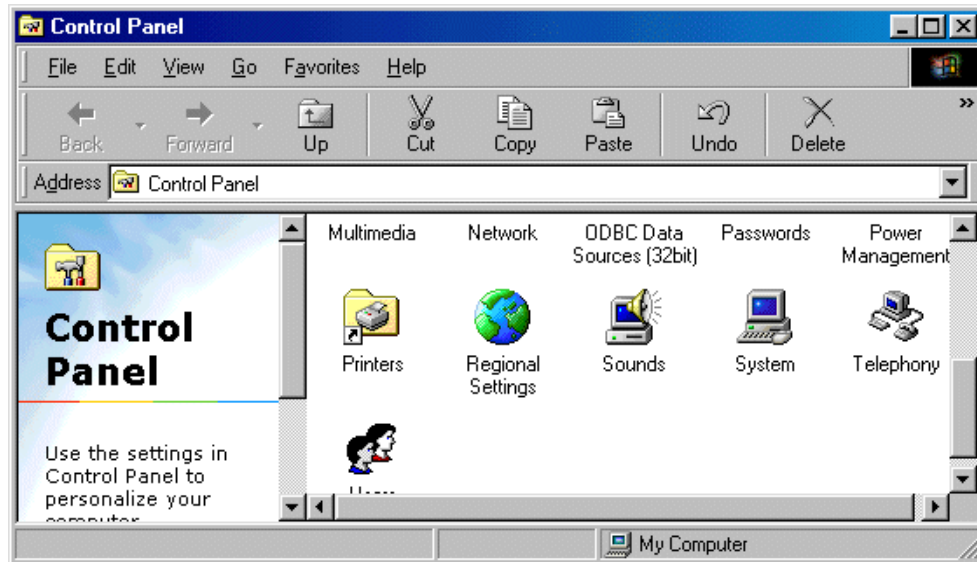

2. In the control panel window, double click on the **System** icon. The System Properties tabbed window is displayed.


Note: You can also display the **System Properties** tabbed window by right clicking on the **My Computer** icon on your desktop and selecting the **Properties** menu option.

3. In the System Properties tabbed window, click on the **Device Manager** tab.
The Device Manager page is now displayed.

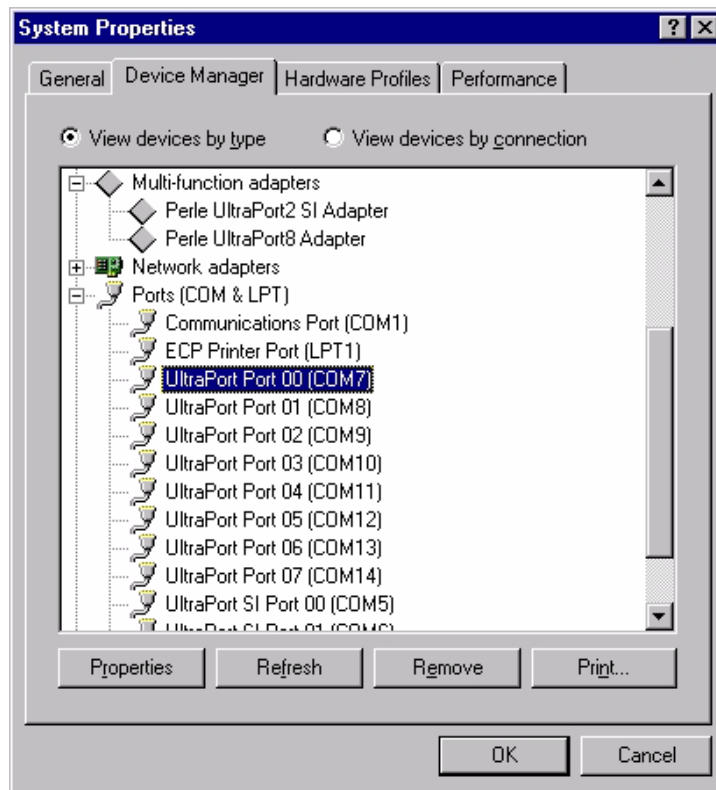


4. In the Device Manager page, double click on the device whose properties you wish to view.
The properties tabbed window for the selected device is now displayed.

5. In the properties window, click on the **Port Settings** tab.
The Settings page is now displayed.

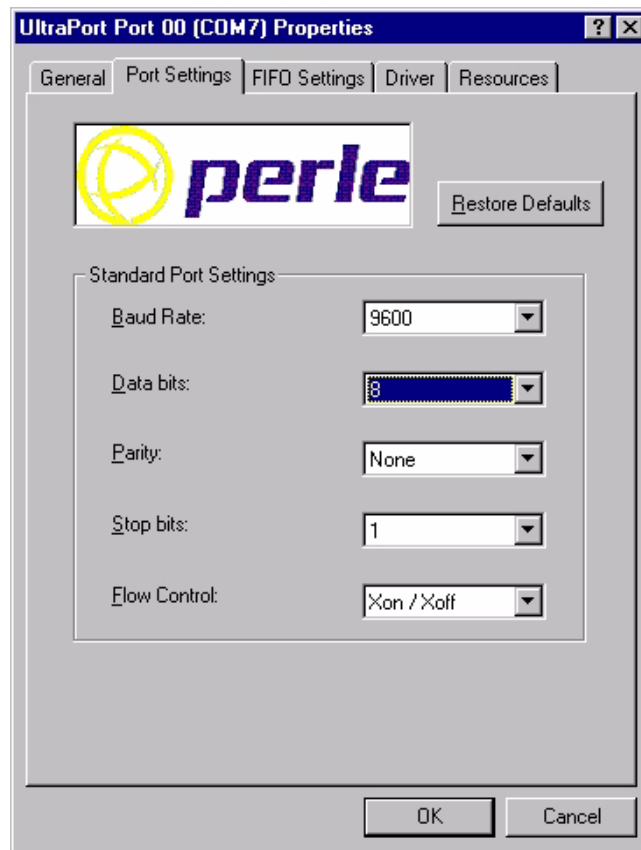


6. In the Port Settings page, select the configuration values you want and either click on the **OK** button or click on the **FIFO Settings** tab to display FIFO configuration settings for the device driver.


7. The FIFO Settings page is now displayed as shown in the next picture

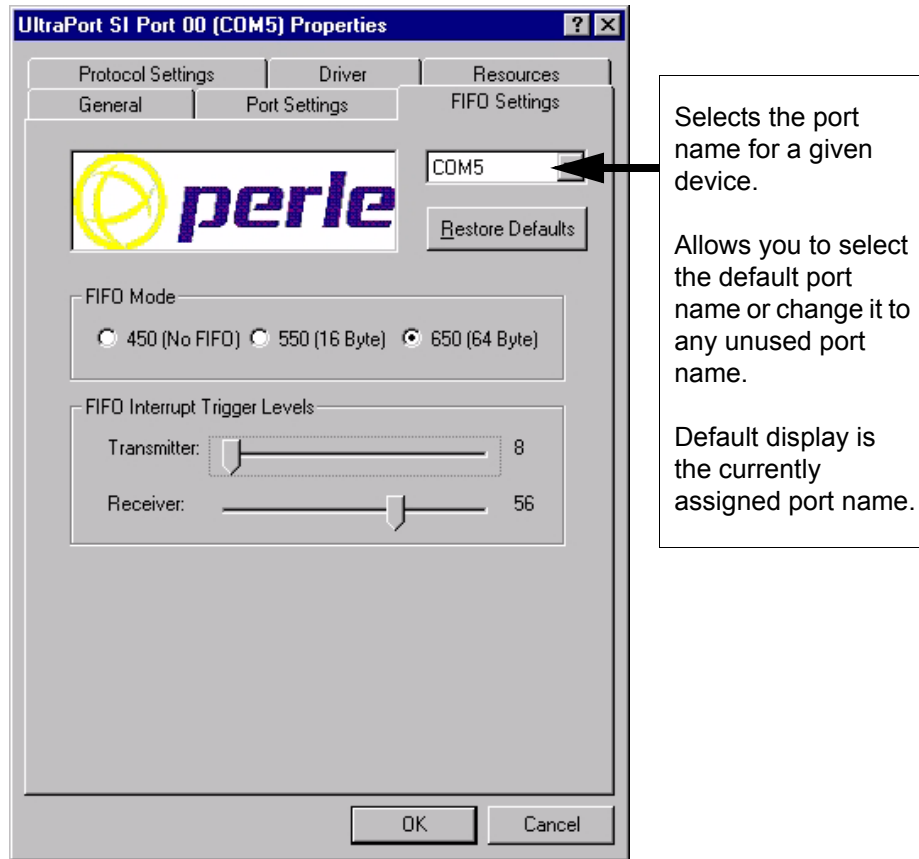

8. In the FIFO Settings page, select the configuration values you want and either click on the **OK** button or, if the COM port belongs to a UltraPort SI card, then you can click on the **Protocol Settings** tab to access the software switchable interface modes. In

 **Caution**
It is strongly recommended that you do not make changes to the FIFO trigger levels or com port name unless you have a valid reason to do so.

9. The Protocol Settings page is now displayed as shown in the next picture

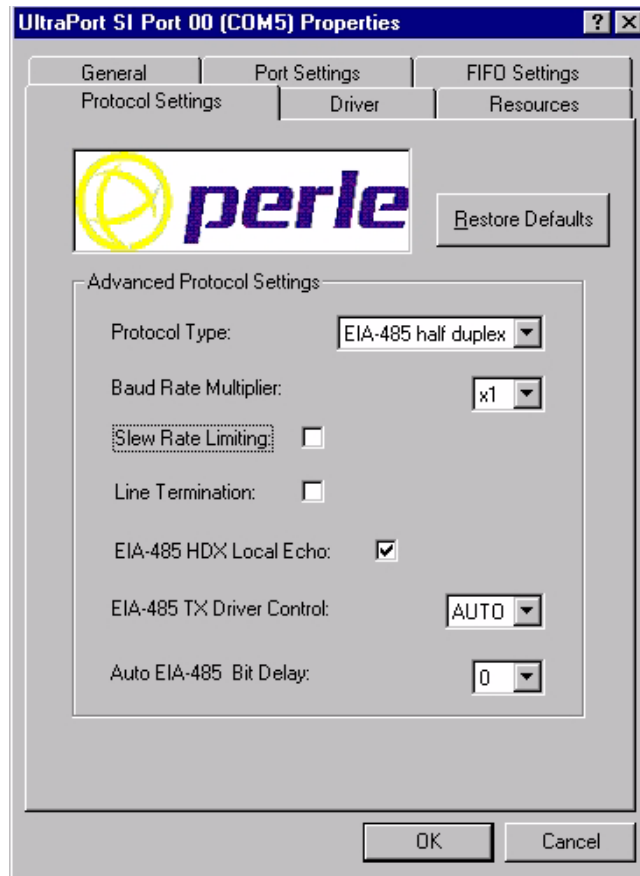

10. In the Protocol Settings page, select the configuration values you want and click on the **OK** button.

Protocol Type: The valid software switchable protocol types are EIA-232, EIA-422, EIA-485 Full Duplex and EIA-485 Half Duplex. Each port on the UltraPort SI are independent of each other and therefore you may select different protocols per serial port.hh

Baud Rate Multiplier: The baud rate multiplier allows the user to multiply the configured baud rate by 1, 2, 4, 8, 16 or 32, hence achieving greater speeds on the UltraPort SI serial interfaces. This is applicable for each protocol type selected. Baud rates for EIA-232 are up to 921.6 Kbps per serial port. Baud rates for EIA-422/EIA-485 are up to 3.686 Mbps per serial port.

Slew Rate Limiting: The default setting for slew rate limiting is disabled. This will allow higher baud rate speeds on each EIA interface port. Slew rate limiting enabled, minimizes EMI and reduces reflections caused by improperly terminated cables. Operation in slew rate limited mode reduces the amplitudes of high-frequency harmonics.

Line Termination: The line termination parameter is not changeable by the user in EIA-232 mode. However both EIA-422 and EIA-485 modes are defaulted to disabled but can be enabled by the user if needed.

- EIA-485 HDX Local Echo:** Local echo by default is on. This parameter applies only to EIA-485 half duplex mode. All characters will be echoed to the user and transmitted across the serial ports. Some EIA-485 applications require local echo to be enable in order to monitor the loopback data to determine that line contention has occurred. If your application cannot handle loopback data the local echo should be disabled.
- EIA-485 TX Driver Control:** The default for this field is AUTO. When Auto is set the UltraPort SI will automatically detect the beginning and the ending of data being transmitted in order to enable and disable the transmit line. When the field is set to RTS it is the host application's responsibility to enable and disable the transmit line via the RTS handshake line when it wants to send data.
- Auto EIA-485 Bit Delay:** By default this field is set to 0 delay. This field is only applicable if you have configured EIA-485 TX Driver Control to AUTO. Values for this field are 0 through 15 bits.

Note: The port must be closed and then opened for the new parameters to take effect.


Re-configuration of ports is now complete.

Removing Drivers and Utilities From Your System


To remove drivers and utilities from your system proceed as follows:

1. In the windows desktop, click on the **Start** button and select **Settings > Control panel**.

The control panel window is now displayed.

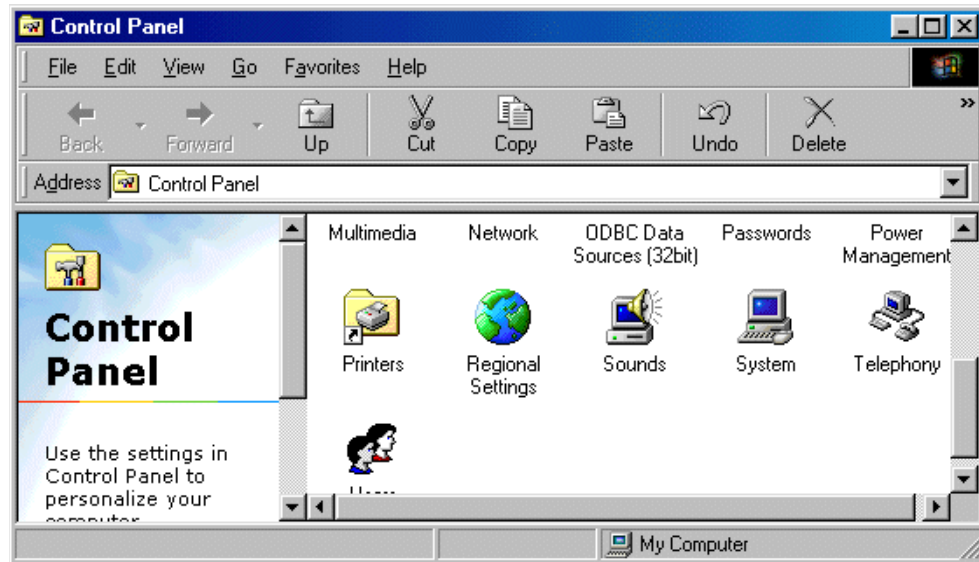

- In the control panel window, double click on the **System** icon.
The System Properties tabbed window is now displayed as shown in the next picture.

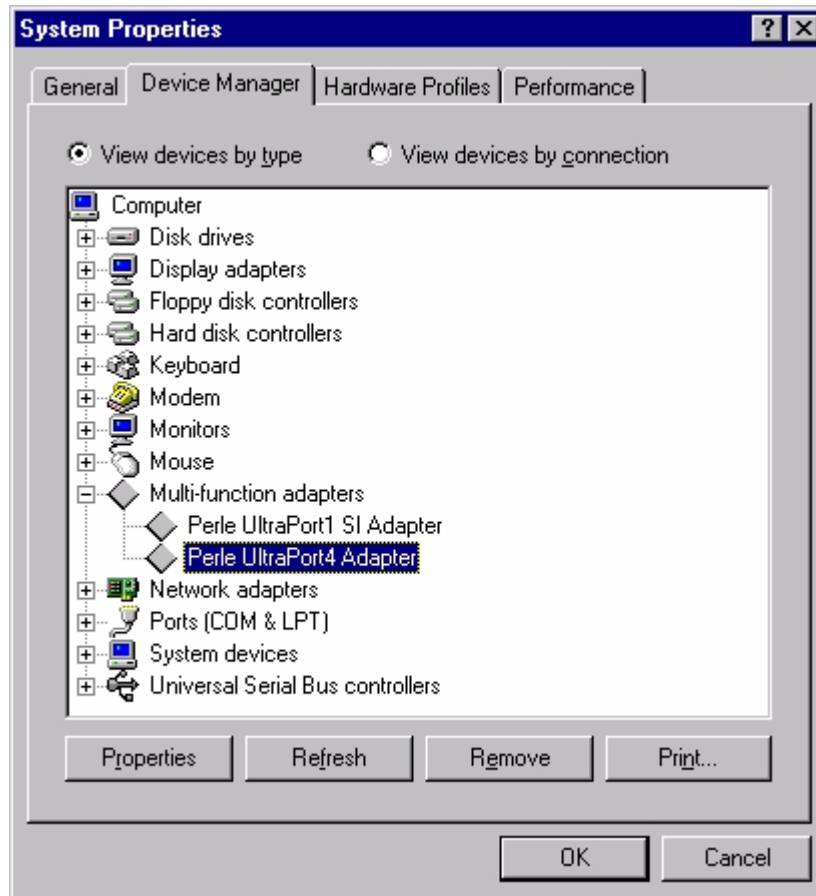

- In the System Properties tabbed window, click on the **Device Manager** tab
The Device Manager page is now displayed.
- In the Device Manager page, click on the Perle Multi-function adapter that you wish to remove, highlighting it then press the **Remove** button.
The selected device is now removed from the system.

**Warning**

If you remove the devices but do not remove the hardware, the devices will be re-installed when you next re-boot the machine or run the Hardware Wizard.

Windows NT

The procedure for installing and configuring host cards, drivers software and associated utilities for the Windows NT operating system is as follows

Note: The Perle PortDirector software contains drivers for the UltraPort and UltraPort SI host cards only.
You will need to install the PortDirector **for Windows NT** on your system in order to use the UltraPort and UltraPort SI host cards.
See the PortDirector user guide part number **5500028** for further details.

1. Install any UltraPort and UltraPort SI cards, cables or connector boxes you require into your system. See *Installing UltraPort, UltraPort SI, and UltraPort Express cards* on page 11.
2. If required, remove any host cards you want from your system. See *Removing host cards* on page 16.
3. Use the PortDirector software to update your system with the revised number and type of host cards. See The PortDirector user guide part number 5500028 for further details.

Your system can now use the serial adaptor cards you have installed.



Installing On Linux

Installing Drivers

Introduction

You need to read this chapter if you want to install UltraPort, UltraPort SI, and UltraPort Express serial adaptor cards, associated hardware and software on a Linux O/S.

The following versions of Linux are supported;

- Linux 3.x
- Linux 2.6.x
- Linux Mandriva 2007, 2009, 2011
- Linux OpenSUSE 10, 11, 12.1,12.3
- Linux Red Hat Fedora 7, 9, 16-18
- Linux Red Hat Enterprise 5.2, 6.2, 6.4
- Linux SUSE Enterprise 10 SP2, 11 SP2
- Linux Debian 4.0r4, 6.0.4, 6.0.7
- Linux 2.4.x
- Linux 2.2.16+

General installation procedure for Linux

The general procedure for installing and configuring host cards, driver software and associated utilities for the Linux operating system is as follows:

1. Install any UltraPort cards you require into your system. See [Installing/Removing Host Cards And Cable Accessories](#) on page 10.
2. Install the UltraPort Linux drivers onto your system using the procedures described in [Downloading the driver from the Perle web site](#) on page 41.
3. Create devices for the required ports using the procedures detailed in [Creating devices for the attached ports](#) on page 43.

Your system can now use the UltraPort serial adaptor cards you have installed.

Downloading the driver from the Perle web site

You can install the UltraPort driver and utility software from the Perle web site. To do this proceed as follows:

1. On your PC, start the Internet browser you want to use.
2. Within your Internet browser window, select the software directory using the following URL:
<http://www.perle.com/downloads>
3. Select your product under the “Serial & Parallel Cards” option.
4. Next, select your operating system.
5. Driver packages are available as Source RPM or Compressed TAR. Select the format you wish to use. To download the driver package, click on the version number in the “Drivers” tab.

Installing Drivers onto your system

The UltraPort cards and UltraPort SI installed on Linux machines use the perle-serial driver for Linux. The driver supports the Linux kernel versions 2.2, 2.4, 2.6 and 3.x. The kernel header files are needed for kernel 2.2 and 2.4. For the 2.6 kernel and later, a configuration kernel source tree and a set of makefile rules describing how the modules are built is required.

The UltraPort Express cards installed on Linux machines use the perle-serial driver for Linux. The driver supports the Linux kernel versions 2.4, 2.6 and 3.x. The Kernel header files are needed for kernel 2.4. For the 2.6 kernel and later, a configuration kernel source tree and a set of makefile rules describing how the modules are build is required

The driver is supplied in both source RPM package format and a compressed tar file. The procedure for installation of each format is as follows:

Uninstall Patch Versions

The Perle-Serial driver version 2.0 and higher is a standalone kernel module. If previous patches have been made to the kernel for the UltraPort card, then these patches must be uninstalled before the new driver module can be installed.

1. Find the UltraPort patch files to the kernel. Remove the patches from the kernel source files by entering the following commands:

```
cd /usr/src/linux
patch -R -p1 < <path to patches>/<patch file>
```

Note: If more than one patch file was added, then remove them in the reverse order that they were applied. (i.e. If the `ultraport.patch-x.y.z-2.4.x` was added and then the `ultraport.IO8mode-x.y.z-2.4.x` was added, remove the `ultraport.IO8mode` patch first.)

2. Recompile and install the kernel based on your specific system. For help on this procedure please refer to your LINUX documentation.
3. The new Perle-Serial software can now be installed

Install from Source RPM

1. Log in to the LINUX system as root user.

Note: The `<packages directory>` path name in the following instructions will be different depending on the LINUX distribution you have installed. For example:
 Redhat might be: `/usr/src/redhat`
 Suse might be: `/usr/src/packages`
 Later rpm versions will create a directory: `/<user home directory>/rpmbuild`.
 The `<rpm build command>` will change depending on the version of the RPM utilities installed. For newer versions (i.e. 4.2), the `<rpm build command>` is “rpmbuild”. For older versions use “rpm”

2. At the LINUX prompt, copy the supplied `perle-serial-<version>-<release>.src.rpm` file onto your system in the `/tmp` directory.

3. Install the source rpm by typing the following command:

```
rpm -ivh perle-serial-<version>-<release>.src.rpm
```

4. Build the binary RPM package for your system by entering the following commands:

```
cd <packages directory>/SPECS
<rpm build command> -bb perle-serial-<version>.spec
```

5. Install the binary RPM which was just created. Enter the following commands:

```
cd <packages directory>/RPMS/<arch>
rpm -ivh perle-serial-<version>-<release>.<arch>.rpm
```

The `<arch>` value is the architecture of your LINUX machine such as “i386” or “alpha”.

Install from Tar File

1. Log in to the LINUX system as root user.
2. At the LINUX prompt, copy the supplied `perle-serial.tgz` file onto your system in the `/tmp` directory.

3. Unpack the file using the command:

```
tar -xzvf perle-serial-<version>-<release>.tgz
```

4. Build and install the perle-serial software by entering the following commands

```
cd /tmp/perle-serial-<version>-<release>
make
```

Creating devices for the attached ports

After the UltraPort cards and the new driver have been installed, terminal devices will need to be created for the added ports. This can be done by using the **ps_addports** utility.

To use the `ps_addports` script, enter the following command:

```
ps_addports m n
```

where:

m is the first port device (starting at 0)

n is the last port device to add.

The port devices will be created in the `/dev` directory and will have the following format:

```
/dev/ttyPSnn
```

where **nn** is the 2 digit port number.

The perle-serial driver has been installed so that it will automatically be loaded the first time an UltraPort device is used. However, if more than one UltraPort card has been installed in the Linux machine, then the driver can be manually loaded to determine which terminal device numbers have been assigned to each card.

To load the driver, enter the command:

```
modprobe perle-serial
```

Review the messages in the file `/var/log/messages`.

Once the port devices have been created, they may be used as standard LINUX serial TTYs.

UltraPort 8i RTS/DTR option

The Perle UltraPort8i can only support either RTS or DTR. There is a utility included with this driver to configure which signal will be active. The configuration is stored in the `modules.conf` file.

The utility is used as follows:

```
set_io8_rts off
```

This is the default action. The driver will use the pin as "DTR" when the tty is in software handshake mode.

```
set_io8_rts on
```

If this option is used or hardware handshake is on, the pin will always be RTS.

Note: The perle serial module will have to be unloaded and reloaded for the RTS/CTS option to take effect.

Setultrap Interface Protocol Configuration Utility (UltraPort SI only)

Perle provides a command line utility that allows the user to configure each UltraPort SI serial ports for features EIA-232, EIA-422, EIA-485 full duplex and EIA-485 half duplex.

Note: The default interface protocol for the Perle UltraPort SI cards is EIA-232.

Command Line Interface

```
setultrap -f device_name -l
setultrap -f device_name -x baud-multiplier
setultrap -f device_name -m 232 [-s fast|slow]
setultrap -f device_name -m 422 [-s fast|slow] [-t term|unterm]
setultrap -f device_name -m 485fdx [-s fast|slow] [-t term|unterm] [-a auto|rts]
    [-b 0-15]
setultrap -f device_name -m 485hdx [-s fast|slow] [-t term|unterm]
    [-e echoon|echooff] [-a auto|rts] [-b 0-15]
-l list protocol configuration for serial device(s)
-x set baudrate multiplier for serial devices(s)
-m set interface protocol for serial device(s)
```

:

Option description	Configuration option	232	422	485hdx	485fdx
specifies the port to apply the configuration option to	-f	required	required	required	required
Lists the serial ports configuration	-l	optional	optional	optional	optional
Interface mode	-m	default 232	optional 422	optional 485hdx	optional 485fdx
Baud rate multiplier	-x	optional (1,2,4,8, 16,32)	optional (1,2,4,8, 16,32)	optional (1,2,4,8, 16,32)	optional (1,2,4,8, 16,32)
Slew rate limiting	-s	optional fast/slow	optional fast/slow	optional fast/slow	optional fast/slow
Line termination	-t	N/A	optional term/unterm	optional term/unterm	optional term/unterm
EIA-485 HDX local echo	-e	N/A	N/A	optional echoon/echoff	N/A
EIA-485 TX Driver Control	-a	N/A	N/A	optional auto/rts	optional auto/rts
Auto EIA-485 bit delay	-b	N/A	N/A	optional (0 -15)	optional (0 -15)

- f Specifies the port the action should be taken on.
 /dev/ttyPS1 - specifies port 1
 /dev/ttyPS1, /dev/ttyPS64 -specifies port 1 through port 64 (ranges are separated by a comma)
- l **Lists** protocol configuration for each serial port configured on the UltraPort SI.
 /dev/ttyPS1 232 slow term 1
 /dev/ttyPS1 485fdx fast term auto 5 1
 The first example shows a device named ttyPS1 configured for protocol mode EIA-232, slew rate limiting is set to slow, termination is on, and the baud rate multiplier is 1
 The second example shows device named ttyPS1 configured for protocol mode EIA-485fdx, slew rate limiting is set to fast, termination is on, EIA-485 HDX TX Driver Control is set to auto with bit delay of 5 bits and the baud rate multiplier is 1
- m **Interface mode:** The valid software switchable protocol types are EIA-232, EIA-422, EIA-485 Full Duplex and EIA-485 Half Duplex. Each port on the UltraPort SI are independent of each other and therefore you may select different protocols per serial port.
- x **Baud Rate multiplier:** The baud rate multiplier allows the user to multiply the configured baud rate by 1, 2, 4, 8,16 or 32, hence achieving greater speeds on the UltraPort SI serial interfaces. This is applicable for each protocol type selected. Baud rates for EIA-232 are up to 921.6 Kbps per serial port. Baud rates for EIA-422/EIA-485 are up to 3.686 Mbps per serial port.
- s **Slew Rate Limiting:** The default setting for slew rate limiting is disabled. This will allow higher baud rate speeds on each EIA interface port. Slew rate limiting enabled, minimizes EMI and reduces reflections caused by improperly terminated cables. Operation in slew rate limited mode reduces the amplitudes of high-frequency harmonics.
- t **Line Termination:** The line termination parameter is not changeable by the user in EIA-232 mode. However both EIA-422 and EIA-485 modes are defaulted to disabled but can be enabled by the user if needed.
- e **EIA-485 HDX Local Echo:** Local echo by default is on. This parameter applies only to EIA-485 half duplex mode. All characters will be echoed to the user and transmitted across the serial ports. Some EIA-485 applications require local echo to be enable in order to monitor the loopback data to determine that line contention has occurred. If your application cannot handle loopback data the local echo should be disabled.
- a **EIA-485 TX Driver Control:** The default for this field is AUTO. When Auto is set the UltraPort SI will automatically detect the beginning and the ending of data being transmitted in order to enable and disable the transmit line. When the field is set to RTS it is the host application's responsibility to enable and disable the transmit line via the RTS handshake line when it wants to send data.
- b **Auto EIA-485 Bit Delay:** By default this field is set to 0 delay. This field is only applicable if you have configured EIA-485 TX Driver Control to AUTO. Values for this field are 0 through 15 bits.
- h **Help:** Displays the setultrap usage screen

Note: The port must be closed and then opened for the new parameters to take effect.

Examples

The following examples show typical user applications.

Example 1: List options configured for serial port 1 through 16:

```
etc/setultrap -f /dev/ttyPS0,/dev/ttyPS15 -l
```

Example 2: Set serial port 1 through 16 to interface type EIA-422

```
etc/setultrap -f /dev/ttyPS0,/dev/ttyPS15 -m 422
```

Example 3: Configure ports 1 to 4 to EIA-485 full duplex

```
etc/setultrap -f /dev/ttyPS0,/dev/ttyPS3 -m 485fdx
```

Example 4: Set serial port ttyPS1 to EIA-485 half duplex termination enabled, control bit-delay 5

```
etc/setultrap -f /dev/ttyPS1 -m 485hdx -t term -b 5
```

These commands may be added to a startup script to cause them to run automatically whenever the system is started. A sample commented out startup script is (/etc/init.d/rc.setultrap) supplied with this driver.

Uninstalling the UltraPort Driver for Linux

Uninstalling an RPM Installation

To uninstall the driver enter the following command:

```
rpm -e perle-serial
```

Uninstalling a Tar File Installation

To uninstall the driver enter the following commands:

1. Move to the directory where you previously installed the Perle-Serial driver. For example:

```
cd /tmp/perle-serial-<version>-<release>
```

2. **For Perle-Serial driver up to 3.4.x**

Type the following command:

```
./uninstall.sh
```

For Perle-Serial driver 3.5 and later

```
make uninstall
```



Installing On Solaris

Installing The Driver Package

Introduction

You need to read this chapter if you want to install UltraPort, UltraPort SI, and UltraPort Express serial adaptor cards, associated hardware and software on a Solaris O/S.

The following versions of Solaris are supported;

- Solaris Intel, 32 bit
- Solaris Intel, 64 bit
- Solaris SPARC, 32 bit
- Solaris SPARC, 64 bit

Downloading the driver from the Perle web site

You can install the UltraPort driver and utility software from the Perle web site. To do this proceed as follows:

1. On your PC, start the Internet browser you want to use.
2. Within your Internet browser window, select the software directory using the following URL:
<http://www.perle.com/downloads>
3. Select your product under the “Serial & Parallel Cards” option.
4. Next, select your operating system.
5. To download the driver package, click on the version number in the “Drivers” tab.

General installation procedure for Solaris

The general procedure for installing and configuring host cards, drivers software and associated utilities for the Solaris operating system is as follows:

1. Install any UltraPort cards you require into your system. See [Installing/Removing Host Cards And Cable Accessories](#) on page 10

Note: Once you have installed the drivers, if you add or remove any host cards the operating system will update the kernel accordingly using the **startcomf** program.
startcomf is run automatically during boot up and checks to see if any host cards have been added or removed since the last time the system was powered up. If anything has changed the files which identify the ports and terminals are updated.

2. If required, install the Solaris drivers and utilities onto your system using the procedures described in [Installing drivers and utilities](#) on page 49.
3. If required, remove any host cards you want from your system. See [Installing/Removing Host Cards And Cable Accessories](#) on page 10.
4. For Solaris 9 and earlier OS versions, you can use the **admintool** utility to configure the serial ports you have added to the system. See [Configuring serial ports using the Admintool](#) on page 50.
5. For Solaris 10 you can use the **Solaris Management Console** to configure your serial ports. See [Using The Solaris Management Console For Solaris 10](#) on page 54.
6. For Solaris 11, serial port logins are configured using the SMF service "svc:/system/console-login". See [Using SMF Services For Solaris 11](#) on page 57.

Your system can now use the serial adaptor cards you have installed. If required, you can reconfigure serial ports following initial installation.

Installing drivers and utilities

To install the device drivers and utilities for the Solaris operating system proceed as follows:

1. Login to your system as root.
2. Copy the downloaded driver file to the **/tmp** directory.
3. At the command prompt, type:

```
pkgadd -d /tmp/fast-sol<osver>-x.y.z.<arch>.pkg comf
```

where: - **<osver>** is the Solaris OS version number, either 10 or 11. **osver 10** is to be used for Solaris 10 and older versions of the OS. **osver 11** is to be used for Solaris 11 and newer versions of the OS.

- **x.y.z** is the version number of the driver
- **<arch>** is the Solaris architecture, either **i386** for Intel or **sparc** for Sparc stations.

4. Press the **Enter** key.

The system now installs the driver and displays a series of messages ending with a successful installation message.

Upon installation of the drivers, your UltraPort cards are ready to use.

Note: A re-boot of your system is not necessary as the drivers for your UltraPort card are dynamically loadable and will be loaded as soon as any software attempts to access the associated devices.

Serial port naming conventions

Each serial port has three device nodes associated with it. Each node takes the form of a file which you can access from operating system utilities and user applications. Details of these nodes are shown in the following table where:

x is the card number (1-4)

y is a lower case letter in the range a-p. a is port 1, ..., p is port 16.

Device name	Function	Description
/dev/comfxy	Normal communications port for local "tty" devices.	Indicates normal communications port behavior.
/dev/term/comfxy		
/dev/cua/comfxy	Modem port	Indicates that an open on a port will not complete unless DCD is present

These mappings can be altered by careful modification of the **mkdev** and **startcomf** scripts in **/usr/lib/comf/** directory.


Configuring serial ports using the Admintool

The software provided with the Solaris operating system includes a utility called **admintool** which allows you to configure the extra serial ports you have added to your system.

To configure serial ports with **admintool** proceed as follows:


1. At the command prompt, type **admintool**

The **Admintool: Users** window is now displayed as shown in the next picture.

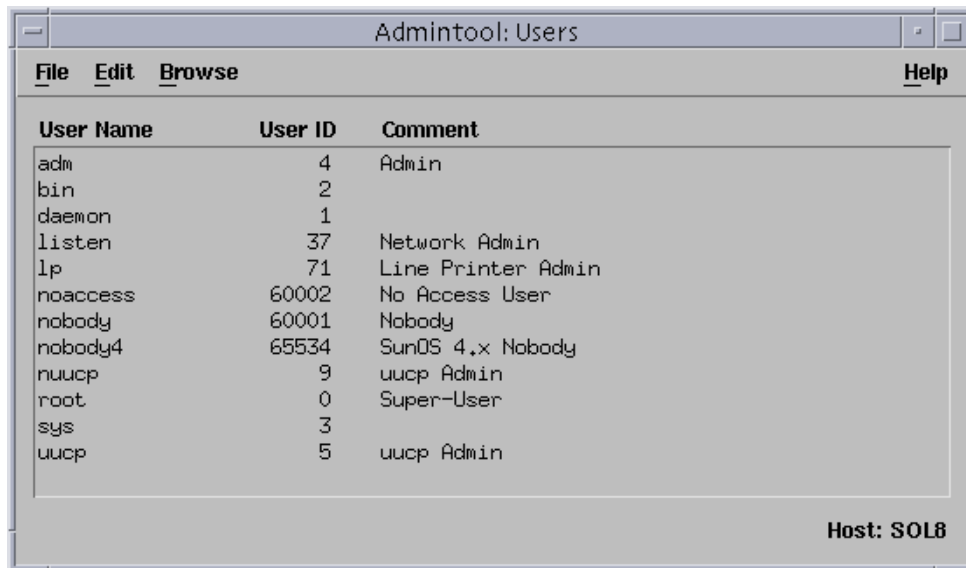

2. In the **Admintool: Users** window, click on **Browse > Serial Ports**.

The **Admintool: Serial Ports** window is now displayed showing all serial ports currently present on the system

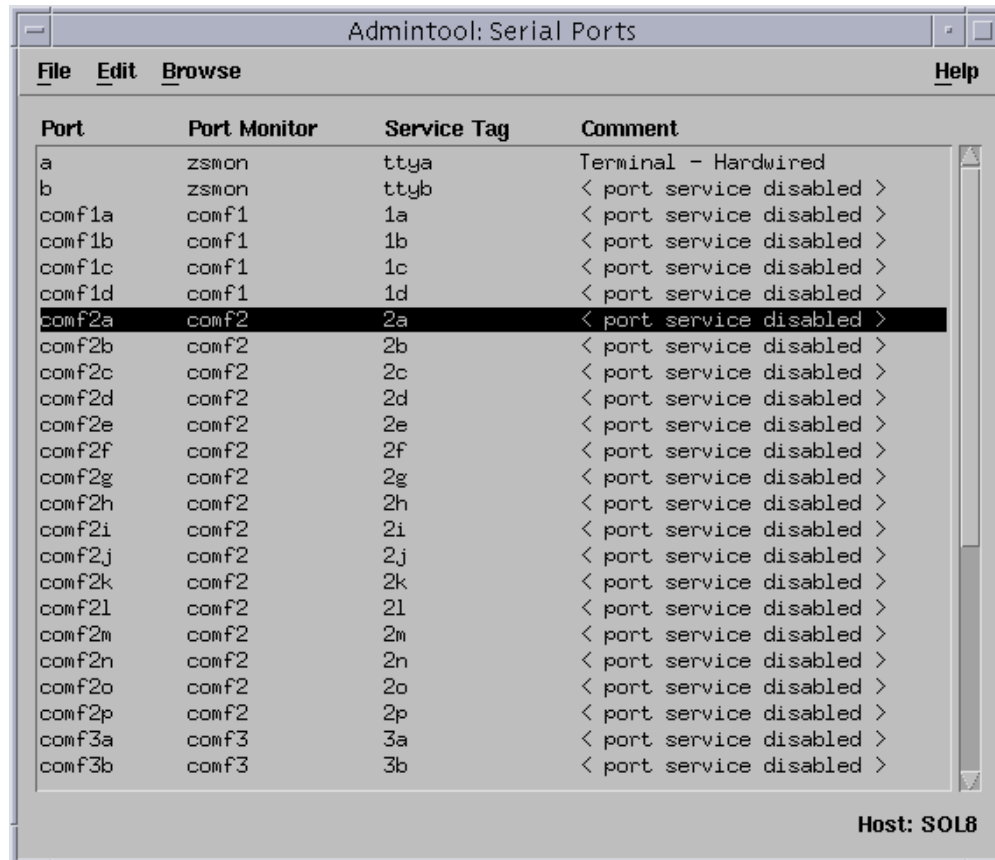

The screenshot shows a window titled "Admintool: Serial Ports" with a menu bar containing "File", "Edit", "Browse", and "Help". The main area contains a table with four columns: "Port", "Port Monitor", "Service Tag", and "Comment". The table lists various serial ports, with "comf2a" highlighted. The "Comment" column for most ports indicates that the service is disabled. The host name "SOL8" is displayed in the bottom right corner.

Port	Port Monitor	Service Tag	Comment
a	zsmcn	ttya	Terminal - Hardwired
b	zsmcn	tyyb	< port service disabled >
comf1a	comf1	1a	< port service disabled >
comf1b	comf1	1b	< port service disabled >
comf1c	comf1	1c	< port service disabled >
comf1d	comf1	1d	< port service disabled >
comf2a	comf2	2a	< port service disabled >
comf2b	comf2	2b	< port service disabled >
comf2c	comf2	2c	< port service disabled >
comf2d	comf2	2d	< port service disabled >
comf2e	comf2	2e	< port service disabled >
comf2f	comf2	2f	< port service disabled >
comf2g	comf2	2g	< port service disabled >
comf2h	comf2	2h	< port service disabled >
comf2i	comf2	2i	< port service disabled >
comf2j	comf2	2j	< port service disabled >
comf2k	comf2	2k	< port service disabled >
comf2l	comf2	2l	< port service disabled >
comf2m	comf2	2m	< port service disabled >
comf2n	comf2	2n	< port service disabled >
comf2o	comf2	2o	< port service disabled >
comf2p	comf2	2p	< port service disabled >
comf3a	comf3	3a	< port service disabled >
comf3b	comf3	3b	< port service disabled >

Host: SOL8

- In the **Admintool: Serial Ports** window, select the port you want to configure. To configure the port, click on **Edit > Modify**.

The **Admintool: Modify Serial Port** window is now displayed.

The screenshot shows the 'Admintool: Modify Serial Port' window. At the top, the title bar reads 'Admintool: Modify Serial Port'. Below the title bar, there are two sections. The first section contains a 'Template:' dropdown menu set to 'Terminal - Hardwired' and three radio buttons for 'Detail': 'Basic' (selected), 'More', and 'Expert'. The second section contains 'Port: comf1a', a 'Service Enable' checkbox (unchecked), 'Baud Rate: Perle_X', and a 'Terminal Type:' text field. At the bottom, there are five buttons: 'OK', 'Apply', 'Reset', 'Cancel', and 'Help'.

In the **Admintool: Modify Serial Port** window you can click on the **Expert** button to show more fields, as shown in the next picture.

The screenshot shows the 'Admintool: Modify Serial Port' window with the 'Expert' detail level selected. The 'Detail' radio buttons are now 'Basic', 'More', and 'Expert' (selected). The 'Service Enable' checkbox is now checked. Below this, there are two columns of options. The left column has 'Options:' with 'Initialize Only' (unchecked), 'Bidirectional' (unchecked), and 'Software Carrier' (checked). The right column has 'Login Prompt:' (comf1a login:), 'Comment:' (Terminal - Hardwired), 'Service Tag: 1a', and 'Port Monitor Tag: comf1'. Below these are 'Expert Options:' with 'Create utmp Entry' (checked) and 'Connect on Carrier' (unchecked). The right column has 'Service:' (usr/bin/login), 'Streams Modules:' (ldterm, ttcompat), and 'Timeout (secs): Never'. At the bottom, the same five buttons ('OK', 'Apply', 'Reset', 'Cancel', 'Help') are present.

- In the **Admintool: Modify Serial Port** window, set the parameters you require.

Note: Because the system does not support the selection of speeds above 460800 bps, lower baud rates have been permanently remapped to support higher port speeds. Remapped speeds are shown in the next table. Therefore the lowest baud rate supported is 75 bps

Selected speed (bps)	Actual speed (bps)
50	921600

- In the **Admintool: Modify Serial Port** window, click on OK to accept the changes you have made and close the window.
- Repeat steps 3. to 5. until you have configured the serial ports for all the host cards you require.
- In the Serial Manager menu click on **Host > Quit** to quit Serial Manager and close the window.


Using The Solaris Management Console For Solaris 10

This sections describes how to add logins and remove logins using the Solaris Management Console for Solaris version 10.


Adding Logins to Serial Ports

You can add a login on a serial port using the Solaris Management Console as follows:

1. In the Solaris desktop, click on the **Tools** toolbar arrow to get the Tools menu as shown below.
2. Select **Solaris Management Console** to start the application.

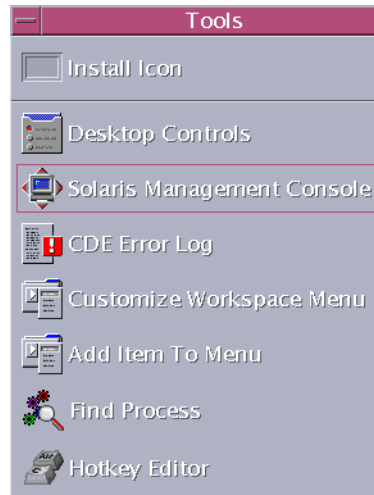


3. In the Solaris Management Console window, select **Management Tools, Devices and Hardware, Serial Ports** in the left-hand navigation tree. You will be prompted to login as root. After you have successfully logged in, the Solaris Management Console displays.

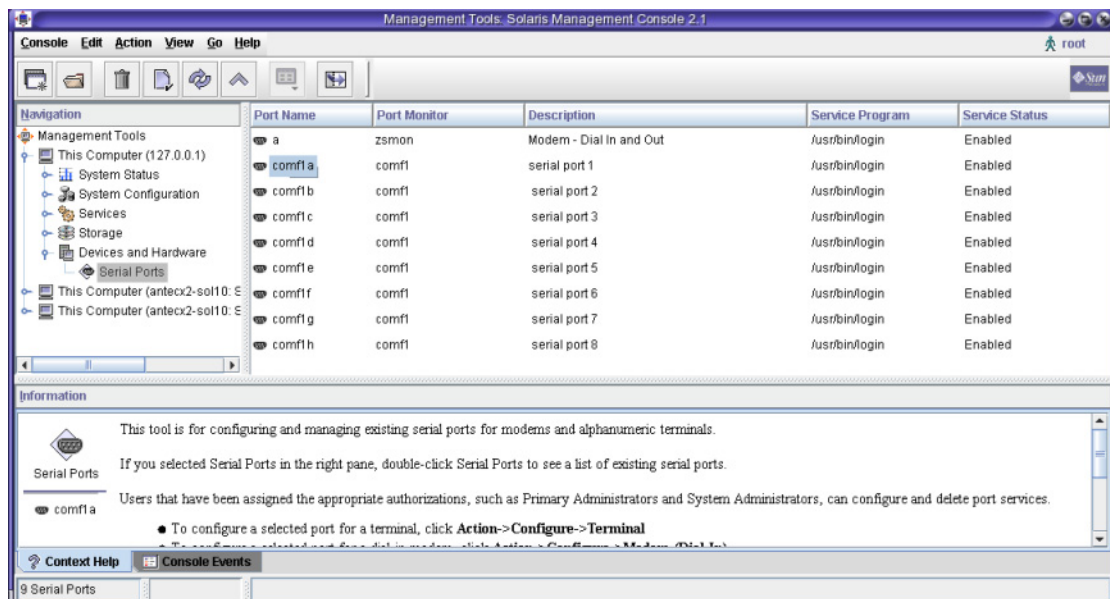


- Double-click the port that you want to configure as a login port. On the **Basic** tab, **Enable** the **Service Status**. Optionally type in a new **Terminal Type**, **Login Prompt**, and/or **Baud Rate**. Note that the **Baud Rate** field is actually a `/etc/ttydefs` label; for example, 115200E would be valid.

Note: Because the system does not support the selection of speeds above 460800 bps, lower baud rates have been permanently remapped to support higher port speeds. Remapped speeds are shown in the next table. Therefore the lowest baud rate supported is 75 bps

Selected speed (bps)	Actual speed (bps)
50	921600

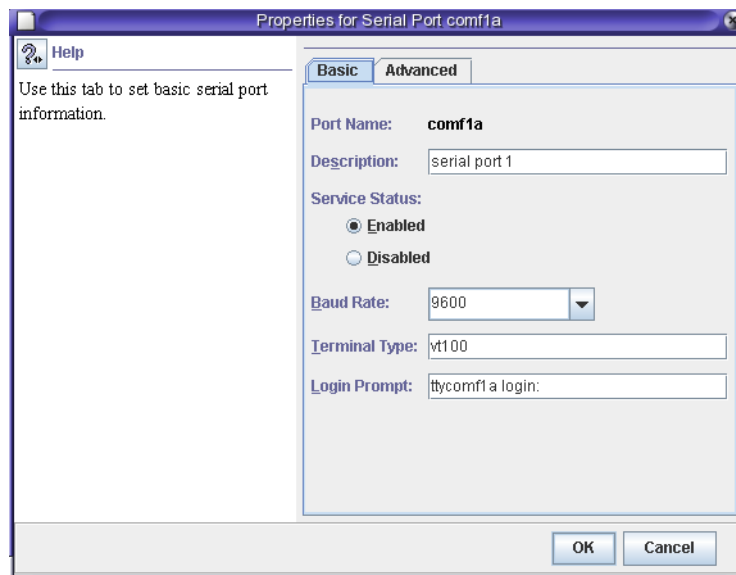


- On the **Advanced** tab, select **Hardware** and change the Port Monitor to `comf` (the Ultraport Port monitor).

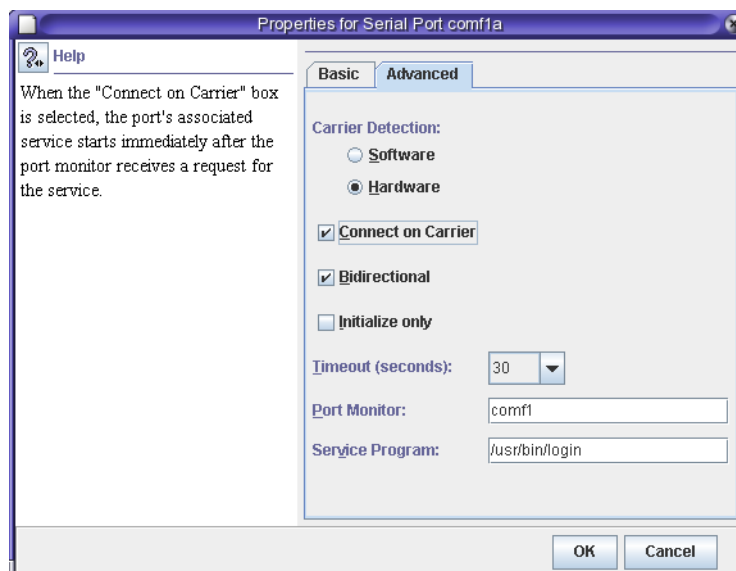


Removing Terminals

To remove a terminal on a serial port use the Solaris Management Console as follows:

1. In the Solaris desktop, click on the **Tools** toolbar arrow to get the Tools menu as shown below.
2. Select Solaris Management Console to start the application.

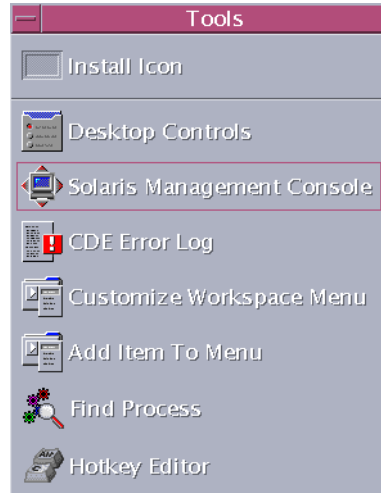

3. In the Solaris Management Console window, select Management Tools, Devices and Hardware, Serial Ports in the left-hand navigation tree. You will be prompted to login as root. After you have successfully logged in, the Solaris Management Console displays.

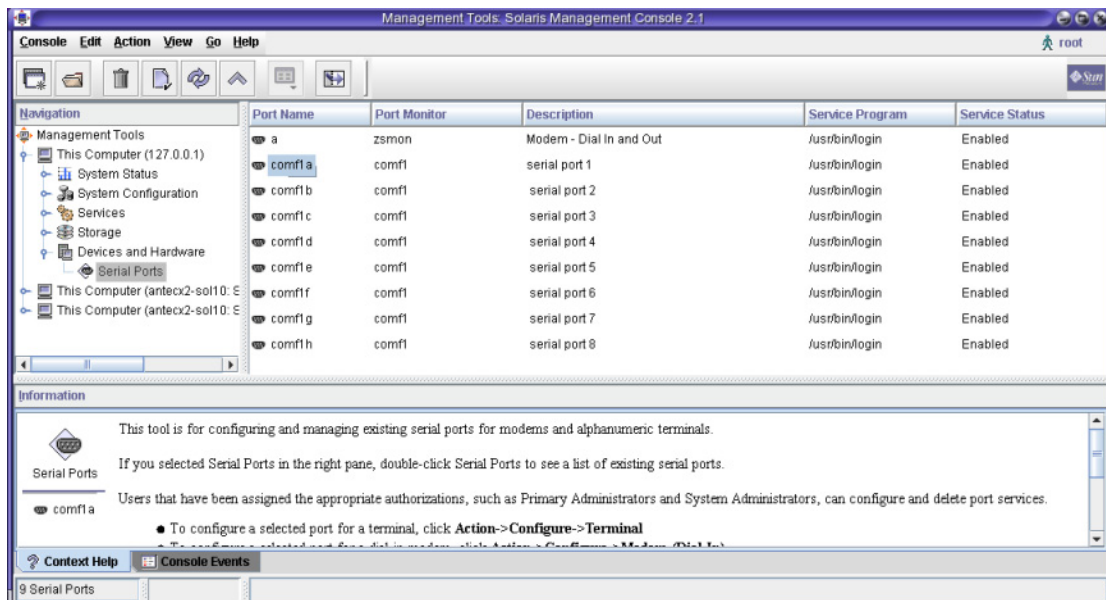

4. Right-click on the terminal you want to remove and select **Delete Port Service** and then click **Ok**.

Using SMF Services For Solaris 11

This section will give a brief example of how to add logins and remove logins using the SMF service `/system/console-login`. For more details see the Solaris 11 documentation.

Adding Logins to Serial Ports

To add a login on an UltraPort serial port enter the following commands:

```
# svccfg -s svc:/system/console-login "add term1"
# svccfg -s svc:/system/console-login:term1 "addpg ttymon application"
# svccfg -s svc:/system/console-login:term1 "setprop ttymon/device = /dev/term/comf1a"
# svccfg -s svc:/system/console-login:term1 "setprop ttymon/terminal_type = vt100"
# svccfg -s svc:/system/console-login:term1 "setprop ttymon/label = Perle_Z"
# svcadm refresh svc:/system/console-login:term1
# svcadm enable svc:/system/console-login:term1
```

The commands above creates a new console-login service called **term1** but any name can be used. The service is assigned the UltraPort device `/dev/term/comf1a`. A label from the `/etc/ttydefs` file is then configured for this port to assign baud rate and other serial port parameters. In this example the label **Perle_Z** is used which was added to the `ttydefs` file by the UltraPort installation process.

Note: Because the system does not support the selection of speeds above 460800 bps, lower baud rates have been permanently remapped to support higher port speeds. Remapped speeds are shown in the next table. Therefore the lowest baud rate supported is 75 bps

Selected speed (bps)	Actual speed (bps)
50	921600

Removing Terminals

To remove a terminal on a serial port you should first logout of any active session on the terminal and then enter the following commands on a system console:

```
# svcadm disable svc:/system/console-login:term1
# svccfg -s svc:/system/console-login delete term1
```

Setultrap Interface Protocol Configuration Utility (UltraPort SI only)

Perle provides a command line utility that allows the user to configure each UltraPort SI serial ports for features EIA-232, EIA-422, EIA-485 full duplex and EIA-485 half duplex.

Note: The default interface protocol for the Perle UltraPort SI cards is EIA-232.

Command Line Interface

```
setultrap -f device_name -l
setultrap -f device_name -x baud-multiplier
setultrap -f device_name -m 232 [-s fast|slow]
setultrap -f device_name -m 422 [-s fast|slow] [-t term|unterm]
setultrap -f device_name -m 485fdx [-s fast|slow] [-t term|unterm] [-a auto|rts]
    [-b 0-15]
setultrap -f device_name -m 485hdx [-s fast|slow] [-t term|unterm]
    [-e echoon|echooff] [-a auto|rts] [-b 0-15]
-l list protocol configuration for serial device(s)
-x set baudrate multiplier for serial devices(s)
-m set interface protocol for serial device(s)
```

Option description	Configuration option	232	422	485hdx	485fdx
specifies the port to apply the configuration option to	-f	required	required	required	required
Lists the serial ports configuration	-l	optional	optional	optional	optional
Interface mode	-m	default 232	optional 422	optional 485hdx	optional 485fdx
Baud rate multiplier	-x	optional (1,2,4,8, 16,32)	optional (1,2,4,8, 16,32)	optional (1,2,4,8, 16,32)	optional (1,2,4,8, 16,32)
Slew rate limiting	-s	optional fast/slow	optional fast/slow	optional fast/slow	optional fast/slow
Line termination	-t	N/A	optional term/unterm	optional term/unterm	optional term/unterm
EIA-485 HDX local echo	-e	N/A	N/A	optional echoon/echoff	N/A
EIA-485 TX Driver Control	-a	N/A	N/A	optional auto/rts	optional auto/rts
Auto EIA-485 bit delay	-b	N/A	N/A	optional (0 -15)	optional (0 -15)

- f Specifies the port the action should be taken on.
 /dev/comf1a - specifies port 1
 /dev/comf2a, /dev/comf2p -specifies port 1 through port 64 on card 2
- l **Lists** protocol configuration for each serial port configured on the UltraPort SI.
 /dev/comf1a 232 slow term 1
 /dev/comf1a 485fdx fast term auto 5 1
 The first example shows a device named ttyz1 configured for protocol mode EIA-232, slew rate limiting is set to slow, termination is on, and the baud rate multiplier is 1
 The second example shows device named ttyz1 configured for protocol mode EIA-485fdx, slew rate limiting is set to fast, termination is on, EIA-485 HDX TX Driver Control is set to auto with bit delay of 5 bits and the baud rate multiplier is 1
- m **Interface mode:** The valid software switchable protocol types are EIA-232, EIA-422, EIA-485 Full Duplex and EIA-485 Half Duplex. Each port on the UltraPort SI are independent of each other and therefore you may select different protocols per serial port.
- x **Baud Rate multiplier:** The baud rate multiplier allows the user to multiply the configured baud rate by 1, 2, 4, 8,16 or 32, hence achieving greater speeds on the UltraPort SI serial interfaces. This is applicable for each protocol type selected. Baud rates for EIA-232 are up to 921.6 Kbps per serial port. Baud rates for EIA-422/EIA-485 are up to 3.686 Mbps per serial port.
- s **Slew Rate Limiting:** The default setting for slew rate limiting is disabled. This will allow higher baud rate speeds on each EIA interface port. Slew rate limiting enabled, minimizes EMI and reduces reflections caused by improperly terminated cables. Operation in slew rate limited mode reduces the amplitudes of high-frequency harmonics.
- t **Line Termination:** The line termination parameter is not changeable by the user in EIA-232 mode. However both EIA-422 and EIA-485 modes are defaulted to disabled but can be enabled by the user if needed.
- e **EIA-485 HDX Local Echo:** Local echo by default is on. This parameter applies only to EIA-485 half duplex mode. All characters will be echoed to the user and transmitted across the serial ports. Some EIA-485 applications require local echo to be enable in order to monitor the loopback data to determine that line contention has occurred. If your application cannot handle loopback data the local echo should be disabled.
- a **EIA-485 TX Driver Control:** The default for this field is AUTO. When Auto is set the UltraPort SI will automatically detect the beginning and the ending of data being transmitted in order to enable and disable the transmit line. When the field is set to RTS it is the host application's responsibility to enable and disable the transmit line via the RTS handshake line when it wants to send data.
- b **Auto EIA-485 Bit Delay:** By default this field is set to 0 delay. This field is only applicable if you have configured EIA-485 TX Driver Control to AUTO. Values for this field are 0 through 15 bits.
- h **Help:** Displays the setultrap usage screen

Note: The port must be closed and then opened for the new parameters to take effect.

Examples

The following examples show typical user applications.

Example 1: List options configured for serial port 1 through 16:

```
etc/setultrap -f /dev/comf1a,/dev/comf1p -l
```

Example 2: Set serial port 1 through 16 to interface type EIA-422

```
etc/setultrap -f /dev/comf1a,/dev/comf1p -m 422
```

Example 3: Configure ports 1 to 4 to EIA-485 full duplex

```
etc/setultrap -f /dev/comf1a,/dev/comf1d -m 485fdx
```

Example 4: Set serial port comf1a to EIA-485 half duplex termination enabled, control bit-delay 5

```
etc/setultrap -f /dev/comf1a -m 485hdx -t term -b 5
```

These commands may be added to a startup script or put at the end of the `/etc/inittab` file, to cause them to run automatically whenever the system is started. A sample commented out startup script is (`/etc/init.setultrap`) supplied with this driver.

Removing drivers and utilities from your system

To remove the software drivers from your system under the Solaris operating system proceed as follows:

1. At the command prompt, type **pkgrm comf** and press **Enter**

The driver and associated utilities are now removed from your system.



Installing On SCO

Introduction

You need to read this chapter if you want to install UltraPort, UltraPort SI, and UltraPort Express serial adaptor cards, associated hardware and software on SCO O/S.

The following SCO Operating Systems are supported;

- SCO Open Server 5
- SCO Open Server 6
- SCO Unixware

Downloading the driver from the Perle web site

You can install the UltraPort driver and utility software from the Perle web site. To do this proceed as follows:

1. On your PC, start the Internet browser you want to use.
2. Within your Internet browser window, select the software directory using the following URL:
<http://www.perle.com/downloads>
3. Select your product under the “Serial & Parallel Cards” option.
4. Next, select your operating system.
5. To download the driver, simply click on the version number under the “Drivers” tab.

Installing under SCO OpenServer5 and OpenServer6.

General installation procedure for SCO OpenServer

The general procedure for installing and configuring host cards, drivers software and associated utilities for the SCO OpenServer operating system is as follows:

1. Install any UltraPort, UltraPort SI, and UltraPort Express cards you require into your system. See [Installing/Removing Host Cards And Cable Accessories](#) on page 10
2. Install the SPEED SCO OpenServer drivers and utilities onto your system using the procedures described in [Installing device drivers and utilities](#) on page 63.
3. If required, remove any host cards you want from your system. See [Installing/Removing Host Cards And Cable Accessories](#) on page 10.
4. Using the **Port Configuration tool**, configure the serial ports you have added to the system. See [Configuring serial ports](#) on page 80.

Your system can now use the serial adaptor cards you have installed. If required, you can reconfigure serial ports following initial installation.

Installing device drivers and utilities

To install the SPEED device drivers and utilities for the SCO OpenServer operating system proceed as follows:

1. Login to your system as super user.
2. Load the CDROM into your system CD drive.
3. At the command prompt, make a directory for your installation by typing:

```
mkdir /cdrom
```

4. Mount the CDROM file system using the following commands:

```
mount -f ISO9660 -r /dev/cd0 /cdrom
```

Note: The example above shows the directory name as **/cdrom**. You can either use this name or use another directory name to suit your requirements. For example, **/mnt**.


5. Browse the driver directory to obtain the path to the driver to be used in step 11.

Examples:


```
ls /cdrom/drivers/ultraport/openserver5
```

```
ls /cdrom/drivers/ultraport/openserver6
```


6. In the SCO OpenServer desktop, double click on the System Administration folder. The System Administration window is now displayed.
7. In the System Administration window, double click on the software manager icon. The Software Manager window is now displayed.

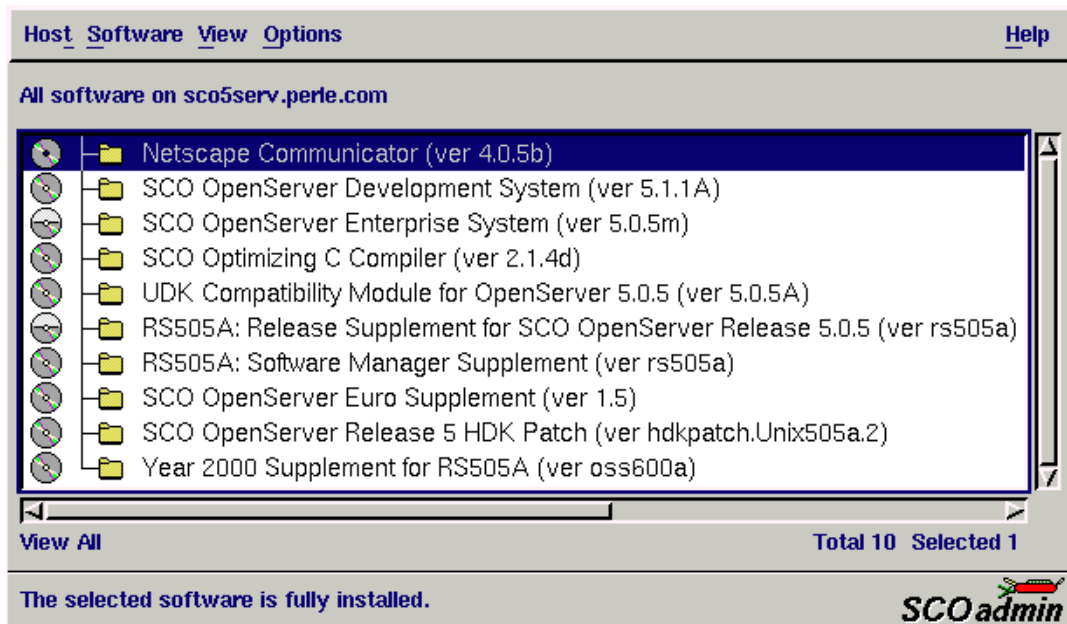


- In the Software Manager menu, click on **Software > Install New**.
The Begin Installation window is now displayed as shown in the next picture.

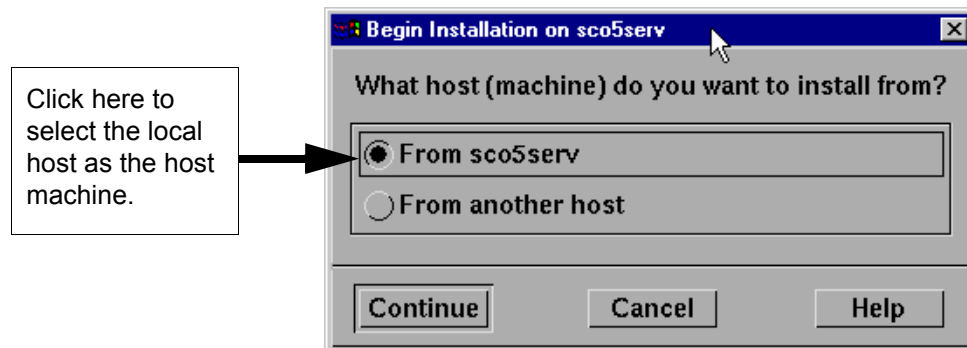

- In the Begin Installation window, select the local host as the machine to install from by clicking on the **From localhostname** button and then click on **Continue**.
The Select Media window is now displayed.

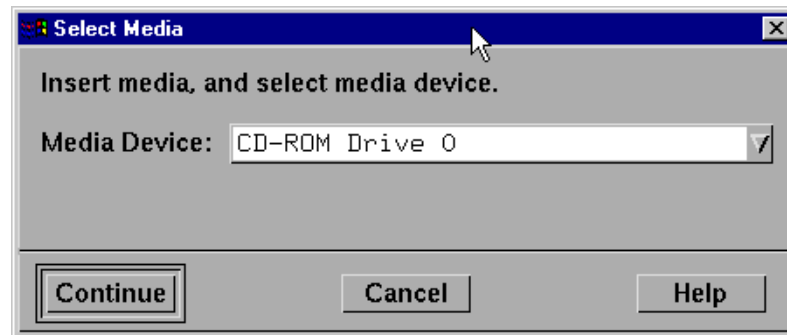

- In the Select Media window, using the **Media Device** selector choose the **Media Images** option then click on **Continue**.
The Enter Image Directory window is now displayed.

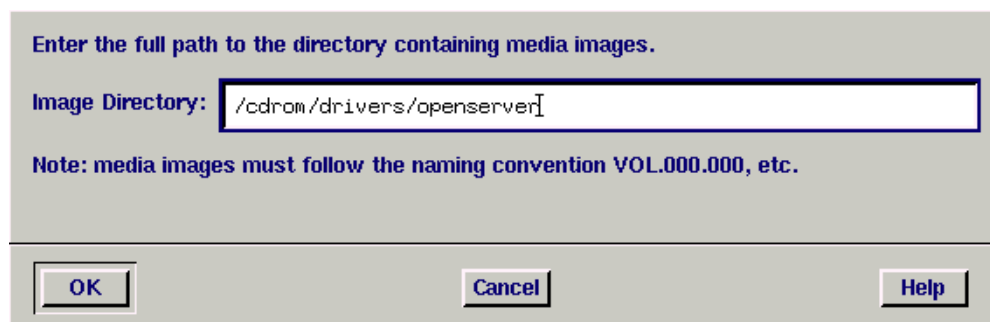

11. In the Enter Image Directory window, enter the following in the Image directory field:


/cdrom/drivers/openserver5 - for SCO OpenServer 5.

/cdrom/drivers/openserver6 - for SCO OpenServer 6.

Note: The example and picture above show a directory name including /cdrom, You can either include this name in the path or use another directory name to suit your requirements. For example, /mnt.

12. In the Enter Image Directory window, click on **OK**.

The Install Selection window is now displayed.

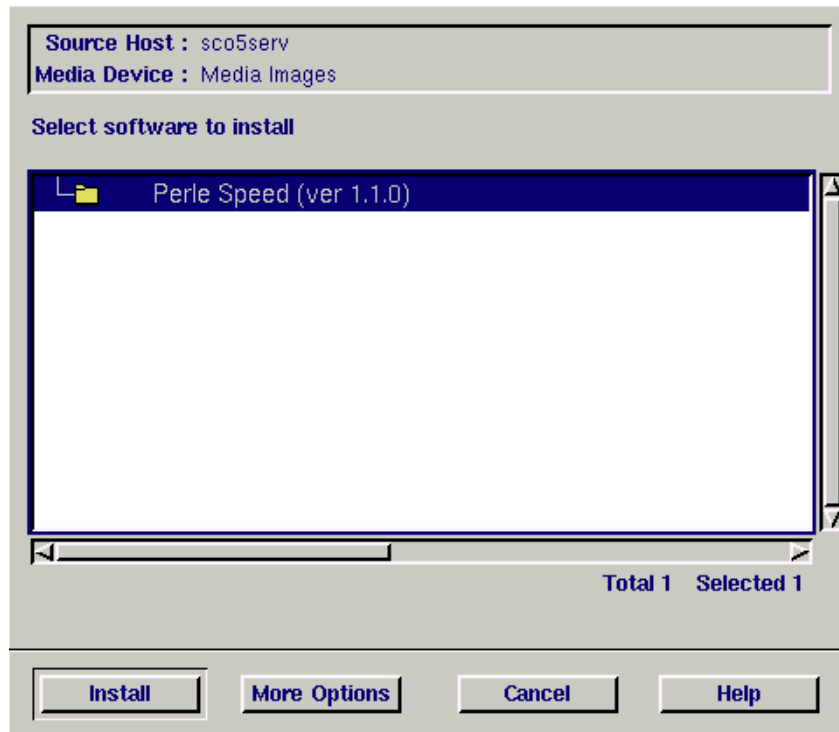


13. In the Install Selection window, click on the **Install** button.

The following progress message is now displayed.

```
Installing      : Selected Software
Installation Phase : Extracting control files
Installation Status : Executing cqs script /opt/K/Perle/SPD_Drivers/1.1.0/cntl/cqs
```

The above window will display various progress messages and then the Speed Installation Options window will be displayed.

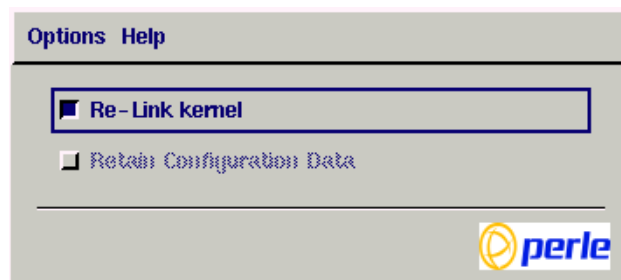

14. If required, in the Speed Installation Options window, select the **Re-Link kernel** option.

Note: If you are installing more than one driver, you can de-select this option until you have installed all the drivers and utilities you require to save time.


15. In the Speed Window Installation menu, click on **Options > Exit** to close the window and continue the installation process.

If you select **Re-link kernel**, a message window is displayed at the end of the driver installation prompting you to re-boot the system.



16. In the message window click on **OK** to continue the installation process.

The following message is now displayed upon completion of the installation process.

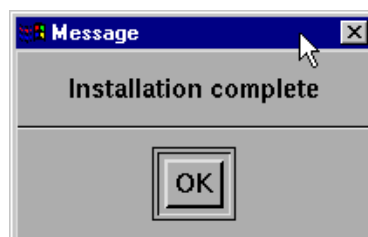

17. In the message window, click on **OK** to close the window.

The software manager window is now updated to show the driver you have installed as shown in the next picture.



18. In the Software Manager window, click on the **Host > Exit** menu option to close the window.

19. Shut down your system and turn the power off.

You can now continue with the rest of the installation process see [General installation procedure for SCO OpenServer](#) on page 62.

Serial port naming conventions

Each serial port has three device nodes associated with it. Each node takes the form of a file which you can access from operating system utilities and user applications. Details of these nodes are shown in the next table.

Device name	Function	Description	Location
ttyz1	Normal communications port for local "tty" devices.	Indicates normal communications port behavior.	/dev
ttyZ1	Modem port	Indicates that an open on a port will not complete unless DCD is present	/dev
ttyz1p	Transparent printer port.	Indicates that device should only be used for transparent printing.	/dev

Configuring serial ports

The Port Configuration utility allows you to configure the SPEED serial ports you have installed on your system. To do this proceed as follows:

Note: If you want to perform transparent printing from any of the terminals attached to your system, you need to check the contents of the **printcap.spd** file to see if the terminal type you are using is supported. To do this proceed as follows:


1. Using a text editor, go to the **/etc** directory and open the file called **printcap.spd**
2. Check the contents of the **printcap.spd** file to see if the terminal type you are using is supported. See [page 113](#) in **Appendix A: Transparent Printing** for the syntax of the entries in this file.
3. If the terminal type you are using is not supported, add an entry for the new terminal type (including the type, transparent print ON and transparent print OFF strings) to the **printcap.spd** file ([page 115](#)). See the user guide for your terminal for details of the entries required.

You can now configure the ports you want using the Port Configuration utility.

Starting the Port Configuration Utility

1. In the command prompt, type **spdpcfg** and press the **Enter** key. Alternatively use the SCO OpenServer desktop as follows:
 - a. In the SCO OpenServer desktop, open the **System Administration** folder.
The System Administration window is now displayed.
 - b. In the System Administration window, click on the **Perle Speed** folder on OpenServer 5 or **Perle-Serial** folder for OpenServer 6 to open it.
The Speed window is now displayed.
 - c. In the Speed window, click on the **Speed Port Configuration** Icon.

The Port Configuration window is now displayed as shown in the next picture.

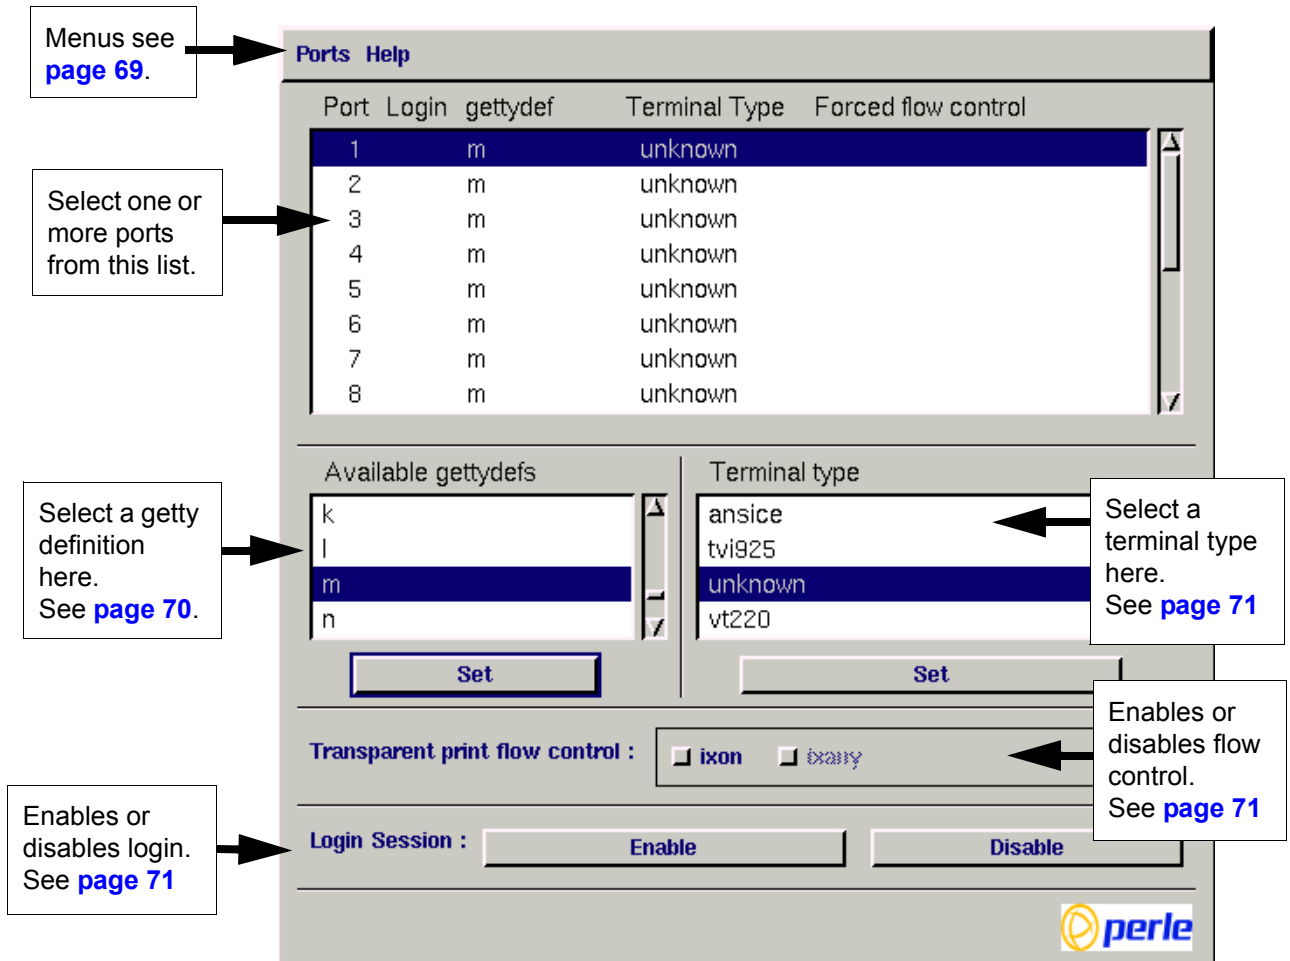

Menu map

The Port Configuration tool menu is as follows :

Menu	option	Description
Ports >	Quit	Quit Port Configuration tool without saving changes.
	Logins	Display all ports with logins enabled.
	Unconfigured	Display all ports without logins enabled.
	All	Display all ports.
	Save & Exit	Exit the Port Configuration tool and save changes.

Selecting Ports


- In the Port Configuration window, select the ports you want you want to configure by clicking on one or more items in the list of ports (example in next picture).

Note: To select multiple items which follow each other in the list, hold down the **Shift** key and click on all the items you want.
To select multiple items from anywhere in the list, hold down the **Ctrl** key and click on all the items you want.

Port	Login	gettydef	Terminal Type	Forced flow control
1	m		unknown	
2	m		unknown	
3	m		unknown	

Selecting a getty definition

- In the Port Configuration window, select the getty definition you want by double clicking on an item in the **Available gettydefs** list. Alternatively, click on the **Set** button.

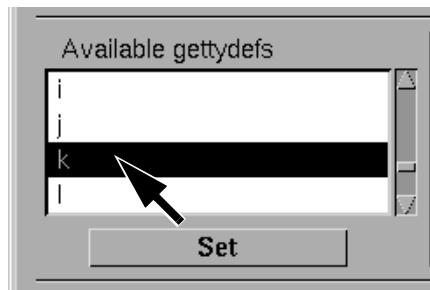

The list of currently selected ports is now updated to show the new getty definition.


Ports Help		
Port	Login	gettydef
1	k	
2	m	

New definition displayed here

Selecting terminal type

- In the Terminal type list, double click on the terminal type you want for the currently selected ports. Alternatively, single click on the item you want in the Terminal type list and press the **Set** button.

The list of ports is now updated to show the new terminal type.

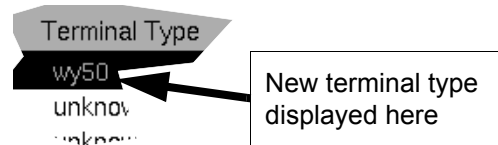

Enabling and disabling flow control

- If required, in the Port Configuration window, click on the **ixon** button to enable flow control for Transparent printing.

Note: For information about transparent printing, see [Appendix A: Transparent Printing](#).

- If required, in the Port Configuration window, click on the **ixany** button to enable sending of data on receipt of the next character (when flow control is enabled on the transparent print port).

Setting up a port login

- In the Port Configuration window, click on one of the menu options shown in the next table to display the ports with the login status you want to change. For example, ports without logins enabled.


These options allow you to filter on the type of ports you are looking for. This facility is helpful when you have a large number of ports installed.

To Display	Click menu option
All ports with logins enabled	Ports > Logins
All ports without logins enabled	Ports > Unconfigured
Display all ports	Ports > All

8. If required, in the Port Configuration window, select the ports whose logins status you want to change, then click on one of the following to change the login status:

To	Click on
Enable logins for a port	Enable button
Disable logins for a port	Disable button

The selected ports in the list now are updated show their new login status. For example if you enable the login for a port, a tick is displayed along side the port as shown in the next picture.

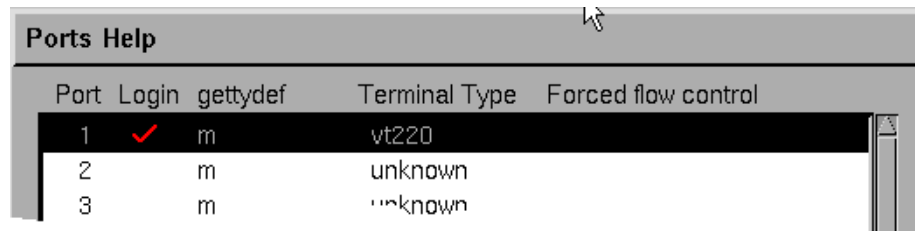

Port	Login	gettydef	Terminal Type	Forced flow control
1	✓	m	vt220	
2		m	unknown	
3		m	unknown	

9. Repeat steps 2. to 8. until you have configured all the ports you want.

Exiting the Port Configuration tool

10. In the Port Configuration menu, click on **Ports > Save & Exit**.

Note: To quit the Port Configuration tool without saving changes,

- In the Port Configuration menu, click on **Ports > Quit**.

The Port Configuration tool now closes and saves any changes you have made.

Setultrap Interface Protocol Configuration Utility (UltraPort SI only)

Perle provides a command line utility that allows the user to configure each UltraPort SI serial ports for features EIA-232, EIA-422, EIA-485 full duplex and EIA-485 half duplex.

Note: The default interface protocol for the Perle UltraPort SI cards is EIA-232.

Command Line Interface

```
setultrap -f device_name -l
setultrap -f device_name -x baud-multiplier
setultrap -f device_name -m 232 [-s fast|slow]
setultrap -f device_name -m 422 [-s fast|slow] [-t term|unterm]
setultrap -f device_name -m 485fdx [-s fast|slow] [-t term|unterm] [-a auto|rts]
    [-b 0-15]
setultrap -f device_name -m 485hdx [-s fast|slow] [-t term|unterm]
    [-e echoon|echooff] [-a auto|rts] [-b 0-15]
-l list protocol configuration for serial device(s)
-x set baudrate multiplier for serial devices(s)
-m set interface protocol for serial device(s)
```

Option description	Configuration option	232	422	485hdx	485fdx
specifies the port to apply the configuration option to	-f	required	required	required	required
Lists the serial ports configuration	-l	optional	optional	optional	optional
Interface mode	-m	default 232	optional 422	optional 485hdx	optional 485fdx
Baud rate multiplier	-x	optional (1,2,4,8, 16,32)	optional (1,2,4,8, 16,32)	optional (1,2,4,8, 16,32)	optional (1,2,4,8, 16,32)
Slew rate limiting	-s	optional fast/slow	optional fast/slow	optional fast/slow	optional fast/slow
Line termination	-t	N/A	optional term/unterm	optional term/unterm	optional term/unterm
EIA-485 HDX local echo	-e	N/A	N/A	optional echoon/echoff	N/A
EIA-485 TX Driver Control	-a	N/A	N/A	optional auto/rts	optional auto/rts
Auto EIA-485 bit delay	-b	N/A	N/A	optional (0 -15)	optional (0 -15)

- f Specifies the port the action should be taken on.
 /dev/ttyz1 - specifies port 1
 /dev/ttyz1, /dev/ttyz64 -specifies port 1 through port 64 (ranges are separated by a comma)
- l **Lists** protocol configuration for each serial port configured on the UltraPort SI.
 /dev/ttyz1 232 slow term 1
 /dev/ttyz1 485fdx fast term auto 5 1
 The first example shows a device named ttyz1 configured for protocol mode EIA-232, slew rate limiting is set to slow, termination is on, and the baud rate multiplier is 1
 The second example shows device named ttyz1 configured for protocol mode EIA-485fdx, slew rate limiting is set to fast, termination is on, EIA-485 HDX TX Driver Control is set to auto with bit delay of 5 bits and the baud rate multiplier is 1
- m **Interface mode:** The valid software switchable protocol types are EIA-232, EIA-422, EIA-485 Full Duplex and EIA-485 Half Duplex. Each port on the UltraPort SI are independent of each other and therefore you may select different protocols per serial port.
- x **Baud Rate multiplier:** The baud rate multiplier allows the user to multiply the configured baud rate by 1, 2, 4, 8,16 or 32, hence achieving greater speeds on the UltraPort SI serial interfaces. This is applicable for each protocol type selected. Baud rates for EIA-232 are up to 921.6 Kbps per serial port. Baud rates for EIA-422/EIA-485 are up to 3.686 Mbps per serial port.
- s **Slew Rate Limiting:** The default setting for slew rate limiting is disabled. This will allow higher baud rate speeds on each EIA interface port. Slew rate limiting enabled, minimizes EMI and reduces reflections caused by improperly terminated cables. Operation in slew rate limited mode reduces the amplitudes of high-frequency harmonics.
- t **Line Termination:** The line termination parameter is not changeable by the user in EIA-232 mode. However both EIA-422 and EIA-485 modes are defaulted to disabled but can be enabled by the user if needed.
- e **EIA-485 HDX Local Echo:** Local echo by default is on. This parameter applies only to EIA-485 half duplex mode. All characters will be echoed to the user and transmitted across the serial ports. Some EIA-485 applications require local echo to be enable in order to monitor the loopback data to determine that line contention has occurred. If your application cannot handle loopback data the local echo should be disabled.
- a **EIA-485 TX Driver Control:** The default for this field is AUTO. When Auto is set the UltraPort SI will automatically detect the beginning and the ending of data being transmitted in order to enable and disable the transmit line. When the field is set to RTS it is the host application's responsibility to enable and disable the transmit line via the RTS handshake line when it wants to send data.
- b **Auto EIA-485 Bit Delay:** By default this field is set to 0 delay. This field is only applicable if you have configured EIA-485 TX Driver Control to AUTO. Values for this field are 0 through 15 bits.
- h **Help:** Displays the setultrap usage screen

Note: The port must be closed and then opened for the new parameters to take effect.

Examples

The following examples show typical user applications.

Example 1: List options configured for serial port 1 through 16:

```
etc/setultrap -f /dev/ttyz0,/dev/ttyz15 -l
```

Example 2: Set serial port 1 through 16 to interface type EIA-422

```
etc/setultrap -f /dev/ttyz0,/dev/ttyz15 -m 422
```

Example 3: Configure ports 1 to 4 to EIA-485 full duplex

```
etc/setultrap -f /dev/ttyz0,/dev/ttyz3 -m 485fdx
```

Example 4: Set serial port ttyPS1 to EIA-485 half duplex termination enabled, control bit-delay 5

```
etc/setultrap -f /dev/ttyz1 -m 485hdx -t term -b 5
```

These commands may be added to a startup script to cause them to run automatically whenever the system is started. A sample commented out startup script is (/etc/init.d/rc.setultrap) supplied with this driver.

Removing drivers and utilities from your system

To remove the SPEED device drivers and utilities for the SCO OpenServer operating system proceed as follows:

1. In the SCO OpenServer desktop, double click on the System Administration folder.
The System Administration window is now displayed.
2. In the System Administration window, double click on the software manager icon.
The Software Manager window is now displayed.



3. In the Software Manager window select the driver you want to remove.
4. In the Software Manager menu, click on **Software > Remove software**.
A confirmation window is now displayed prompting you to confirm removal.
5. In the confirmation window, click on the **Remove** button.
The software is now removed and the following Kernel re-link message is now displayed as shown in the next picture (not displayed under SCO OpenServer 6).



The Kernel re-link message window now closes and the removal continues. A message is displayed upon completion.

6. In the message window, click on **OK** to close the window.
The software manager window is now updated to show the remaining software.

Installing under SCO UnixWare

General installation procedure for SCO UnixWare

The general procedure for installing and configuring host cards, drivers software and associated utilities for the SCO UnixWare operating system is as follows:

1. Install any UltraPort cards you require into your system. See [Installing/Removing Host Cards And Cable Accessories](#) on page 10

Note: Once you have installed the SPEED drivers, if you add or remove any host cards the operating system will update the kernel accordingly using the **spdconf** program. **spdconf** is run automatically during boot up and checks to see if any host cards have been added or removed since the last time the system was powered up. If anything has changed the files which identify the ports, terminals and transparent printing are updated.

2. If required, install the SPEED SCO UnixWare drivers and utilities onto your system using the procedures described in [Installing drivers and utilities](#) on page 78.
3. If required, remove any host cards you want from your system. See [Installing/Removing Host Cards And Cable Accessories](#) on page 10.
4. Using the **Serial Manager** utility, configure the serial ports you have added to the system. See [Configuring serial ports](#) on page 80.

Your system can now use the serial adaptor cards you have installed. If required, you can reconfigure serial ports following initial installation.

Installing drivers and utilities

To install the SPEED device drivers and utilities for the SCO UnixWare operating system proceed as follows:

1. Login to your system as root.
2. Load the CDROM into your system CD drive.
3. Mount the CDROM to a mount point, for example **/cdrom**.
4. At the command prompt, type:

```
pkgadd -d /cdrom/drivers/unixware/spd-uw-x.y.z.pkg spd
```

- where x.y.z is the version number of the driver.
5. Press the **Enter** key.

The system now installs the driver and displays a series of messages ending with a successful installation message.

Upon installation of the drivers, your UltraPort cards are ready to use.

Note: A re-boot of your system is not necessary as the drivers for your UltraPort card are dynamically loadable and will be loaded as soon as any software attempts to access the associated devices

Serial port naming conventions

Each serial port has three device nodes associated with it. Each node takes the form of a file which you can access from operating system utilities and user applications. Details of these nodes are shown in the next table.

Device name	Function	Description	Location
z1	Normal communications port for local “tty” devices.	Indicates normal communications port behavior.	/dev/term
Z1	Modem port	Indicates that an open on a port will not complete unless DCD is present	/dev/term
z1p	Transparent printer port.	Indicates that device should only be used for transparent printing.	/dev/term

Configuring serial ports

The software provided with the SCO UnixWare operating system includes a utility called Serial Manager which allows you to configure the extra serial ports you have added to your system.

Note: On UnixWare 7.0, you must apply a patch file called **ptf7053** before using the Serial Manager. You can find the patch on the SCO web site at:
<http://www.sco.com>

To configure serial ports with Serial Manager proceed as follows:


Note: If you want to perform transparent printing from any of the terminals attached to your system, you need to check the contents of the **printcap.spd** file to see if the terminal type you are using is supported. To do this proceed as follows:

1. Using a text editor, go to the **/etc** directory and open the file called **printcap.spd**
2. Check the contents of the **printcap.spd** file to see if the terminal type you are using is supported. See [page 113](#) in [Appendix A: Transparent Printing](#) for the syntax of the entries in this file.
3. If the terminal type you are using is not supported, add an entry for the new terminal type (including the type, transparent print ON and transparent print OFF strings) to the **printcap.spd** file ([page 115](#)). See the user guide for your terminal for details of the entries required.
4. If you have made any changes then type **spdconf** in order to re-configure the print port settings.

You can now configure the ports you want using the Serial Manager utility.


1. At the command prompt, type **scoadmin**

The System Administration window is now displayed as shown in the next picture.

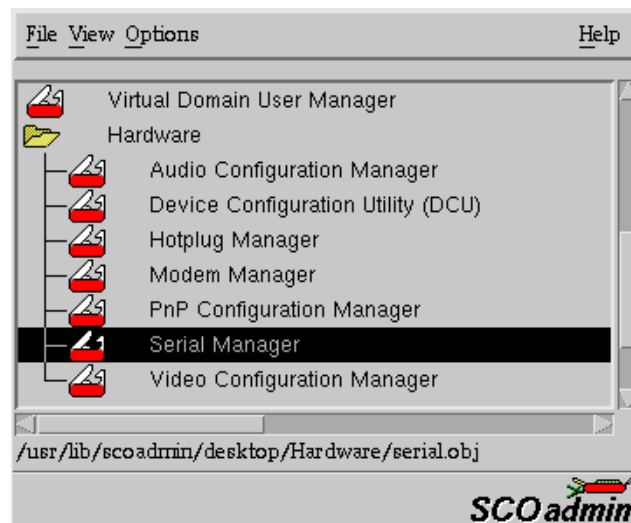


- 2. In the System Administration tool window, click on the Hardware folder and then select **Serial Manager**

The Serial Manager window is now displayed showing the host cards (including SPEED) currently present on the system.

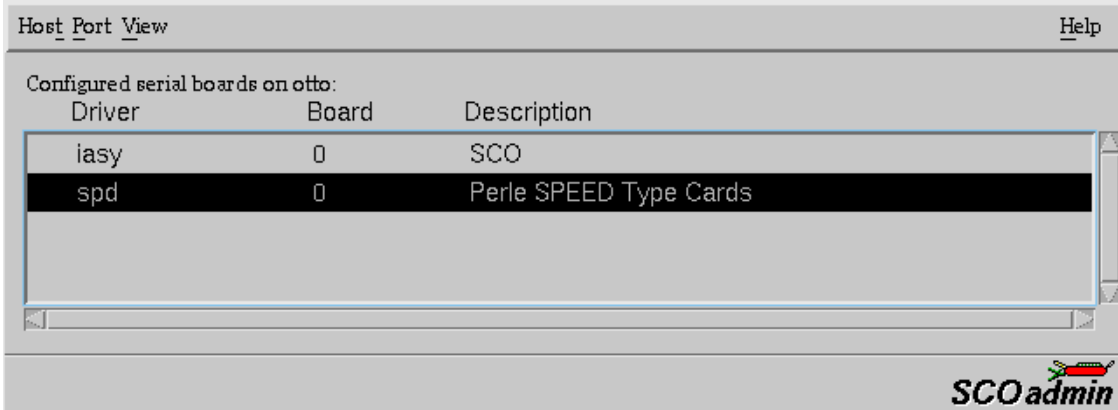


- 3. In the Serial Manager window, select the host card you want. Then in the Serial Manager menu, click on **View > Ports**.

The Serial Manager window now displays the ports available for the selected host card as shown in the next picture.

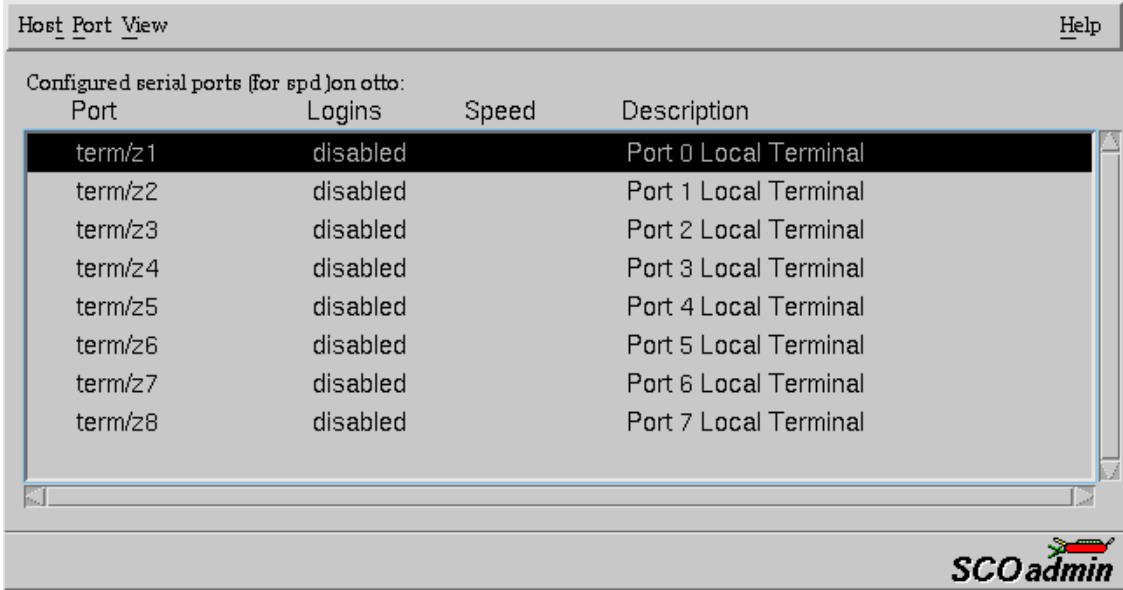

- 4. In the Serial Manager menu, click on **Port-U > Modify**.
The Modify Serial Port window is now displayed.

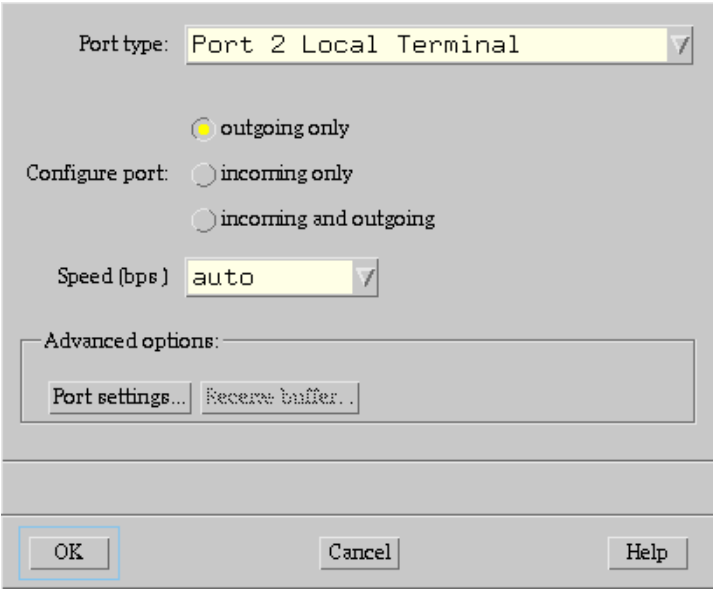


- 5. In the Modify Serial Port window, set the parameters shown in the next table

Parameter	Set to
Port Type	Select either Local Terminal or Modem
Configure port	incoming only
Speed	the speed value you require

Note: Because the system does not support the selection of speeds above 115200 bps, lower baud rates have been permanently remapped to support higher port speeds. Remapped speeds are shown in the next table. Therefore the lowest baud rate supported is 134 bps.

Selected speed (bps)	Actual speed (bps)
50	230400
75	460800
110	921600

- In the Modify Serial Port window, click on the **Port settings** button.
The Port settings window is now displayed.

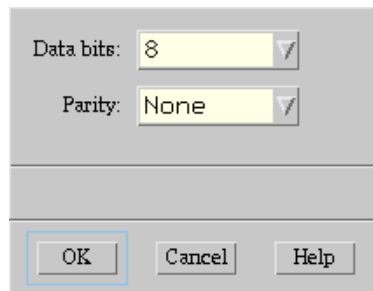

The image shows a dialog box for configuring serial port settings. It contains two dropdown menus: 'Data bits' is set to '8' and 'Parity' is set to 'None'. At the bottom, there are three buttons: 'OK', 'Cancel', and 'Help'. The 'OK' button is highlighted with a blue border.

- In the Port settings window, select the **Data bits** and **Parity** values you require and click on **OK**.
- In the Modify Serial Port window, click on OK to accept the changes you have made and close the window.
- Repeat steps 3. to 8. until you have configured the serial ports for all the host cards you require.
- In the Serial Manager menu click on **Host > Quit** to quit Serial Manager and close the window.

Setultrap Interface Protocol Configuration Utility (UltraPort SI only)

Perle provides a command line utility that allows the user to configure each UltraPort SI serial ports for features EIA-232, EIA-422, EIA-485 full duplex and EIA-485 half duplex.

Note: The default interface protocol for the Perle UltraPort SI cards is EIA-232.

Command Line Interface

```
setultrap -f device_name -l
setultrap -f device_name -x baud-multiplier
setultrap -f device_name -m 232 [-s fast|slow]
setultrap -f device_name -m 422 [-s fast|slow] [-t term|unterm]
setultrap -f device_name -m 485fdx [-s fast|slow] [-t term|unterm] [-a auto|rts]
    [-b 0-15]
setultrap -f device_name -m 485hdx [-s fast|slow] [-t term|unterm]
    [-e echoon|echooff] [-a auto|rts] [-b 0-15]
-l list protocol configuration for serial device(s)
-x set baudrate multiplier for serial devices(s)
-m set interface protocol for serial device(s)
```

Option description	Configuration option	232	422	485hdx	485fdx
specifies the port to apply the configuration option to	-f	required	required	required	required
Lists the serial ports configuration	-l	optional	optional	optional	optional
Interface mode	-m	default 232	optional 422	optional 485hdx	optional 485fdx
Baud rate multiplier	-x	optional (1,2,4,8, 16,32)	optional (1,2,4,8, 16,32)	optional (1,2,4,8, 16,32)	optional (1,2,4,8, 16,32)
Slew rate limiting	-s	optional fast/slow	optional fast/slow	optional fast/slow	optional fast/slow
Line termination	-t	N/A	optional term/unterm	optional term/unterm	optional term/unterm
EIA-485 HDX local echo	-e	N/A	N/A	optional echoon/echoff	N/A
EIA-485 TX Driver Control	-a	N/A	N/A	optional auto/rts	optional auto/rts
Auto EIA-485 bit delay	-b	N/A	N/A	optional (0 -15)	optional (0 -15)

- f Specifies the port the action should be taken on.
 /dev/ttyz1 - specifies port 1
 /dev/ttyz1, /dev/ttyz64 -specifies port 1 through port 64 (ranges are separated by a comma)
- l **Lists** protocol configuration for each serial port configured on the UltraPort SI.
 /dev/ttyz1 232 slow term 1
 /dev/ttyz1 485fdx fast term auto 5 1
 The first example shows a device named ttyz1 configured for protocol mode EIA-232, slew rate limiting is set to slow, termination is on, and the baud rate multiplier is 1
 The second example shows device named ttyz1 configured for protocol mode EIA-485fdx, slew rate limiting is set to fast, termination is on, EIA-485 HDX TX Driver Control is set to auto with bit delay of 5 bits and the baud rate multiplier is 1
- m **Interface mode:** The valid software switchable protocol types are EIA-232, EIA-422, EIA-485 Full Duplex and EIA-485 Half Duplex. Each port on the UltraPort SI are independent of each other and therefore you may select different protocols per serial port.
- x **Baud Rate multiplier:** The baud rate multiplier allows the user to multiply the configured baud rate by 1, 2, 4, 8,16 or 32, hence achieving greater speeds on the UltraPort SI serial interfaces. This is applicable for each protocol type selected. Baud rates for EIA-232 are up to 921.6 Kbps per serial port. Baud rates for EIA-422/EIA-485 are up to 3.686 Mbps per serial port.
- s **Slew Rate Limiting:** The default setting for slew rate limiting is disabled. This will allow higher baud rate speeds on each EIA interface port. Slew rate limiting enabled, minimizes EMI and reduces reflections caused by improperly terminated cables. Operation in slew rate limited mode reduces the amplitudes of high-frequency harmonics.
- t **Line Termination:** The line termination parameter is not changeable by the user in EIA-232 mode. However both EIA-422 and EIA-485 modes are defaulted to disabled but can be enabled by the user if needed.
- e **EIA-485 HDX Local Echo:** Local echo by default is on. This parameter applies only to EIA-485 half duplex mode. All characters will be echoed to the user and transmitted across the serial ports. Some EIA-485 applications require local echo to be enable in order to monitor the loopback data to determine that line contention has occurred. If your application cannot handle loopback data the local echo should be disabled.
- a **EIA-485 TX Driver Control:** The default for this field is AUTO. When Auto is set the UltraPort SI will automatically detect the beginning and the ending of data being transmitted in order to enable and disable the transmit line. When the field is set to RTS it is the host application's responsibility to enable and disable the transmit line via the RTS handshake line when it wants to send data.
- b **Auto EIA-485 Bit Delay:** By default this field is set to 0 delay. This field is only applicable if you have configured EIA-485 TX Driver Control to AUTO. Values for this field are 0 through 15 bits.
- h **Help:** Displays the setultrap usage screen

Note: The port must be closed and then opened for the new parameters to take effect.

Examples

The following examples show typical user applications.

Example 1: List options configured for serial port 1 through 16:

```
etc/setultrap -f /dev/ttyz0,/dev/ttyz15 -l
```

Example 2: Set serial port 1 through 16 to interface type EIA-422

```
etc/setultrap -f /dev/ttyz0,/dev/ttyz15 -m 422
```

Example 3: Configure ports 1 to 4 to EIA-485 full duplex

```
etc/setultrap -f /dev/ttyz0,/dev/ttyz3 -m 485fdx
```

Example 4: Set serial port ttyPS1 to EIA-485 half duplex termination enabled, control bit-delay 5

```
etc/setultrap -f /dev/ttyz1 -m 485hdx -t term -b 5
```

These commands may be added to a startup script to cause them to run automatically whenever the system is started. A sample commented out startup script is (/etc/init.d/rc.setultrap) supplied with this driver.

Removing drivers and utilities from your system

To remove the software drivers from your system under the SCO UnixWare operating system proceed as follows:

1. At the command prompt, type **pkgrm spd** and press **Enter**

The SPEED driver and associated utilities are now removed from your system.



Cabling Information

Introduction

You need to read this chapter if you want cabling information for the Perle UltraPort and UltraPort SI and UltraPort Express serial adaptor cards.

This chapter provides cabling and connector pinout information for the Perle UltraPort serial adaptor cards. Included are details of standard cables for use with UltraPort, UltraPort SI and UltraPort Express products available from Perle.

This chapter includes the following sections:

- *Definitions of Signals and Direction* on page 88
- *Host card back panel connectors and pinouts* on page 89
- *Connector box and cable guide* on page 100
- *Connector box and cable pinouts* on page 101

Definitions of Signals and Direction

EIA-232	EIA-422	EIA-485	Direction	Description
RI			In	Ring Indicator
DCD			In	Data Carrier Detect
RTS			Out	Request To Send
	RTS+		Out	Request to Send
	RTS-		Out	Request to Send
DSR			In	Data Set Ready
TXD			Out	Transmit Data
	TXD+		Out	Transmit Data
	TXD-		Out	Transmit Data
		TXD-/RXD-	In/Out	Transmit/Receive Data
		TXD+/RXD+	In/Out	Transmit/Receive Data
RXD			In	Receive Data
	RXD+	RXD+	In	Receive Data
	RXD-	RXD-	In	Receive Data
S-GND	S-GND	S-GND		Signal Ground
CTS			In	Clear to Send
	CTS+		In	Clear to Send
	CTS-		In	Clear to Send
DTR			Out	Data Terminal Ready
C-GND	C-GND	C-GND		Chassis Ground

Note: Only the UltraPort SI series of cards supports EIA-422 and EIA-485 interface modes.


Host card back panel connectors and pinouts

This section contains diagrams and pinout information for the UltraPort host card back panel connectors contains the following:

- *DB9 back panel connectors and pinout* on page 90
- *RJ45 back panel connectors and pinout* on page 91
- *VHDCI-68 Ultra SCSI back panel connectors and pinout* on page 93

DB9 back panel connectors and pinout


The following diagram shows the UltraPort2/UltraPort2 SI/UltraPort2 Express, UltraPort 1/UltraPort1 SI/UltraPort1 Express, the UltraPort1 SI Low Profile and UltraPort1 Express back panels respectively.

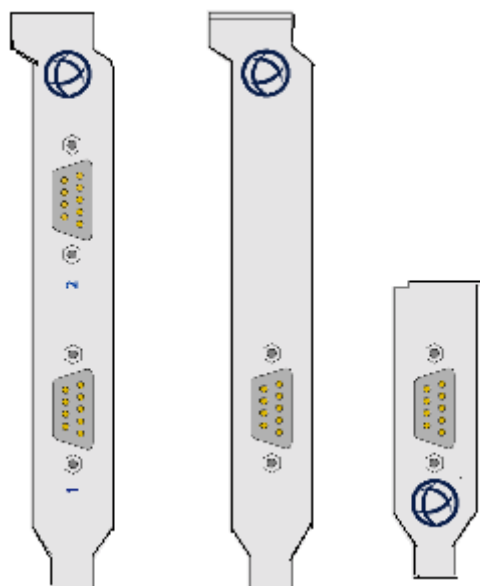

DB9M pin	EIA-232	EIA-422	EIA-485
1	DCD	CTS-	NC
2	RXD	RXD+	RXD+
3	TXD	TXD-	TXD-/RXD-
4	DTR	TXD+	TXD+/RXD+
5	S-GND	S-GND	S-GND
6	DSR	RXD-	RXD-
7	RTS	RTS-	NC
8	CTS	CTS+	NC
9	RI	RTS+	NC
Shell	C-GND	C-GND	C-GND

RJ45 back panel connectors and pinout

The following diagram shows the UltraPort4 and UltraPort4 Express cards back panel.

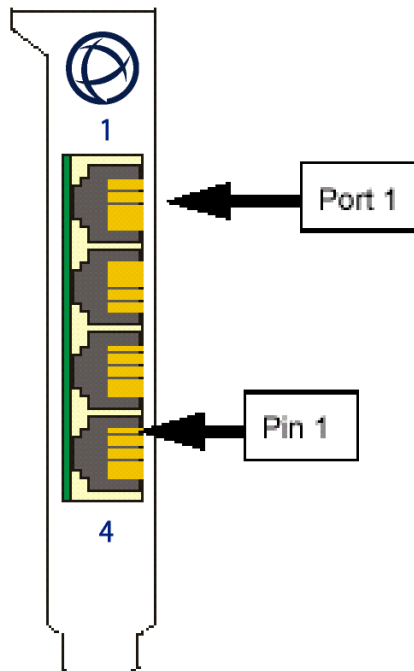


The connector pinout for each RJ45 socket fitted to the UltraPort4 and UltraPort4 Express cards are as follows:

RJ45 10-pin	RJ45 8-pin	EIA-232
1	N/A	RI
2	1	DCD
3	2	RTS
4	3	DSR
5	4	TXD
6	5	RXD
7	6	S-GND
8	7	CTS
9	8	DTR
10	N/A	
Shell	Shell	C-GND

RJ12 back panel connectors and pinout

The following diagram shows the UltraPort8i card back panel:

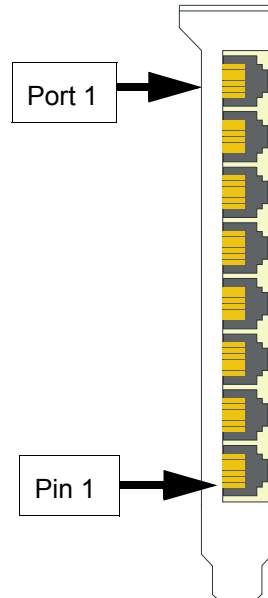


The connector pinout for each RJ12 socket fitted to the UltraPort8i and card is as follows:

RJ12 pin	EIA-232
1	DCD
2	RXD
3	DTR or RTS
4	S-GND
5	TXD
6	CTS
Shell	C-GND

VHDCI-68 Ultra SCSI back panel connectors and pinout

The following diagram shows the UltraPort4/UltraPort4 SI and UltraPort4/UltraPort4 SI Low Profile and UltraPort4 Express HD back panels respectively.

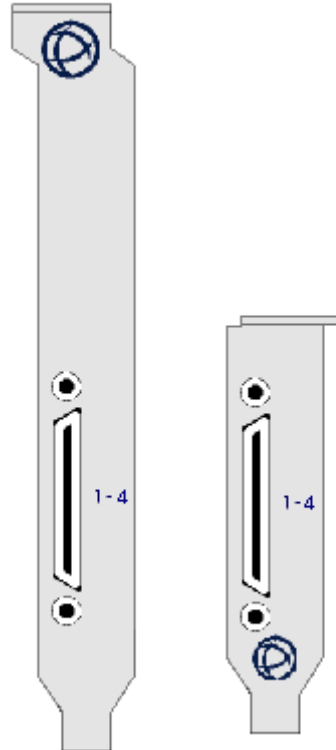


Note: The UltraPort fan-out cables need to be secured or supported in case of sudden contact or excessive weight on the cables. Please ensure that adequate caution is taken to avoid possible damage to the UltraPort card or Host system. This can be accomplished by securing the cables to a rack or to the back of the server.

The connector pinout for each VHDCI-68 Ultra SCSI connector fitted to the UltraPort4, UltraPort4 SI, and UltraPort4 Express HD is as follows:

VHDCI-68 Ultra SCSI Pin Number	EIA-232	EIA-422	EIA-485
1	RXD4	RXD4+	RXD4+
2	CTS4	CTS4+	NC
3	RI4	RTS4+	NC
4	RTS4	RTS4-	NC
5	DCD4	CTS4-	NC
6	DTR4	TXD4+	TXD4+/RXD4+
7	DSR4	RXD4-	RXD4-
8	TXD4	TXD4-	TXD4-/RXD4-
9	S-GND	S-GND	S-GND

VHDCI-68 Ultra SCSI			
Pin Number	EIA-232	EIA-422	EIA-485
10	TXD3	TXD3-	TXD3-/RXD3-
11	DSR3	RXD3-	RXD3-
12	DTR3	TXD3+	TXD3+/RXD3+
13	DCD3	CTS3-	NC
14	RTS3	RTS3-	NC
15	RI3	RTS3+	NC
16	CTS3	CTS3+	NC
17	RXD3	RXD3+	RXD3+
18	RXD2	RXD2+	RXD2+
19	CTS2	CTS2+	NC
20	RI2	RTS2+	NC
21	RTS2	RTS2-	NC
22	DCD2	CTS2-	NC
23	DTR2	TXD2+	TXD2+/RXD2+
24	DSR2	RXD2-	RXD2-
25	TXD2	TXD2-	TXD2-/RXD2-
26	S-GND	S-GND	S-GND
27	TXD1	TXD1-	TXD1-/RXD1-
28	DSR1	RXD1-	RXD1-
29	DTR1	TXD1+	TXD1+/RXD1+
30	DCD1	CTS1-	NC
31	RTS1	RTS1-	NC
32	RI1	RTS1+	NC
33	CTS1	CTS1+	NC
34	RXD1	RXD1+	RXD1+
35-42	NC	NC	NC
43	S-GND	S-GND	S-GND
44-59	NC	NC	NC
60	S-GND	S-GND	S-GND
61-68	NC	NC	NC

The following diagram shows the UltraPort8 (old standard height PCI PCB board), UltraPort16/UltraPort16 SI, UltraPort8/UltraPort8 SI, and UltraPort8 Express Low profile back panels respectively

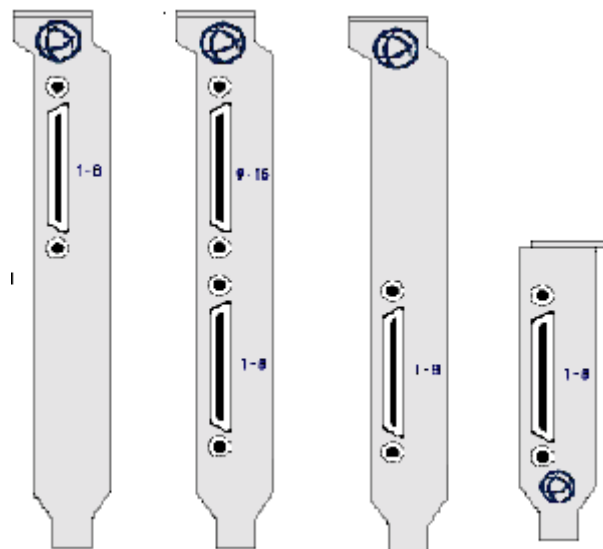

Note: The UltraPort fan-out cables need to be secured or supported in case of sudden contact or excessive weight on the cables. Please ensure that adequate caution is taken to avoid possible damage to the UltraPort card or Host system. This can be accomplished by securing the cables to a rack or to the back of the server.

The connector pinout for each VHDCI-68 Ultra SCSI connector fitted to the UltraPort8 (old standard height PCI PCB board), UltraPort16/UltraPort16 SI, UltraPort8/UltraPort8 SI, and UltraPort8 Express HD Low profile are as follows:

Ports 1-8 of VHDCI-68 Connector for UltraPort8, UltraPort8 SI, UltraPort8 Express HD, UltraPort16, and UltraPort16 SI adapter cards

VHDCI-68 Ultra SCSI Pin Number	EIA-232	EIA-422	EIA-485
1	RXD7	RXD7+	RXD7+
2	CTS7	CTS7+	NC
3	RI7	RTS7+	NC
4	RTS7	RTS7-	NC
5	DCD7	CTS7-	NC
6	DTR7	TXD7+	TXD7+/RXD7+
7	DSR7	RXD7-	RXD7-
8	TXD7	TXD7-	TXD7-/RXD7-
9	S-GND	S-GND	S-GND
10	TXD5	TXD5-	TXD5-/RXD5-
11	DSR5	RXD5-	RXD5-

VHDCI-68 Ultra			
SCSI Pin Number	EIA-232	EIA-422	EIA-485
12	DTR5	TXD5+	TXD5+/RXD5+
13	DCD5	CTS5-	NC
14	RTS5	RTS5-	NC
15	RI5	RTS5+	NC
16	CTS5	CTS5+	NC
17	RXD5	RXD5+	RXD5+
18	RXD3	RXD3+	RXD3+
19	CTS3	CTS3+	NC
20	RI3	RTS3+	NC
21	RTS3	RTS3-	NC
22	DCD3	CTS3-	NC
23	DTR3	TXD3+	TXD3+/RXD3+
24	DSR3	RXD3-	RXD3-
25	TXD3	TXD3-	TXD3-/RXD3-
26	S-GND	S-GND	S-GND
27	TXD1	TXD1-	TXD1-/RXD1-
28	DSR1	RXD1-	RXD1-
29	DTR1	TXD1+	TXD1+/RXD1+
30	DCD1	CTS1-	NC
31	RTS1	RTS1-	NC
32	RI1	RTS1+	NC
33	CTS1	CTS1+	NC
34	RXD1	RXD1+	RXD1+
35	RXD8	RXD8+	RXD8+
36	CTS8	CTS8+	NC
37	RI8	RTS8+	NC
38	RTS8	RTS8-	NC
39	DCD8	CTS8-	NC
40	DTR8	TXD8+	TXD8+/RXD8+
41	DSR8	RXD8-	RXD8-
42	TXD8	TXD8-	TXD8-/RXD8-
43	S-GND	S-GND	S-GND
44	TXD6	TXD6-	TXD6-/RXD6-
45	DSR6	RXD6-	RXD6-

VHDCI-68 Ultra SCSI Pin Number	EIA-232	EIA-422	EIA-485
46	DTR6	TXD6+	TXD6+/RXD6+
47	DCD6	CTS6-	NC
48	RTS6	RTS6-	NC
49	RI6	RTS6+	NC
50	CTS6	CTS6+	NC
51	RXD6	RXD6+	RXD6+
52	RXD4	RXD4+	RXD4+
53	CTS4	CTS4+	NC
54	RI4	RTS4+	NC
55	RTS4	RTS4-	NC
56	DCD4	CTS4-	NC
57	DTR4	TXD4+	TXD4+/RXD4+
58	DSR4	RXD4-	RXD4-
59	TXD4	TXD4-	TXD4-/RXD4-
60	S-GND	S-GND	S-GND
61	TXD2	TXD2-	TXD2-/RXD2-
62	DSR2	RXD2-	RXD2-
63	DTR2	TXD2+	TXD2+/RXD2+
64	DCD2	CTS2-	NC
65	RTS2	RTS2-	NC
66	RI2	RTS2+	NC
67	CTS2	CTS2+	NC
68	RXD2	RXD2+	RXD2+

Ports 9-16 of second VHDCI-68 Connector for UltraPort16 and UltraPort16 SI cards

VHDCI-68 Ultra SCSI Pin Number	EIA-232	EIA-422	EIA-485
1	RXD15	RXD15+	RXD15+
2	CTS15	CTS15+	NC
3	RI15	RTS15+	NC
4	RTS15	RTS15-	NC
5	DCD15	CTS15-	NC
6	DTR15	TXD15+	TXD15+/RXD15+

VHDCI-68 Ultra SCSI Pin Number	EIA-232	EIA-422	EIA-485
7	DSR15	RXD15-	RXD15-
8	TXD15	TXD15-	TXD15-//RXD15-
9	S-GND	S-GND	S-GND
10	TXD13	TXD13-	TXD13-/RXD13-
11	DSR13	RXD13-	RXD13-
12	DTR13	TXD13+	TXD13+/RXD13+
13	DCD13	CTS13-	NC
14	RTS13	RTS13-	NC
15	RI13	RTS13+	NC
16	CTS13	CTS13+	NC
17	RXD13	RXD13+	RXD13+
18	RXD11	RXD11+	RXD11+
19	CTS11	CTS11+	NC
20	RI11	RTS11+	NC
21	RTS11	RTS11-	NC
22	DCD11	CTS11-	NC
23	DTR11	TXD11+	TXD11+/RXD11+
24	DSR11	RXD11-	RXD11-
25	TXD11	TXD11-	TXD11-//RXD11-
26	S-GND	S-GND	S-GND
27	TXD9	TXD9-	TXD9-/RXD9-
28	DSR9	RXD9-	RXD9-
29	DTR9	TXD9+	TXD9+/RXD9+
30	DCD9	CTS9-	NC
31	RTS9	RTS9-	NC
32	RI9	RTS9+	NC
33	CTS9	CTS9+	NC
34	RXD9	RXD9+	RXD9+
35	RXD16	RXD16+	RXD16+
36	CTS16	CTS16+	NC
37	RI16	RTS16+	NC
38	RTS16	RTS16-	NC
39	DCD16	CTS16-	NC
40	DTR16	TXD16+	TXD16+/RXD16+

VHDCI-68 Ultra			
SCSI Pin Number	EIA-232	EIA-422	EIA-485
41	DSR16	RXD16-	RXD16-
42	TXD16	TXD16-	TXD16-//RXD16-
43	S-GND	S-GND	S-GND
44	TXD14	TXD14-	TXD14-/RXD14-
45	DSR14	RXD14-	RXD14-
46	DTR14	TXD14+	TXD14+/RXD14+
47	DCD14	CTS14-	NC
48	RTS14	RTS14-	NC
49	RI14	RTS14+	NC
50	CTS14	CTS14+	NC
51	RXD14	RXD14+	RXD14+
52	RXD12	RXD12+	RXD12+
53	CTS12	CTS12+	NC
54	RI12	RTS12+	NC
55	RTS12	RTS12-	NC
56	DCD12	CTS12-	NC
57	DTR12	TXD12+	TXD12+/RXD12+
58	DSR12	RXD12-	RXD12-
59	TXD12	TXD12-	TXD12-//RXD12-
60	S-GND	S-GND	S-GND
61	TXD10	TXD10-	TXD10-/RXD10-
62	DSR10	RXD10-	RXD10-
63	DTR10	TXD10+	TXD10+/RXD10+
64	DCD10	CTS10-	NC
65	RTS10	RTS10-	NC
66	RI10	RTS10+	NC
67	CTS10	CTS10+	NC
68	RXD10	RXD10+	RXD10+

Connector box and cable guide

The connector pinout information for the UltraPort product you are using depends on the number of ports and type of connector box or cable used as detailed in the next table:

Product	Card edge connector	Cable or connector box options	For connector pinouts see...
UltraPort4	RJ45 10-pin	RJ45 - DB25M Converter	See page 102
UltraPort4 Express		RJ45 - DB25F Converter	See page 102
		RJ45 - DB9M Converter	See page 103
		RJ45 - DB9F Converter	See page 103
		RJ45 - Speed Converter	See page 104
		RJ45 - Digi Converter	See page 105
		RJ45 - Digi ALTPIN Converter	See page 106
UltraPort 4-LP	VHDCI-68	RJ45 Connector Box	See page 107
UltraPort4 SI-LP		DB25M Connector Box	See page 108
UltraPort Express 4 HD		DB25F Connector Box	See page 108
UltraPort8		DB9M Connector Box	See page 109
UltraPort8 SI-LP		DB25M Fan-out Cable	See page 110
UltraPort8 Express HD		DB25F Fan-out Cable	See page 110
UltraPort16		DB9M Fan-out Cable	See page 111
UltraPort16 SI		DB9F Fan-out Cable	See page 111


Connector box and cable pinouts

This section contains pinout information for the UltraPort product range connector box and cable accessories and contains the following:

- [RJ45 10-pin to DB25 converter](#) on page 102
- [RJ45 10-pin to DB9 converter](#) on page 103
- [RJ45 10-pin to RJ45 SPEED converter](#) on page 104
- [RJ45 10-pin to RJ45 Digi converter](#) on page 105
- [RJ45 10-pin to RJ45 Digi ALTPIN converter](#) on page 106
- [RJ45 connector box](#) on page 107
- [DB25 connector box](#) on page 108
- [DB9 connector box](#) on page 109
- [DB25 Fan-out cable](#) on page 110
- [DB9 Fan-out cable](#) on page 111


Note: For details of which cables to use with which product, see [Connector box and cable guide](#) on page 100.

RJ45 10-pin to DB25 converter

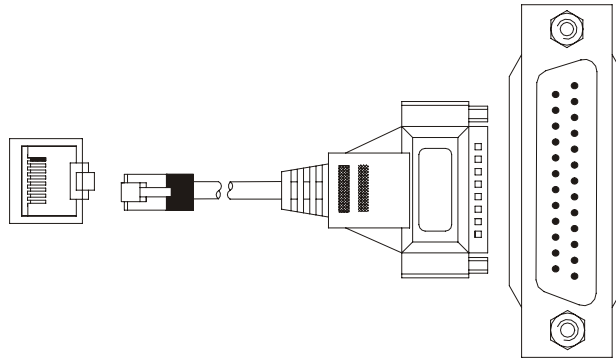


RJ45 pin	DB25 Pin	EIA-232	EIA-422	EIA-485
1	22	RI	RTS+	NC
2	8	DCD	CTS-	NC
3	4	RTS	RTS-	NC
4	6	DSR	RXD-	RXD-
5	2	TXD	TXD-	TXD-/RXD-
6	3	RXD	RXD+	RXD+
7	7	S-GND	S-GND	S-GND
8	5	CTS	CTS+	NC
9	20	DTR	TXD+	TXD+/RXD+
10	N/C			
1 & Shell	1 & Shell	C-GND	C-GND	C-GNDI

RJ45 10-pin to DB9 converter

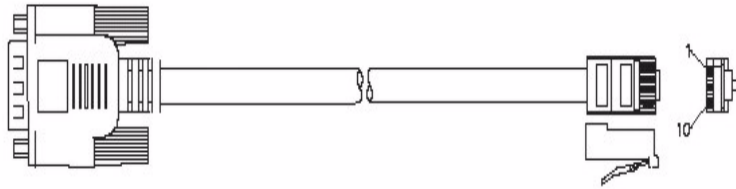


RJ45 pin	DB9 Pin	EIA-232	EIA-422	EIA-485
1	9	RI	RTS+	NC
2	1	DCD	CTS-	NC
3	7	RTS	RTS-	NC
4	6	DSR	RXD-	RXD-
5	3	TXD	TXD-	TXD-/RXD-
6	2	RXD	RXD+	RXD+
7	5	S-GND	S-GND	S-GND
8	8	CTS	CTS+	NC
9	4	DTR	TXD+	TXD+/RXD+
10	N/C			
Shell	Shell	C-GND	C-GND	C-GND

RJ45 10-pin to RJ45 SPEED converter

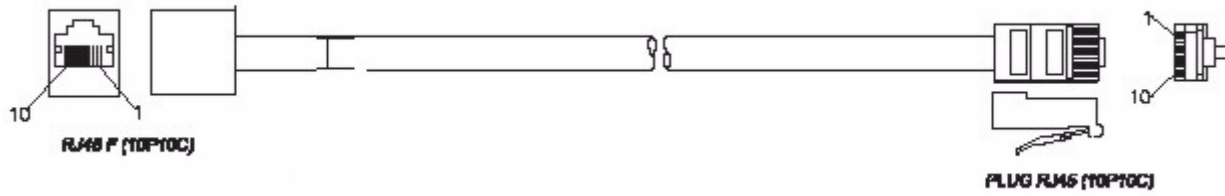


RJ45 10-pin to card	RJ45 10-pin SPEED	RJ45 8-pin SPEED	EIA-232
1	1	N/A	RI
2	2	1	DCD
3	8	7	RTS
4	4	3	DSR
5	6	5	TXD
6	7	6	RXD
7	5	4	S-GND
8	9	8	CTS
9	3	2	DTR
10	10	N/A	
Shell	Shell	Shell	C-GND

RJ45 10-pin to RJ45 Digi converter

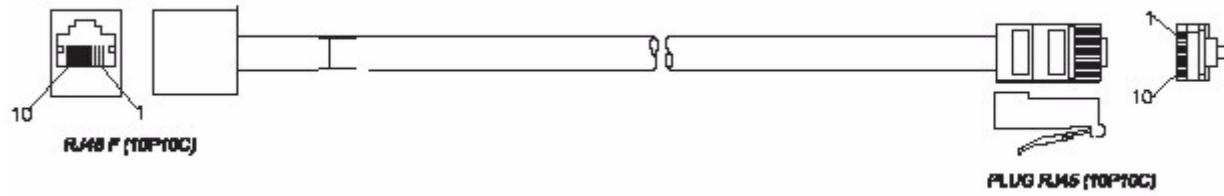


RJ45 10-pin to card	RJ45 10-pin Digi	RJ45 8-pin Digi	EIA-232
1	1	N/A	RI
2	10	N/A	DCD
3	3	2	RTS
4	2	1	DSR
5	5	4	TXD
6	6	5	RXD
7	7	6	S-GND
8	8	7	CTS
9	9	8	DTR
10	N/C	N/A	
Shell	4 & Shell	3 & Shell	C-GND

RJ45 10-pin to RJ45 Digi ALTPIN converter

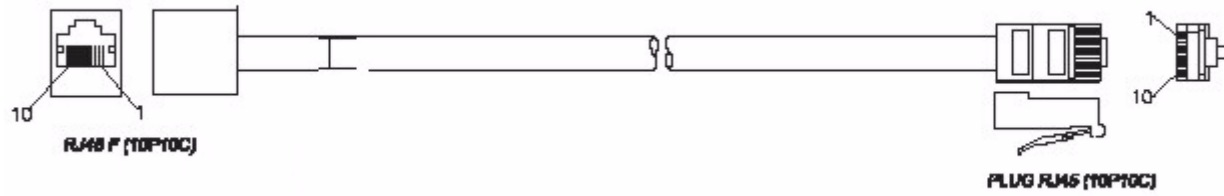

RJ45 10-pin to card	RJ45 10-pin Digi ALTPIN	RJ45 8-pin Digi ALTPIN	EIA-232
1	1	N/A	RI
2	2	1	DCD
3	3	2	RTS
4	10	N/A	DSR
5	5	4	TXD
6	6	5	RXD
7	7	6	S-GND
8	8	7	CTS
9	9	8	DTR
10	N/C	N/A	
Shell	4 & Shell	3 & Shell	C-GND


RJ45 connector box

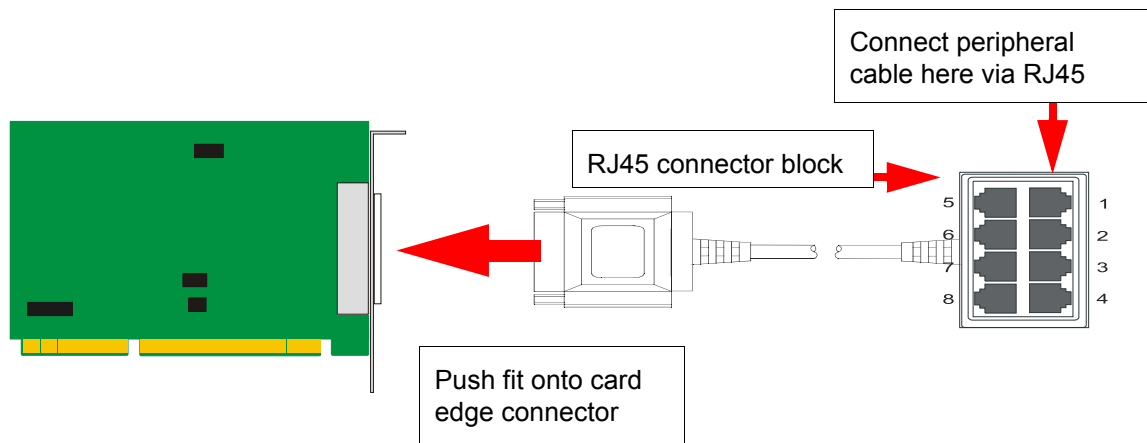

Note: The UltraPort connector box cable needs to be secured or supported in case of sudden contact or excessive weight on the cables. Please ensure that adequate caution is taken to avoid possible damage to the UltraPort card or Host system. This can be accomplished by securing the cable to a rack or to the back of the server.

RJ45 10-pin	RJ45 8-pin	EIA-232	EIA-422	EIA-485
1	N/A	RI	RTS+	NC
2	1	DCD	CTS-	NC
3	2	RTS	RTS-	NC
4	3	DSR	RXD-	RXD-
5	4	TXD	TXD-	TXD-/RXD-
6	5	RXD	RXD+	RXD+
7	6	S-GND	S-GND	S-GND
8	7	CTS	CTS+	NC
9	8	DTR	TXD+	TXD+/RXD+
10	N/A			
Shell	Shell	C-GND	C-GND	C-GND


DB25 connector box

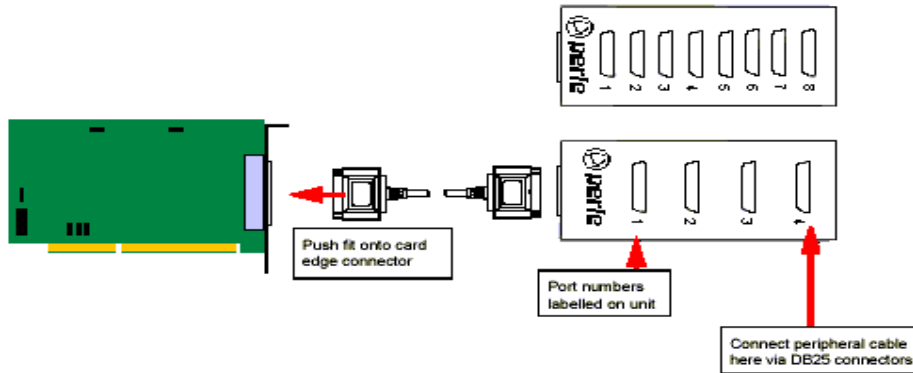

Note: The UltraPort connector box cable needs to be secured or supported in case of sudden contact or excessive weight on the cables. Please ensure that adequate caution is taken to avoid possible damage to the UltraPort card or Host system. This can be accomplished by securing the cable to a rack or to the back of the server.

DB25 Pin	EIA-232	EIA-422	EIA-485
1 & Shell	C-GND	C-GND	C-GND
2	TXD	TXD-	TXD-/RXD-
3	RXD	RXD+	RXD+
4	RTS	RTS-	NC
5	CTS	CTS+	NC
6	DSR	RXD-	RXD-
7	S-GND	S-GND	S-GND
8	DCD	CTS-	NC
20	DTR	TXD+	TXD+/RXD+
22	RI	RTS+	NC


DB9 connector box

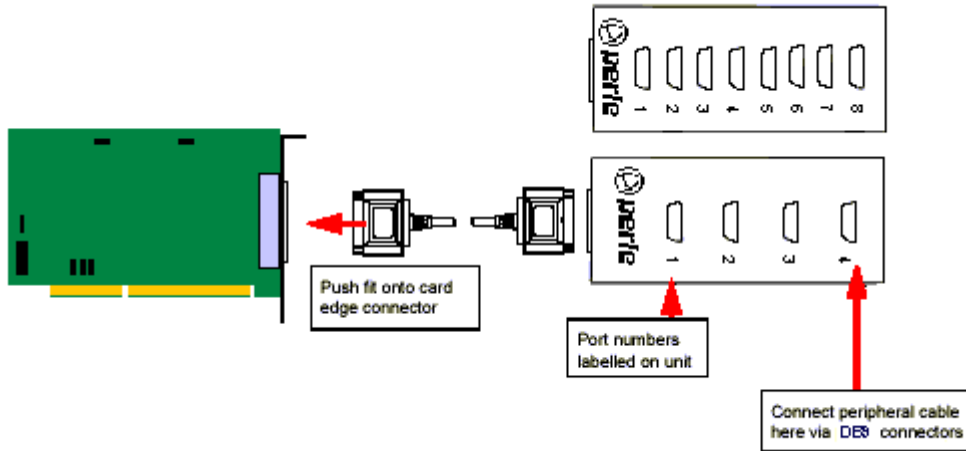

Note: The UltraPort connector box cable needs to be secured or supported in case of sudden contact or excessive weight on the cables. Please ensure that adequate caution is taken to avoid possible damage to the UltraPort card or Host system. This can be accomplished by securing the cable to a rack or to the back of the server.

DB9 Pin	EIA-232	EIA-422	EIA-485
1	DCD	CTS-	NC
2	RXD	RXD+	RXD+
3	TXD	TXD-	TXD-/RXD-
4	DTR	TXD+	TXD+/RXD+
5	S-GND	S-GND	S-GND
6	DSR	RXD-	RXD-
7	RTS	RTS-	NC
8	CTS	CTS+	NC
9	RI	RTS+	NC
Shell	C-GND	C-GND	C-GND


DB25 Fan-out cable

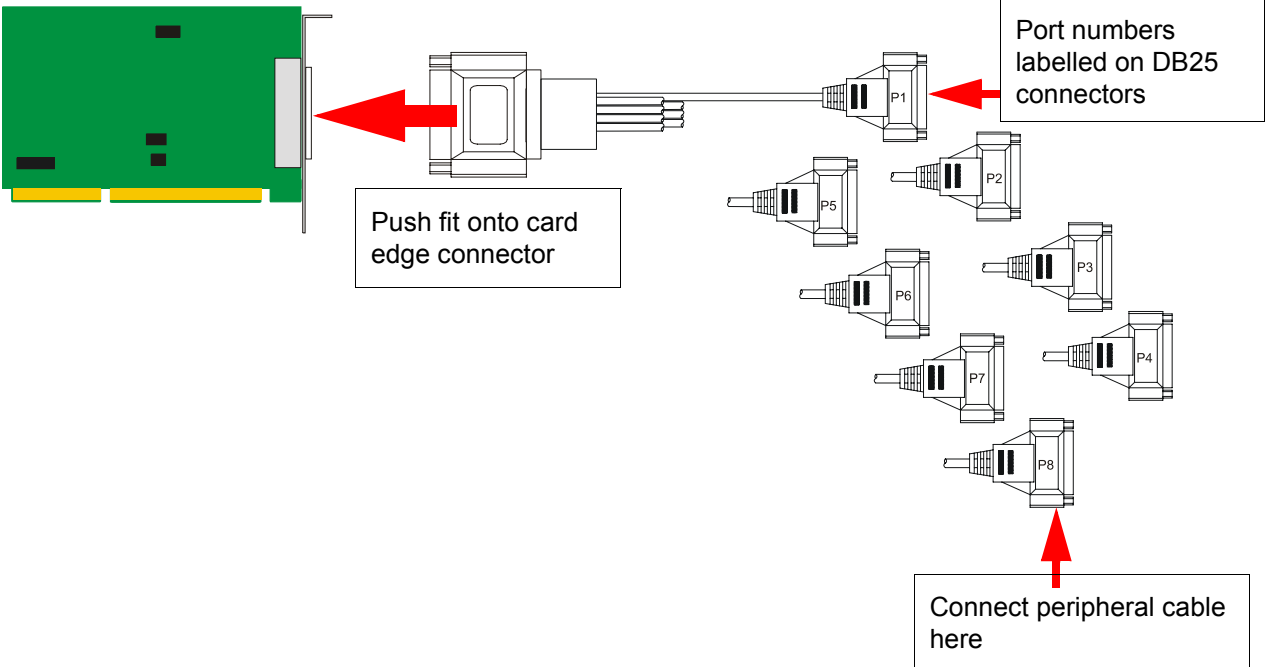

Note: The UltraPort fan-out cables need to be secured or supported in case of sudden contact or excessive weight on the cables. Please ensure that adequate caution is taken to avoid possible damage to the UltraPort card or Host system. This can be accomplished by securing the cables to a rack or to the back of the server.

DB25 Pin	EIA-232	EIA-422	EIA-485
1 & Shell	C-GND	C-GND	C-GND
2	TXD	TXD-	TXD-/RXD-
3	RXD	RXD+	RXD+
4	RTS	RTS-	NC
5	CTS	CTS+	NC
6	DSR	RXD-	RXD-
7	S-GND	S-GND	S-GND
8	DCD	CTS-	NC
20	DTR	TXD+	TXD+/RXD+
22	RI	RTS+	NC

DB9 Fan-out cable

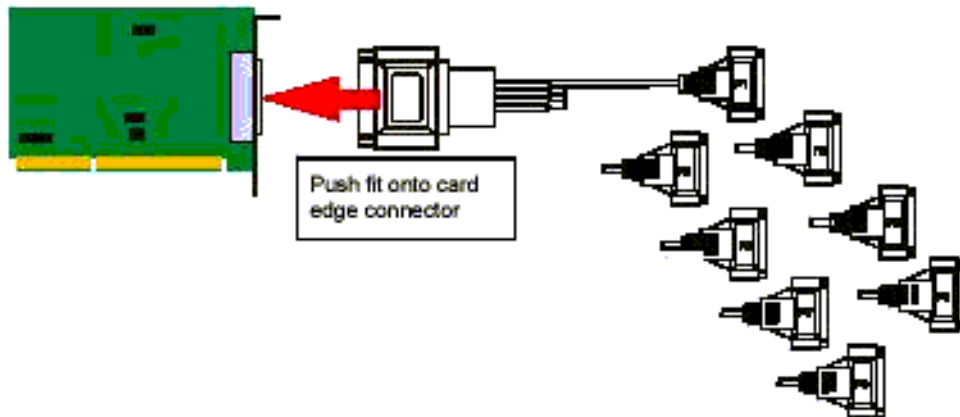

Note: The UltraPort fan-out cables need to be secured or supported in case of sudden contact or excessive weight on the cables. Please ensure that adequate caution is taken to avoid possible damage to the UltraPort card or Host system. This can be accomplished by securing the cables to a rack or to the back of the server.

DB9 Pin	EIA-232	EIA-422	EIA-485
1	DCD	CTS-	NC
2	RXD	RXD+	RXD+
3	TXD	TXD-	TXD-/RXD-
4	DTR	TXD+	TXD+/RXD+
5	S-GND	S-GND	S-GND
6	DSR	RXD-	RXD-
7	RTS	RTS-	NC
8	CTS	CTS+	NC
9	RI	RTS+	NC
Shell	C-GND	C-GND	C-GND



Transparent Printing

Introduction

You need to read this appendix if you want background information on transparent printing.


This appendix gives an overview of the transparent printing feature offered for the OpenServer and Unixware operating systems. Included are details of configuration files associated with transparent printing.

This appendix includes the following sections:

- [What is transparent printing?](#) on page 113
- [Problems with printer output](#) on page 114
- [The printcap.spd configuration file](#) on page 114
- [The print.spd configuration file](#) on page 115

What is transparent printing?

Most terminals have an auxiliary (AUX) port which can be connected to a serial printer. Data can then be output to the terminal or the printer via the same serial line. This is called **transparent print** (or xprint) and is designed for printing simple ASCII text. A separate xprint device node (ttyzn n where n is device number) is created for each port. This device is enabled automatically if either the local or modem device is enabled for the port.

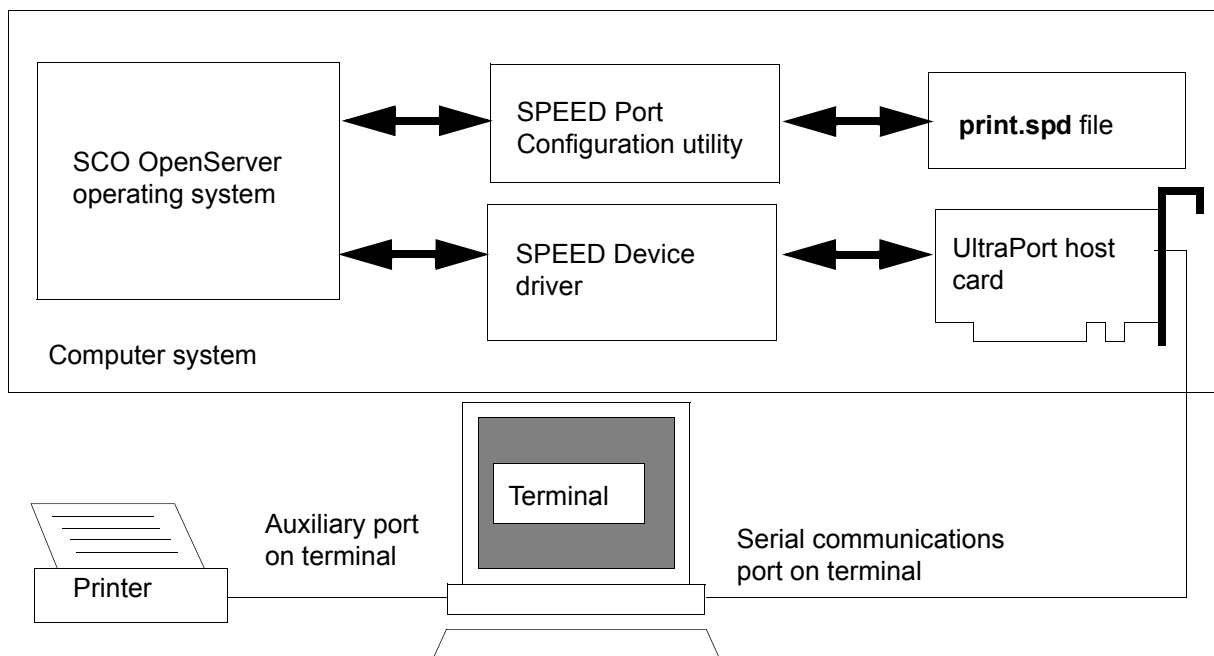

When a host card receives data addressed to the transparent print device it prefixes it with the transparent print mode ON string and appends it with the transparent mode OFF string. The ON and OFF strings for each terminal type available are defined by the **printcap.spd** file. See [The printcap.spd configuration file](#) on page 114 for more details.

When the host card receives data addressed to the transparent print device, it prefixes it with the Transparent Print Mode ON string and appends it with the Transparent Print Mode OFF string. Terminal I/O has absolute priority over printer output. Transparent print data will only be sent when there is a break in output to the terminal (for more than a tenth of a second)

For each port, the transparent printing parameters are controlled by an entry in the **print.spd** file found in the `/etc/` directory on your system. The entry for each port includes definitions of the terminal type, transparent print throughput rate and device name. See [The print.spd configuration file](#) on page 115 for further details.

Problems with printer output


When you use transparent printing you may obtain incorrect printer output due to the following reasons:

Graphics printers may misinterpret some characters output through transparent print. This problem is more likely if the terminal is in 7-bit mode, because 8-bit characters will not be printed.

Some terminals suppress the output of certain characters to their printer or AUX ports. Such terminals can prevent essential control characters from reaching the printer thus generating incorrect printer output. This occurrence is extremely unpredictable because of the large number of potential hardware configurations.

The printcap.spd configuration file


The printcap.spd file defines the transparent print ON and OFF strings for each terminal type available. When a host card receives data addressed to the transparent print device it prefixes it with the transparent print mode ON string and appends it with the transparent mode OFF string.

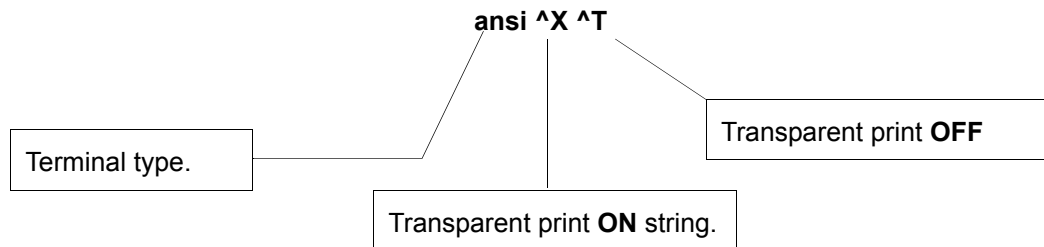

If you don't configure a specific terminal type printcap.spd will use the default type which is "unknown"

The print.spd configuration file

For each port, transparent printing is controlled by an entry in the **print.spd** file. The **print.spd** file is found in the `/etc/` directory on your system. The entry for each port includes definitions of the terminal type, transparent print throughput rate, device name. The content of the **print.spd** file is normally controlled automatically by either the Port Configuration utility (SCO OpenServer). A sample entry from a typical `print.spd` file is shown in the next example.

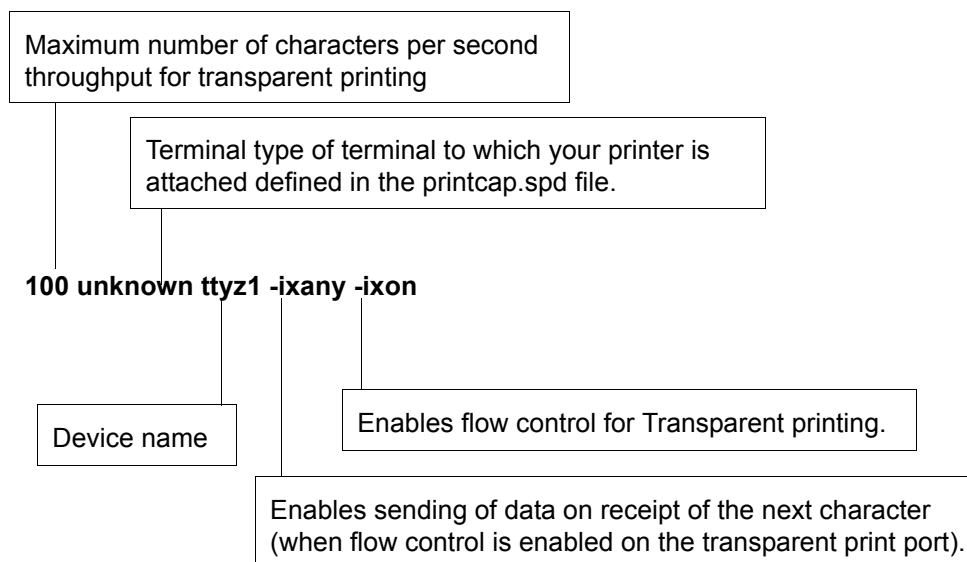



Operations for EIA-422/EIA-485

Introduction

- [The EIA-422 Standard](#) on page 117
- [The EIA-485 Standard](#) on page 118
- [Cabling Distances](#) on page 122

The EIA-422 Standard

The EIA-422 defines a standard for serial communications. EIA-422 is a high speed or long distance transmission method. EIA-422 system software differs little from familiar point to point EIA-232 communication systems. EIA-422 is often used to extend the distance between nodes over the capabilities of EIA-232. When communicating at high data rates or over long distances in real world environments, single ended methods are often inadequate. Differential data transmission (balanced differential signal) offers superior performance in most applications. Differential signals can help nullify the effects of ground shifts and induced noise signals that appear as common mode voltages on a network. EIA-422 is also specified for multi-drop (party-line) applications where only one driver is connected to, and transmits on a "bus" of up to 10 receivers. While a multi-drop "type" application has many advantages, EIA-422 devices cannot be used to construct a truly multi-point network. A true multi-point network consists of multiple drivers and receivers connected on a single bus, where any node can transmit and receive. However a "Quasi" multi-drop network using EIA-422 consisting of 4 wires can enable a single master in a system to send a command to one of several slave devices on a network. The master node simply prefixes the commands with the appropriate address of the slave. There is no data echo or turn around delays to consider. Since each of the slaves transmitters shares the same pair of wires, care should be taken that the master never requests data from multiple nodes at the same time or data collision can occur.

Specifications	EIA-422
Mode of operation.	Differential
Total number of Drivers and receivers on one line	1 driver, 10 receivers
Maximum Driver Output Voltage	-0.25V to +6V
Driver Output signal loaded	+/-2.0V
Driver Output signal unloaded	+/-6V
Driver load Impedance (Ohms)	100
Slew Rate	fast/slow
Receiver Input Voltage range	-10V to + 10V
Receiver Input Sensitivity	+/-200mV
Receiver Input Resistance (Ohms)	4k min.

The EIA-485 Standard


The EIA-485 standard is similar to the EIA-422 standard upon which it was based. The main difference is that up to 32 transmitter receiver pairs may be present on the line at one time. A 120-Ohm resistor integrated on the UltraPort SI card should be enabled to terminate either end of the main line. The UltraPort SI when configured for EIA-485 full duplex is compatible to use in a EIA-422 multi-drop environment. EIA-485 can be used in situations where more than one device may transmit data on a shared data line. In general not all lines are used for EIA-485 systems. In a two wire half duplex configuration the TXD+ line is connected to the RXD+ while the TDX- line is connected to the RXD-, only one pair of twisted wire cable is used in a EIA-485 half duplex communications configuration. The special circuitry in the UltraPort SI card when set to auto will automatically sense when data is being transmitted and automatically enable the transmit line as well as disable the transmit line when the data has been sent. Some EIA-485 applications use the RTS handshake line to enable and disable the transmit line. In this case then the field EIA-485 HDX TX Control should be set to RTS. It is now the host application's responsibility to enable and disable the transmit line via the RTS handshake line when it wants to send data. When the EIA-485 HDX TX Control field is set to AUTO, the UltraPort SI card allows you to further customized your application by applying a Auto EIA-485 Bit Delay. This field by default is set to 0 delay, however in some applications the user may want to increase this field up to 15 bits.

Specifications	EIA-485
Mode of operation.	Differential
Total number of Drivers and receivers on one line	32 drivers or receivers
Maximum Driver Output Voltage	-0.25V to +6V
Driver Output signal loaded	+/-2.0V
Driver Output signal unloaded	+/-6V
Driver load Impedance (Ohms)	100
Slew Rate	fast/slow
Receiver Input Voltage range	-10V to + 10V
HDX Control	+/-200mV
Bit-delay	4k min.

Many Masters / Many Slaves

The EIA-485 Full Duplex mode supports many Masters and many Slaves. This system can be used when all EIA-485 devices have separate transmit and receive channels. There is no multiplexing of the TXD and RXD signals on the same device. This system is especially useful when there is no flow control available on the PC, usually due to the use of third party communications programs that prevents the use of the RTS signal as a “transmit enable” control. The advantages of this system are great, since no new communications software is needed, and the PC can talk and listen at the same time. In effect the handshaking is done by the intelligence of the UltraPort SI card.


As wired in the next diagram, the PC can transmit data at any time and the EIA-485 devices#1 to #n can simultaneously receive it. Only one of the EIA-485 devices may transmit data at any one time. Each EIA-485 device recognizes commands and data addressed to it and will only transmit when the Master PC commands it to do so. When the EIA-485 devices receives a command, the UltraPort SI card automatically turns its TXD drivers on and sends the data on the TXD channel, and then disables its TXD drivers afterwards. The other EIA-485 devices remain in the tri-state mode when they are not being addressed and do not transmit any data.

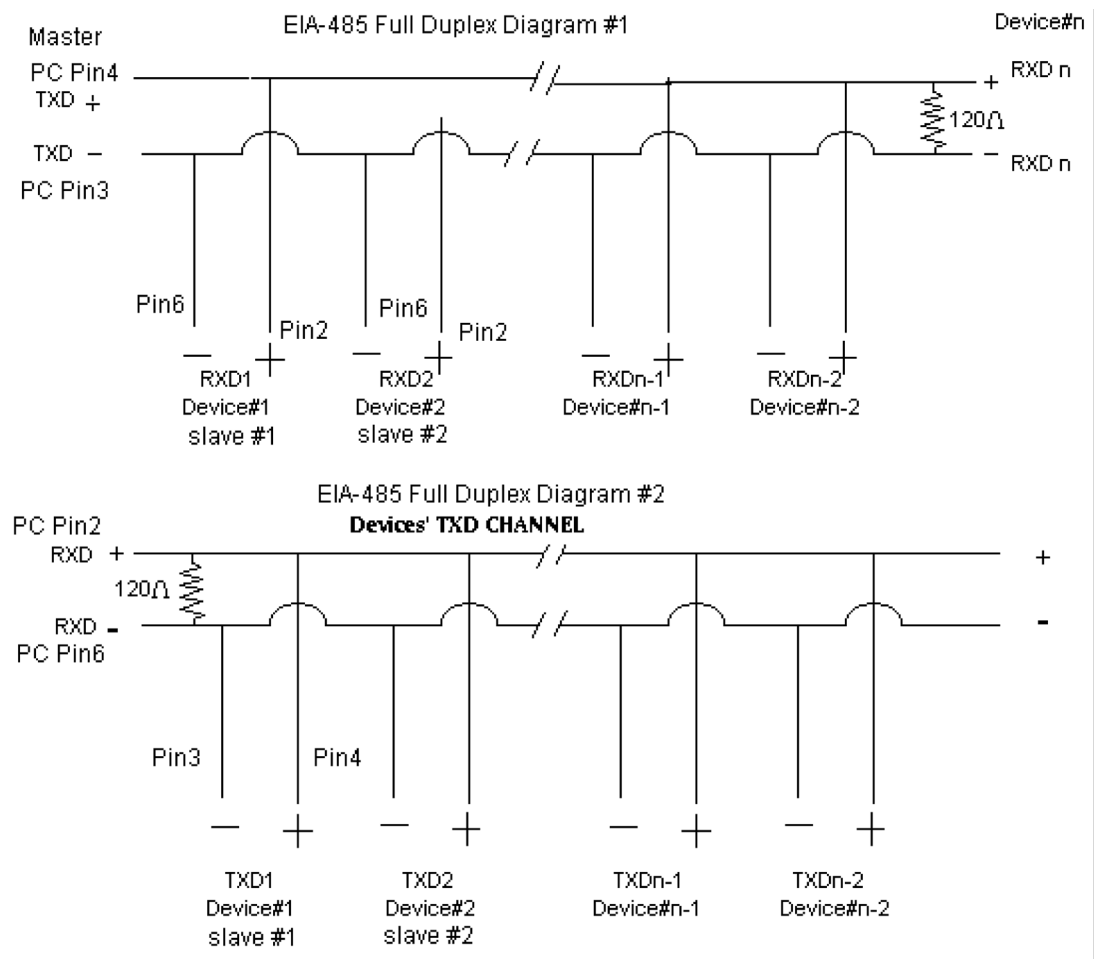

One Master / Many Slaves


The EIA-485 Half Duplex mode supports a Master and many Slaves devices. This system has only one master device which can transmit to multiple slave devices. In many cases there will be only one master device, which can transmit data and the other simply receives it. There is no multiplexing of the TXD and RXD lines. The data is flowing only in one direction and needs only one pair of wires.

EIA-485 Half Duplex Diagram #1

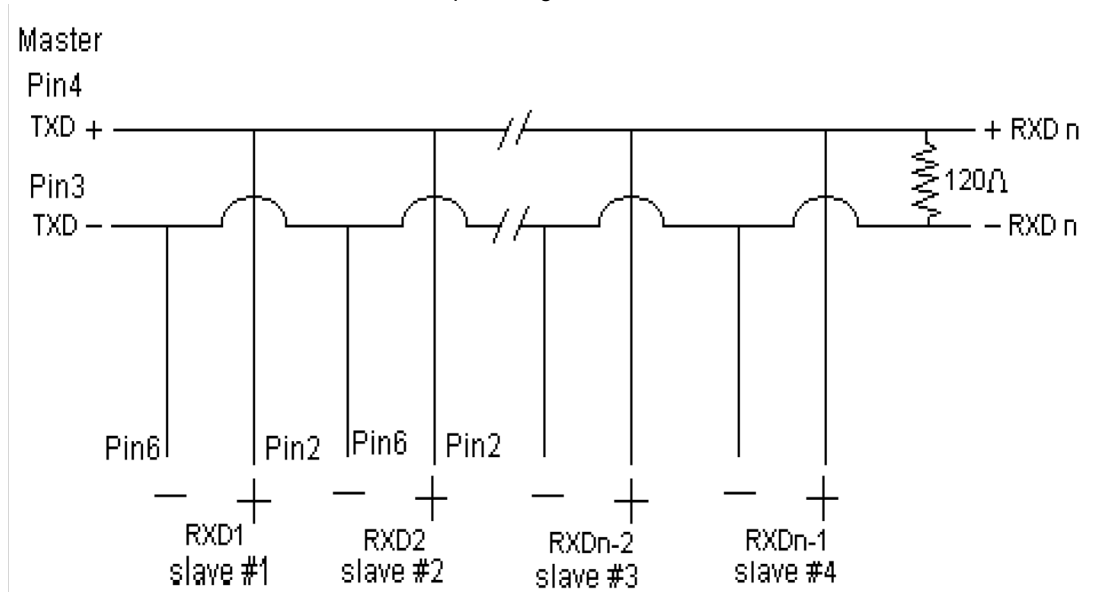

Note: Pin numbers provided in above diagrams are for UltraPort SI DB9 connectors

Another popular layout is for multiple masters and slaves in EIA-485 half duplex mode. This is also known as a party line transmission. It is imperative to have some method of preventing two devices from driving the line at the same time. The normal method is to use the RTS as a talk enable control. The RTS line will go true immediately prior to transmission and go false immediately after the last byte in the data stream is sent.

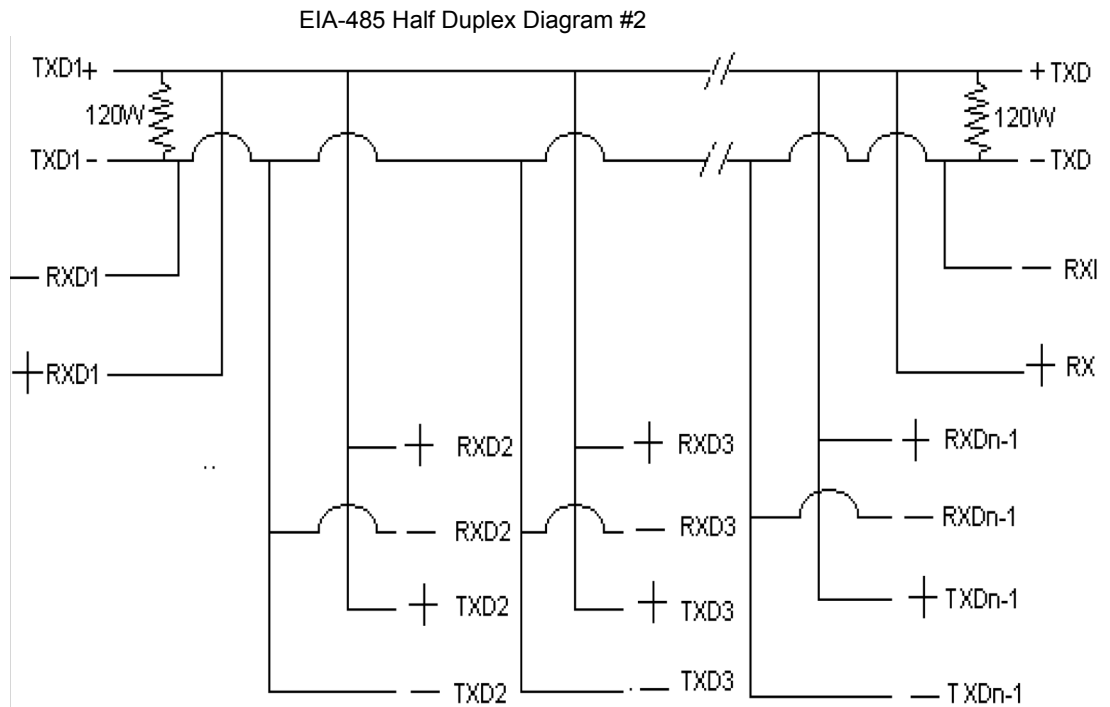

Fail Safe Circuitry

Two common fault conditions that an EIA-485 system can experience are as follows:

- The cable is open: This occurs when there are no drivers on the circuit. In a party line/multi driver/receiver system this is intentional. However there are unintentionally situations when the twisted pair line is accidentally cut/disconnected or the transmitting device fails. In EIA-485 half duplex multi-drop systems there are extended periods of time when none of the possible talkers are gated onto the bus. This is known as a idle state and occurs when all the driver outputs are in the high impedance state. The lines float perhaps being pulled to high or low which can be caused by noise or other voltages. The UltraPort SI cards contain Fail safe Open circuit detection which allows the receiver to go into a known, pre-determined state and prevents false start bits and bad data from being transmitted
- The cable has a short: Short circuits are when the two lines of a twisted pair are connected together. This can occur due to a damaged or due to a failure of one or more transmitters/receivers on the line. The short condition on the line is dangerous in that damage to the receiver may occur and communications can be corrupted or disabled. The EIA-485 specifies that the input threshold of a receiver be between $\pm 200\text{mV}$ differential. This basically means that if the differential voltage on a receiver is 0V , the output state is indeterminate. The Perle UltraPort SI design ensures that the receiver thresholds are between -50mV and -200mV . If 0V appears across the input stage due to a fault condition, the output is guaranteed to be a logic high.

Cabling Distances

Cable length (in feet)	Protocol	Transfer Rate, Kbps
7	EIA-422/EIA-485	3686.4
1000	EIA-422/EIA-485	3686.4
2000	EIA-422/EIA-485	1843.2
3000	EIA-422/EIA-485	921.6
4000	EIA-422/EIA-485	921.6
7	EIA-232	19.2
1000	EIA-232	38.4
2000	EIA-232	19.2
3000	EIA-232	9.6
4000	EIA-232	9.6

Note: These tests were conducted in a controlled lab environment using shielded CAT 5 cabling



Troubleshooting

Introduction

You need to read this appendix if you want information on troubleshooting problems with UltraPort, UltraPort SI, and UltraPort Express serial adaptor cards.

This appendix provides examples of normal boot up messages and a table of error messages, their meaning and corrective action required for the all the currently supported operating systems.


This appendix includes the following sections:

- [SCO OpenServer 5](#) on page 124.
- [SCO UnixWare/SCO OpenServer 6](#) on page 127
- [Microsoft Windows](#) on page 130
- [Windows NT](#) on page 131 (UltraPort and UltraPort SI only)

SCO OpenServer 5

Example of normal SPEED driver boot messages

This example shows one UltraPort16 and one UltraPort8 successfully detected and initialized by the driver.

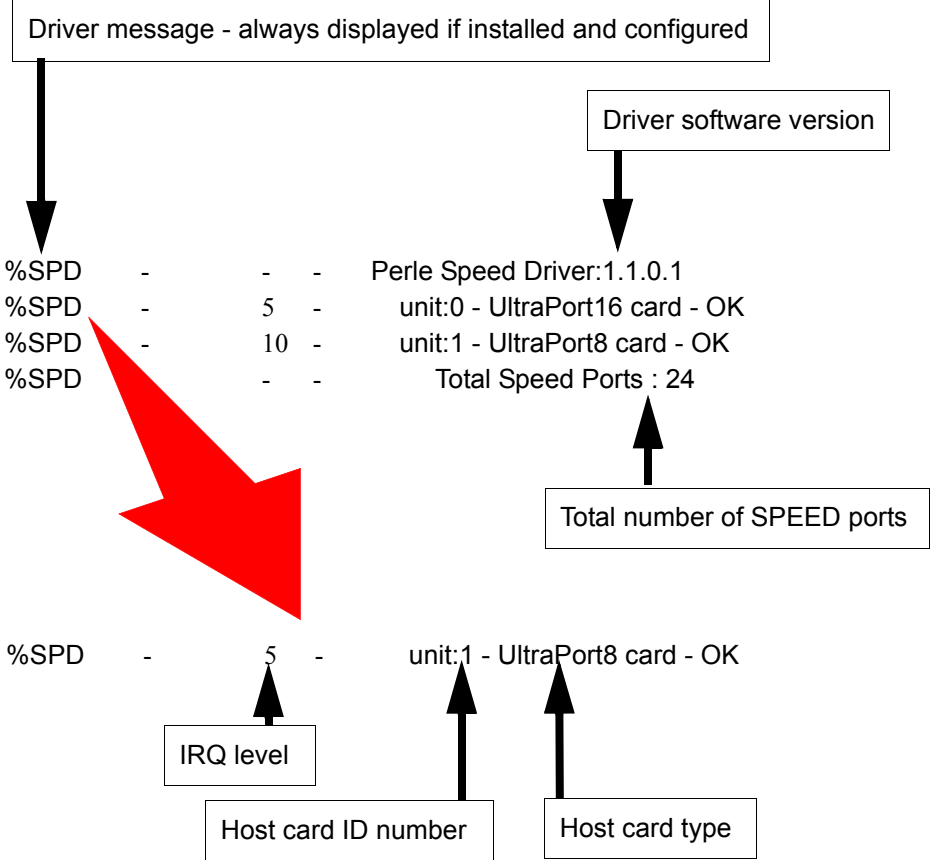

Additional card warning messages

If you install more than one UltraPort, UltraPort SI or UltraPort Express host card, or install additional cards at a later date, the following warning messages will be displayed (they appear immediately following the driver initialisation messages shown on [page 124](#)).

Note: Display of these messages and update of **Speed Node** and **Init** files only occurs once after installation of additional cards. This takes place during system start-up.

Message	This message tells you that...
WARNING: Speed Node file updated - old file moved to /etc/conf/node.d/spd_#####	The speed node file has been updated to include the revised number of ports. Your old Speed node file is retained with the file name shown in the message. '#####' is a unique number so that previous Speed node files are not lost on updating.
WARNING: New Speed ports detected - /etc/conf/node.d/spd being updated	You now have additional entries in the Speed init file, existing entries are retained unchanged. The automatic init file update is necessary to make any additional nodes available in the Speed Port Configuration tool.


Note: If you have modified your Speed node file, (for example you may have changed the default permission for security reasons), you may wish to re-instate the previous node set-up for existing Speed ports.
If you have not modified your Speed node file or do not require to retain the old settings you may safely delete the file shown in the first message.

SCO OpenServer 5 error messages

Error message	Reason	Action required
ERROR: unit @0xnnnnnnnn has bad resource(s)	Incorrectly installed or faulty card. Incorrect BIOS settings.	<ol style="list-style-type: none"> 1. Ensure that you have followed the installation procedure correctly. See page 62. 2. Check BIOS settings. 3. If the problem persists try another card. See page 62 and page 10.
ERROR: unit @0xnnnnnnnn not mapped	Insufficient memory available to kernel.	<ol style="list-style-type: none"> 1. Reconfigure system/kernel memory parameters.
ERROR: unit @0xnnnnnnnn not initialised	Incorrectly installed or faulty card.	<ol style="list-style-type: none"> 1. Ensure that you have followed the installation procedure correctly. See page 62. 2. If the problem persists try another card. See page 62 and page 10.
WARNING: unit @0xnnnnnnnn not configured	System error.	<ol style="list-style-type: none"> 1. Uninstall the driver and remove all Speed cards from the system. See page 76 2. Re-install the driver and cards taking care to follow the correct procedure. See page 62 and page 10.
WARNING: No Speed ports configured	No cards installed. Installed cards suffer from one or more of above symptoms.	<ol style="list-style-type: none"> 1. Install cards. See page 10. 2. Resolve any above listed faults.

SCO UnixWare/SCO OpenServer 6

There are no messages displayed on the system at startup. Messages from the SPEED driver are sent to the **syslog** file in the `/var/adm` directory. Each entry in the **syslog** file is date and time stamped (You can review the content of the syslog file using a suitable text editor). Each time the driver is loaded, entries similar to those shown below indicate successful UltraPort card detection.

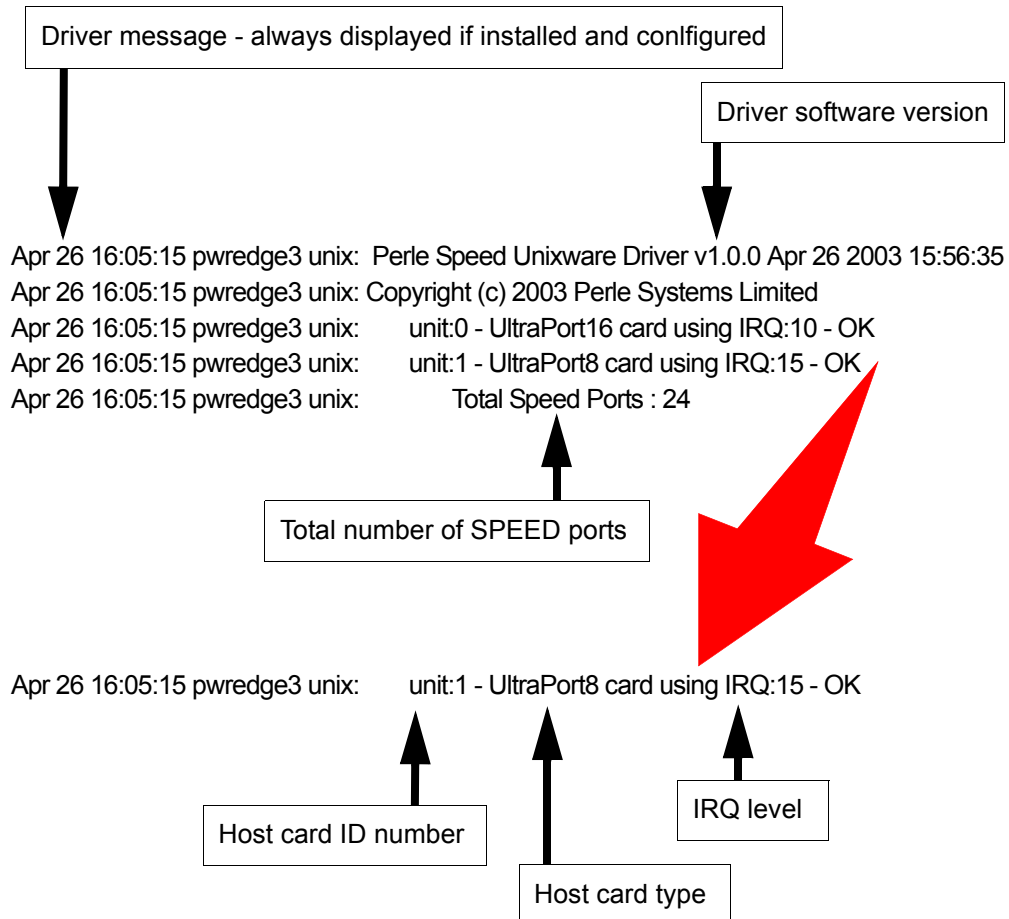

Additional card warning messages

If you install more than one UltraPort, UltraPort SI or UltraPort Express host card, or install additional cards at a later date, the following warning messages will be displayed during system start-up.

Note: Display of these messages and update of **Speed Node** and **Init** files only occurs once after installation of additional cards. This takes place during system start-up.

Message	This message tells you that...
WARNING: Speed Node file updated - old file moved to /etc/conf/node.d/spd_#####	The speed node file has been updated to include the revised number of ports. Your old Speed node file is retained with the file name shown in the message. '#####' is a unique number so that previous Speed node files are not lost on updating.
WARNING: New Speed ports detected - /etc/conf/node.d/spd being updated	You now have additional entries in the Speed init file, existing entries are retained unchanged. The automatic init file update is necessary to make any additional nodes available in the Speed Port Configuration tool.

Note: If you have modified your Speed node file, (for example you may have changed the default permission for security reasons), you may wish to re-instate the previous node set-up for existing Speed ports.
If you have not modified your Speed node file or do not require to retain the old settings you may safely delete the file shown in the first message.

SCO UnixWare error messages

Error message	Reason	Action required
ERROR: unit @0xnnnnnnnn has bad resource(s)	Incorrectly installed or faulty card. Incorrect BIOS settings.	<ol style="list-style-type: none"> 1. Ensure that you have followed the installation procedure correctly. See page 77. 2. Check BIOS settings. 3. If the problem persists try another card. See page 77 and page 10.
ERROR: unit @0xnnnnnnnn not mapped	Insufficient memory available to kernel.	<ol style="list-style-type: none"> 1. Reconfigure system/kernel memory parameters.
ERROR: unit @0xnnnnnnnn not initialised	Incorrectly installed or faulty card.	<ol style="list-style-type: none"> 1. Ensure that you have followed the installation procedure correctly. See page 77. 2. If the problem persists try another card. See page 77 and page 10.
WARNING: unit @0xnnnnnnnn not configured	System error.	<ol style="list-style-type: none"> 1. Uninstall the driver and remove all Speed cards from the system. See page 77 2. Re-install the driver and cards taking care to follow the correct procedure. See page 77 and page 10.
Error: could not register interrupt handler for unit @0xnnnnnnnn	System error	<ol style="list-style-type: none"> 1. Uninstall the driver and remove all Speed cards from the system. See page 77 2. Re-install the driver and cards taking care to follow the correct procedure. See page 77 and page 10.
WARNING: No Speed ports configured	No cards installed. Installed cards suffer from one or more of above symptoms.	<ol style="list-style-type: none"> 1. Install cards. See page 10. 2. Resolve any above listed faults.
UX: sh (sh): ERROR: telinit: Not found (Note this error occurs on UnixWare 2 systems only)	telinit command not found	None. The installation process takes care of configuring the kernel and ensures that SPEED ports are ready for use when the installation process is complete.
Unable to open device /dev/spd : No such device	No SPEED cards installed during driver installation.	<ol style="list-style-type: none"> 1. Install cards. See page 10. Note that there is no need to uninstall and re-install the driver. When the system is rebooted, your SPEED cards will be detected and configured into the kernel.

Microsoft Windows

This section describes troubleshooting UltraPort, UltraPort SI, and UltraPort Express products under the Microsoft Windows family of operating systems. For Windows NT, see next section.

Note: To contact Perle for technical support go to the web page:
<http://www.perle.com/downloads>

General troubleshooting under Windows

Problem	Action required
Machine fails to boot.	<ol style="list-style-type: none"> 1. Turn off your machine, remove UltraPort card(s) and reboot. See page 16. 2. Try installing a different host card in case the one currently installed is faulty. See page 10.
Windows operating system fails while loading and the system hangs.	<ol style="list-style-type: none"> 1. Reboot machine and then switch to the last known good configuration. 2. Check for resource conflicts or faulty hardware.
Windows operating system fails while loading and displays a blue screen.	<ol style="list-style-type: none"> 1. Note the five hexadecimal numbers at the top line of the screen 2. Reboot your machine and then switch to the last known good configuration. 3. Check for resource conflicts or faulty hardware.
Operating system loads OK, but SPEED driver or another driver fails to boot	<ol style="list-style-type: none"> 1. Run Windows Device Manager to find available IRQ and memory addresses.
UltraPort ports do not work after installation.	<ol style="list-style-type: none"> 1. Check the Windows Event Log and follow the suggested actions.
SPEED Windows driver fails during normal operation, symptom: blue screen	<ol style="list-style-type: none"> 1. Note the five hexadecimal numbers displayed at the top line of the screen. 2. Reboot your machine and then switch to the last known good configuration. 3. Check for resource conflicts or faulty hardware.
SPEED Windows driver fails during normal operation, symptoms either: black screen, machine reboots or system hangs	<ol style="list-style-type: none"> 1. Contact Technical Support at Perle's web page: http://www.perle.com/downloads

Windows error messages

In the event of any error messages, check the **Windows Event Log**. Also open the Windows Device Manager and check for warning icons on the installed hardware. See your Microsoft Windows user documentation or help system for details.

Windows NT

Windows NT general troubleshooting UltraPort and UltraPort SI only

In the event of any problems, open the **Devices** window to view the status of any installed hardware. For further details of troubleshooting under Windows NT, see your Windows NT user documentation or help system.