# EOM-104 Quick Installation Guide

## Moxa Embedded Ethernet Switch Module

## Edition 4.0, February 2017

## Technical Support Contact Information www.moxa.com/support

#### Moxa Americas:

Toll-free: 1-888-669-2872 Tel: 1-714-528-6777 Fax: 1-714-528-6778

## Moxa Europe:

Tel: +49-89-3 70 03 99-0 Fax: +49-89-3 70 03 99-99

#### Moxa India:

Tel: +91-80-4172-9088 Fax: +91-80-4132-1045

#### Moxa China (Shanghai office):

Toll-free: 800-820-5036 Tel: +86-21-5258-9955 Fax: +86-21-5258-5505

#### Moxa Asia-Pacific:

Tel: +886-2-8919-1230 Fax: +886-2-8919-1231



P/N: 1802001040013

## Overview

The EOM-104 Series Ethernet switch module provides an easy, cost-effective, and integrated solution for device manufacturers to embed an Ethernet switch module into an existing product for enhanced performance and reliability.

The module supports 10/100 Mbps Fast Ethernet, and comes with Turbo Ring's fast recovery time of under 20 ms built in. The EOM-104 Series also provides a rich set of peripherals (e.g., GPIO programming pins and DIP switches to enable Turbo Ring) and is an ideal solution for embedded Ethernet applications.

## Package Checklist

The EOM-104 Series Evaluation Kit package contains the following items:

- EOM-104 series module
- EOM-104 series evaluation board
- · Universal power adaptor
- 2 power cords
- · Null modem serial cable
- Cross-over Ethernet cable
- Accessories pack
- Quick installation guide (printed)
- · Warranty card

Note: Please notify your sales representative if any of the above items are missing or damaged.

# First-Time Installation and Configuration

Before installing the EOM-104 Series, please check to make sure that all items in the Package Checklist are in the box.

#### Hardware Installation Procedure

#### Step 1: Plug the EOM-104 Series into the evaluation board.

Plug the EOM-104 Series module into the sockets on the top of the evaluation board

#### Step 2: Connect the power source to the evaluation board.

Connect the 12 VDC power line to the evaluation board's power jack.

#### Step 3: Connect the network cable to the evaluation board.

Use the RJ45 Ethernet cable to connect the Ethernet port on the evaluation board to an Ethernet network for evaluation.


#### Step 4: Set up the computer's IP address.

In a Windows environment, the IP address can be changed in the TCP/IP Settings window. Select an IP address on the same subnet as the EOM-104 Series. Since the default IP address of the EOM-104 is 192.168.127.253, and the subnet mask is 255.255.255.0, you should set the IP address of the computer to 192.168.127.xxx.

#### Step 5: Configure the EOM-104 Series.

Please refer to EOM-104 Series User's Manual.

## Layout of the EOM-104 Series

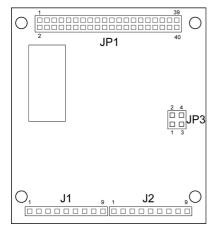

## Pin Assignment

## JP1 (2x20 connector pin assignment)

SIGNAL TX2 - RX2 - NC RX1 + TX1 + NC GND 3.3V GND DTR		PIN	1	3	5	7	9	11	13	15	17	19
	SI	GNAL	TX2 -	RX2 -	NC	RX1 +	TX1 +	NC	GND	3.3V	GND	DTR

PIN	2	4	6	8	10	12	14	16	18	20
SIGNAL	TX2 +	RX2 +	NC	RX1 -	TX1 -	NC	GND	3.3V	GND	DSR

PIN	21	23	25	27	29	31	33	35	37	39
CICNIAI	TVD CD	CDIO 1	GPIO 3	MASTER	MASTER	PORT	PORT	MANUAL	3.3V	CND
SIGNAL	TXD	GPIO I		ENABLE	LED	1 LED	3 LED	RESET	3.3V	GND

PIN	22	24	26	28	30	32	34	36	38	40
SIGNAL	RXD	GPIO 2	GPIO 4	TURBO RING ENABLE	RING	RESET DEFAULT		PORT 2 LED	3 31/	GND

## J1 (1 x 9 connector pin assignment)

PIN	1	2	3	4	5	6	7	8	9
SIGNAL	GND	TX4 +	TX4 -	3.3V	3.3V	FXSD	RX4 -	RX4 +	GND

## J2 (1 x 9 connector pin assignment)

PIN	1	2	3	4	5	6	7	8	9
SIGNAL	GND	TX3 +	TX3 -	3.3V	3.3V	FXSD	RX3 -	RX3 +	GND


#### JP3 (2 x 2 connector pin assignment)

2 4



Jumpers 1 and 2 for Ring Master Enable Jumpers 3 and 4 for Turbo Ring Enable

## Layout of the Evaluation Board

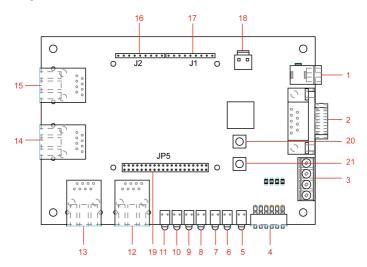

- 1. 12 VDC Power Jack
- 2. Console Port
- 3. GPIO
- 4. Turbo Ring DIP Switch
- 5. PWR LED
- 6. Turbo Ring LED
- 7. Ring Master LED
- 8. Port 1 LED
- 9. Port 2 LED
- 10. Port 3 LED
- 11. Port 4 LED
- 12. Port 1 10/100BaseT(X)
- 13. Port 2 10/100BaseT(X)
- 14. Port 3 10/100BaseT(X), or 100BaseFX (Turbo Ring Port 1)
- 15. Port 4 10/100 BaseT(X), or 100BaseFX (Turbo Ring Port 2)
- 16. J2 Connector (Connect to EOM-104 J1)
- 17. J1 Connector (Connect to EOM-104 J2)
- 18. 3.3VDC Power Connector
- 19. JP5 Connector (Connect to EOM-104 JP1)
- 20. Reset to Default Button
- 21. Manual Reset Button

# **Turbo Ring DIP Switch Setting**



	ON	OFF
DIP1	Enable this EOM as	This EOM will not
	the Ring Master	be the Ring Master
DIP2	Activate Turbo Ring	Do not use Turbo
		Ring
DIP3	GPIO Reserve	GPIO Reserve
DIP4	GPIO Reserve	GPIO Reserve
DIP5	GPIO Reserve	GPIO Reserve
DIP6	GPIO Reserve	GPIO Reserve

# **Specifications**

Technology							
Standards	IEEE 802.3 for 10BaseT						
otariaa as	IEEE 802.3u for 100BaseT(X) and 100BaseFX						
	IEEE 802.3x for flow control						
	IEEE 802.1D for Spanning Tree Protocol						
	IEEE 802.1w for Rapid STP						
	IEEE 802.1p for Class of service						
Protocols	SNMPv1/v2c/v3, DHCP Client, BootP, TFTP, SMTP,						
	RARP, RMON, HTTP, Telnet, Syslog						
MIB	MIB-II, Ethernet-Like MIB, P-Bridge MIB, Bridge						
	MIB, RSTP MIB, RMON MIB Group 1, 2, 3, 9						
Flow Control	IEEE 802.3x flow control						
Interface							
Ethernet Ports	EOM-104: 4 10/100BaseT(X)						
	EOM-104-FO: 2 10/100BaseT(X) and 2 100BaseFX						
Connectors	1 connector with 2 x 20 pins and 2 connectors with						
	1 x 9 pins						
Console Port	RS-232 (TxD, RxD, DTR, DSR)						
GPIO	4 programmable I/O pins						
Power Requirement	'S						
Input Voltage	3.3V						
Input Current	EOM-104: 0.59 A @ 3.3 V						
	EOM-104-FO: 1.22 A @ 3.3 V						
Physical Characteris	stics						
Dimensions	54 x 60 x 8.25 mm (2.13 x 2.36 x 0.32 in)						
<b>Environmental Limi</b>	ts						
Operating	-40 to 75°C (-40 to 167°F)						
Temperature							
Storage Temperature	-40 to 85°C (-40 to 185°F)						
Ambient Relative	5 to 95% (non-condensing)						
Humidity							
Regulatory Approvals							
EMI	FCC Part 15, CISPR 32 class A,						
	CE class A						
Note: Please check Mo	oxa's website for the most up-to-date certification						
status.							
Warranty							
Warranty Period	5 years						
Details	See www.moxa.com/warranty						